

Operating Guide

AB-QM 4.0 Flexo / 73693710

AB-QM 4.0 Flexo, DN 15-20 (80 mm)



MAINTENANCE
FREE



-10 ... 95°C




PN 25





$\Delta p_{max} = 600kPa$
(6 bar)

Installation


Left-hand version

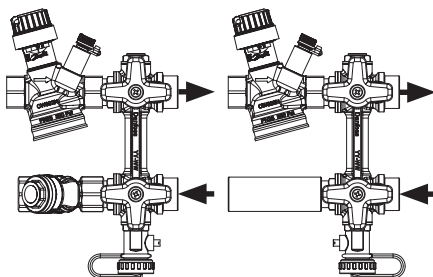

Right-hand version

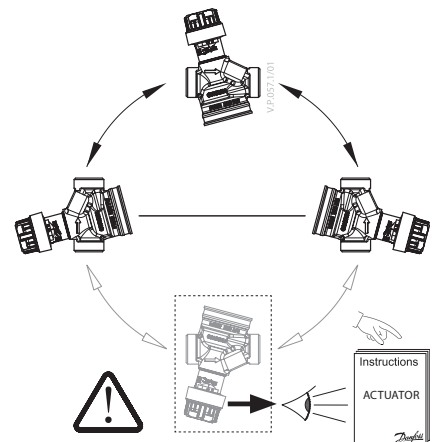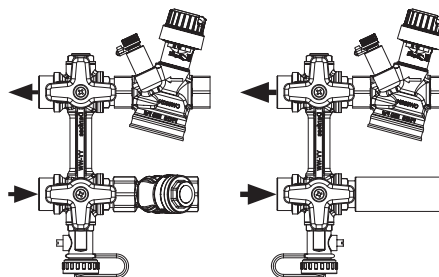


Installation

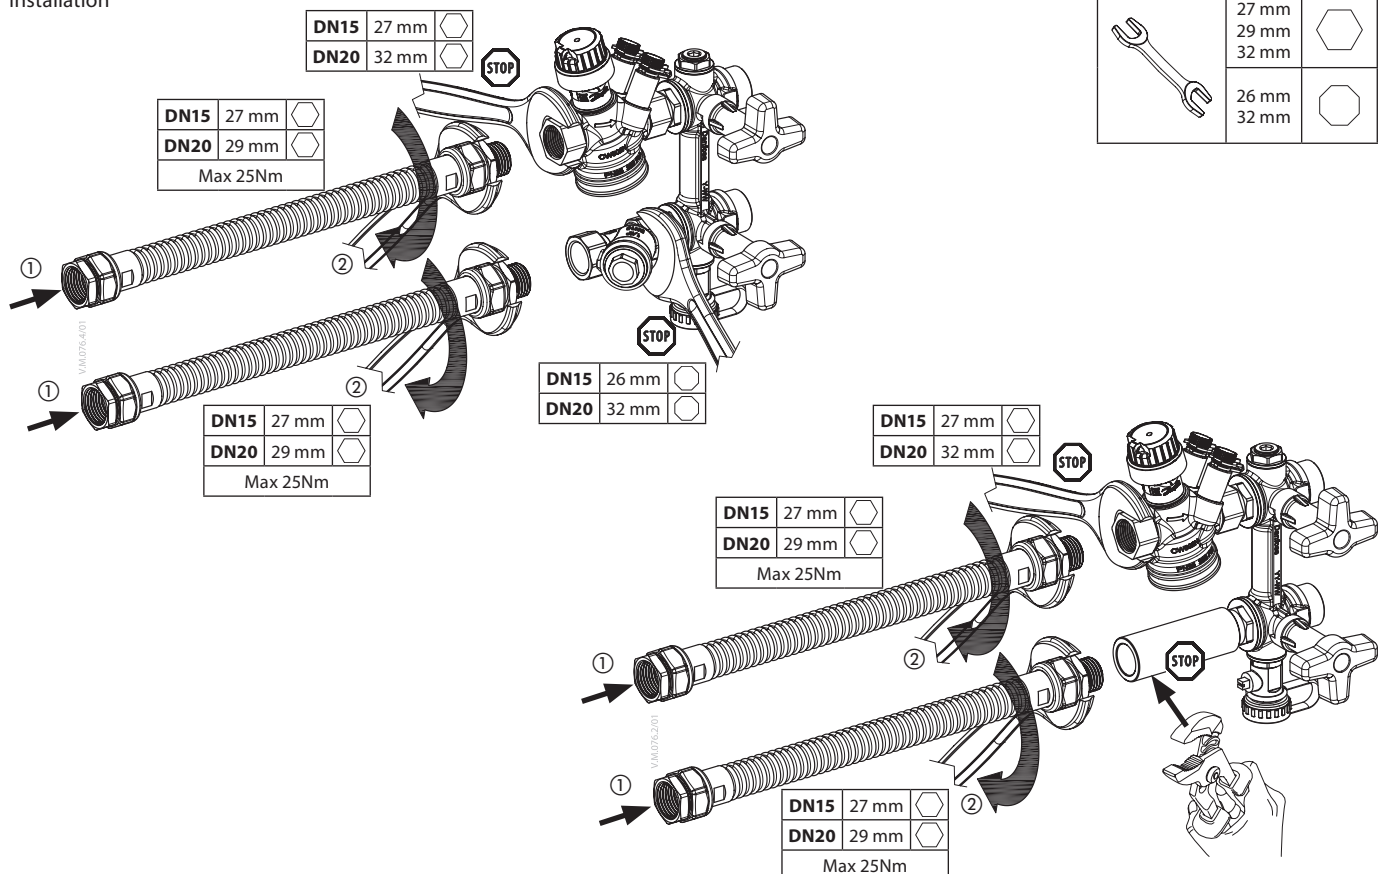

AB-QM 4.0 Flexo, DN 15-20

Insulation

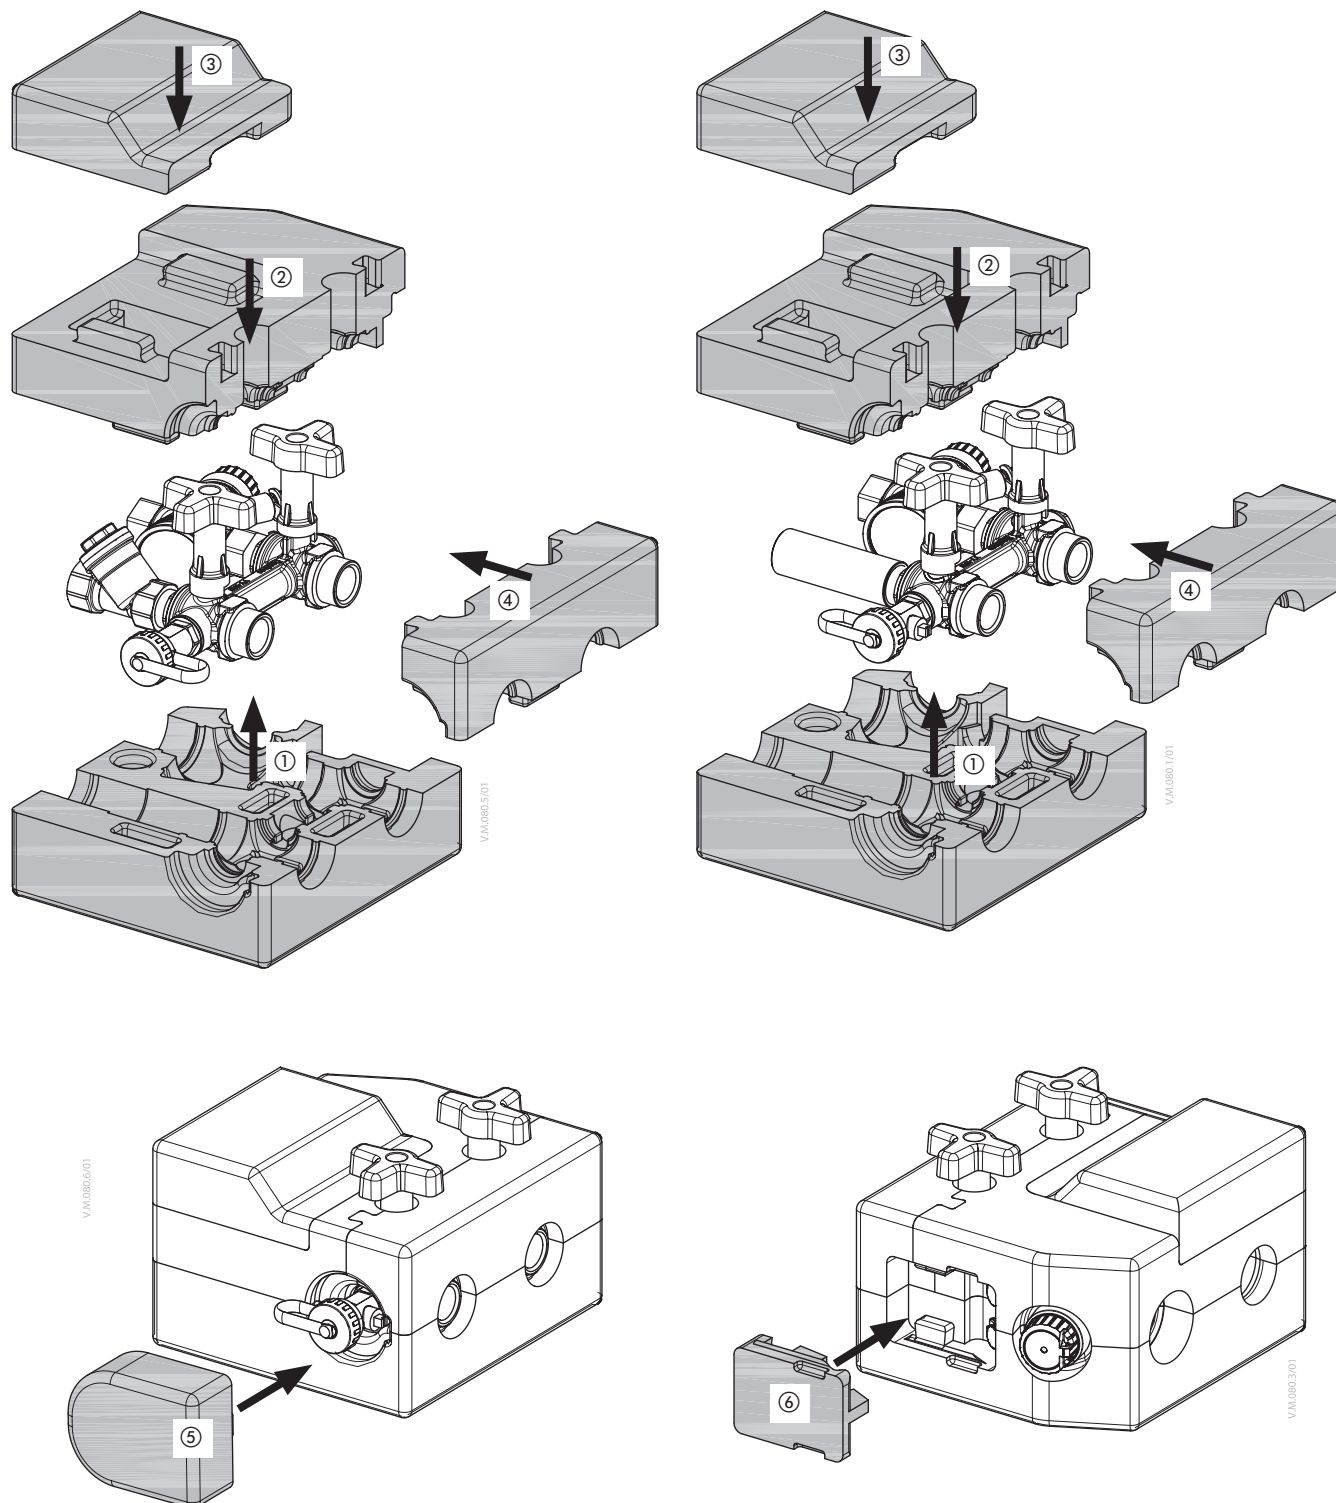


Note:

In cooling application depending on design condition and humidity, Flexo set shall be insulated fully with vapor tight insulation.


AB-QM 4.0 Flexo, DN 15-20

Setting


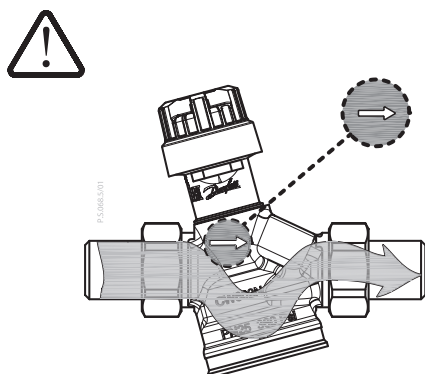


Shut-off


$\Delta p_{max} = 10 \text{ bar}$

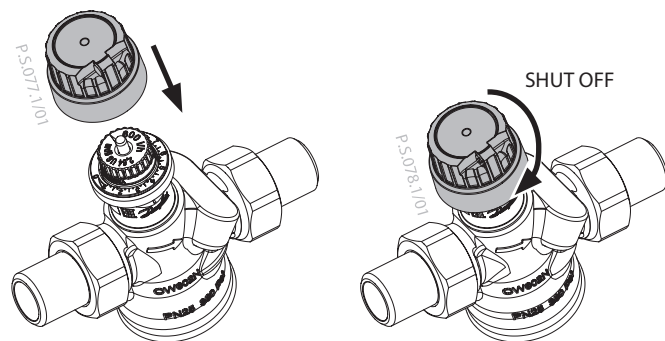

Setting

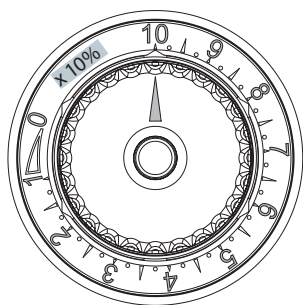 


Locking


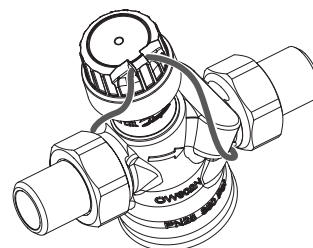


Filter cleaning

	16, 20 mm	
	27 mm	

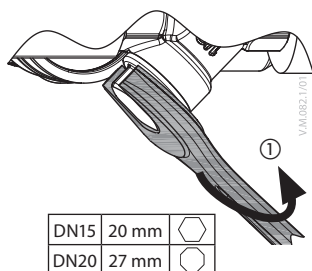


DN15	20 mm	
DN20	27 mm	

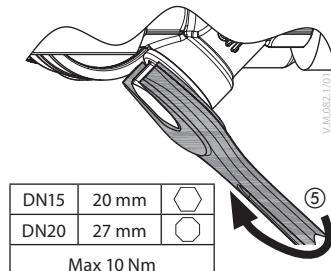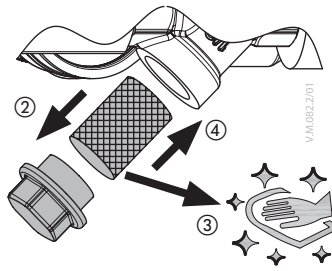


DN15	20 mm	
DN20	27 mm	
Max 10 Nm (till metal touches metal)		

AB-QM 4.0 Flexo, DN 15-20


Operation

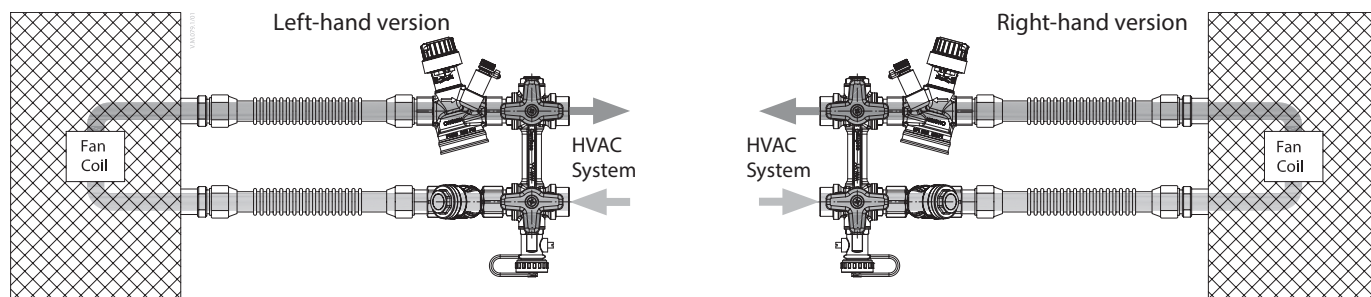

Shut-off/Maintenance

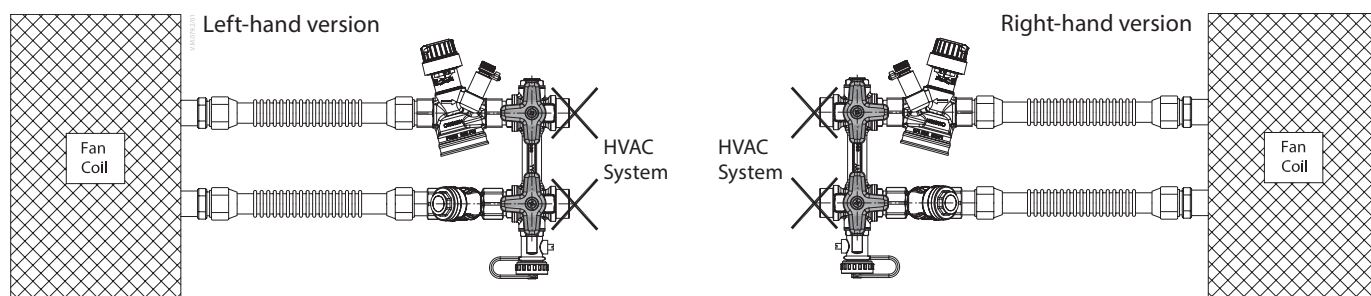


Flushing of main pipe

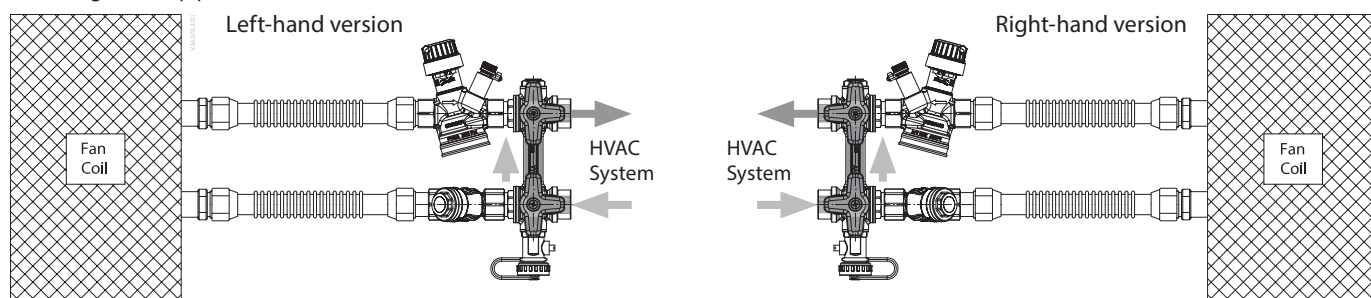


Backward flushing

For the right-hand version the function is mirrored.

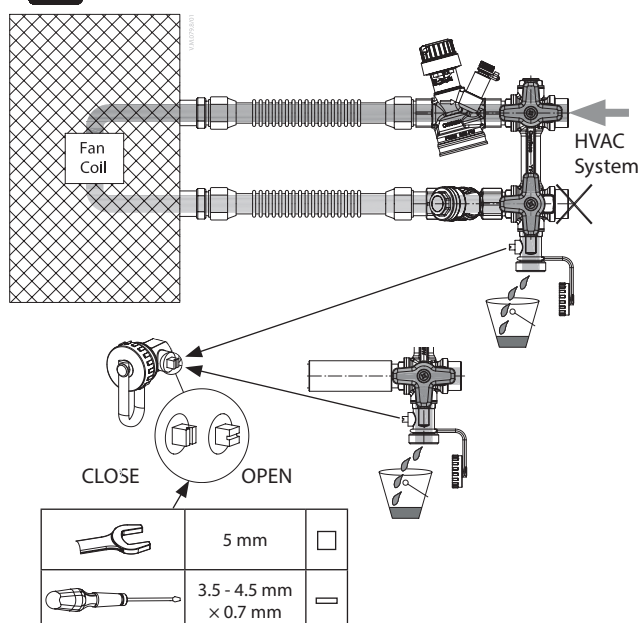

Forward flushing

For the right-hand version the function is mirrored.


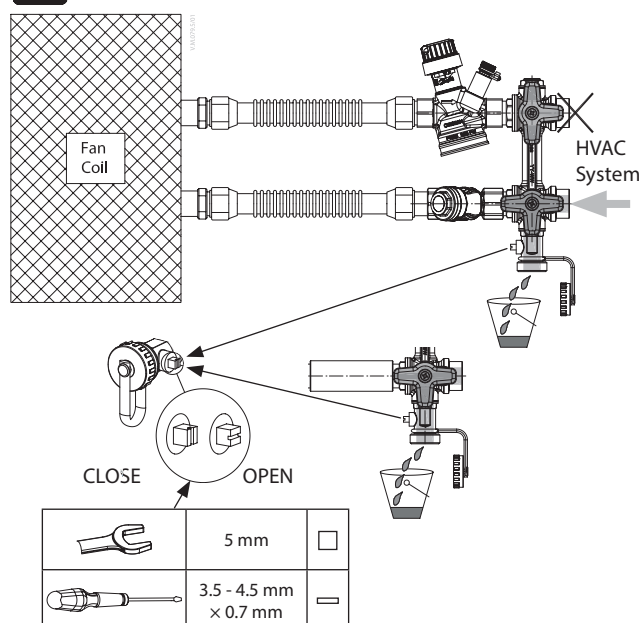


AB-QM 4.0 Flexo, DN 15-20

Sizing


Setting	DN15 LF			DN 15			DN 15 HF			DN 20			DN 20 HF		
	L/h	L/s	GPM	L/h	L/s	GPM	L/h	L/s	GPM	L/h	L/s	GPM	L/h	L/s	GPM
10%	20	0.006	0.09	65	0.018	0.29	120	0.033	0.53	110	0.03	0.48	190	0.053	0.84
15%	30	0.008	0.13	98	0.027	0.43	180	0.050	0.79	165	0.05	0.73	285	0.079	1.25
20%	40	0.011	0.18	130	0.036	0.57	240	0.067	1.06	220	0.06	0.97	380	0.106	1.67
25%	50	0.014	0.22	163	0.045	0.72	300	0.083	1.32	275	0.08	1.21	475	0.132	2.09
30%	60	0.017	0.26	195	0.054	0.86	360	0.100	1.59	330	0.09	1.45	570	0.158	2.51
35%	70	0.019	0.31	228	0.063	1.00	420	0.117	1.85	385	0.11	1.70	665	0.185	2.93
40%	80	0.022	0.35	260	0.072	1.14	480	0.133	2.11	440	0.12	1.94	760	0.211	3.35
45%	90	0.025	0.40	293	0.081	1.29	540	0.150	2.38	495	0.14	2.18	855	0.238	3.76
50%	100	0.028	0.44	325	0.090	1.43	600	0.167	2.64	550	0.15	2.42	950	0.264	4.18
55%	110	0.031	0.48	358	0.099	1.57	660	0.183	2.91	605	0.17	2.66	1045	0.290	4.60
60%	120	0.033	0.53	390	0.108	1.72	720	0.200	3.17	660	0.18	2.91	1140	0.317	5.02
65%	130	0.036	0.57	423	0.117	1.86	780	0.217	3.43	715	0.20	3.15	1235	0.343	5.44
70%	140	0.039	0.62	455	0.126	2.00	840	0.233	3.70	770	0.21	3.39	1330	0.370	5.86
75%	150	0.042	0.66	488	0.135	2.15	900	0.250	3.96	825	0.23	3.63	1425	0.396	6.27
80%	160	0.044	0.70	520	0.144	2.29	960	0.267	4.23	880	0.24	3.87	1520	0.422	6.69
85%	170	0.047	0.75	553	0.154	2.43	1020	0.283	4.49	935	0.26	4.12	1615	0.449	7.11
90%	180	0.050	0.79	585	0.163	2.58	1080	0.300	4.76	990	0.28	4.36	1710	0.475	7.53
95%	190	0.053	0.84	618	0.172	2.72	1140	0.317	5.02	1045	0.29	4.60	1805	0.502	7.95
100%	200	0.056	0.88	650	0.181	2.86	1200	0.333	5.28	1100	0.31	4.84	1900	0.528	8.37

Measurements

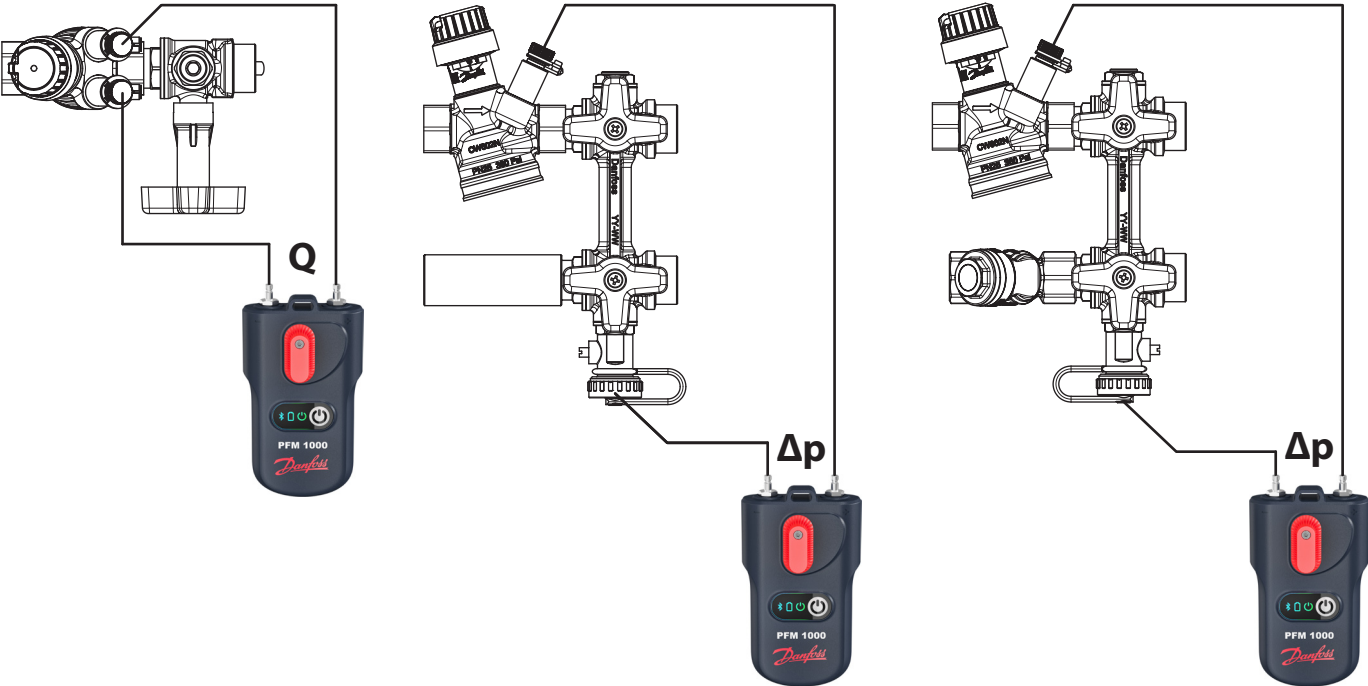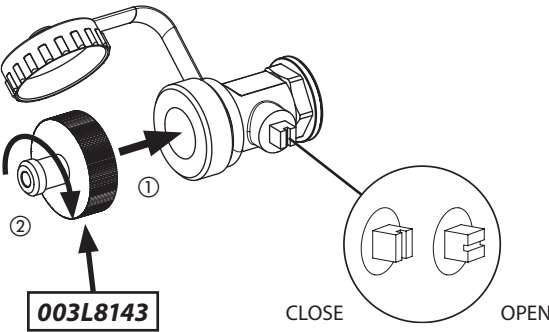


AB-QM 4.0 Flexo, DN 15-20

Dimensions

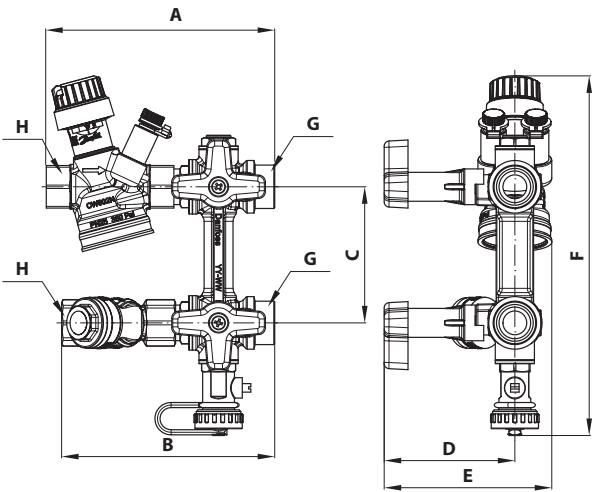


	DN15LF	DN15	DN15HF	DN20	DN20HF
A	134.5			144	
B	125			138	
C	80			80	
D	77			77	
E	98.5			102	
F	211			213	
G	Internal G $\frac{1}{2}$ "			Internal G $\frac{3}{4}$ "	
H	Internal Rp $\frac{1}{2}$ "			Internal Rp $\frac{3}{4}$ "	

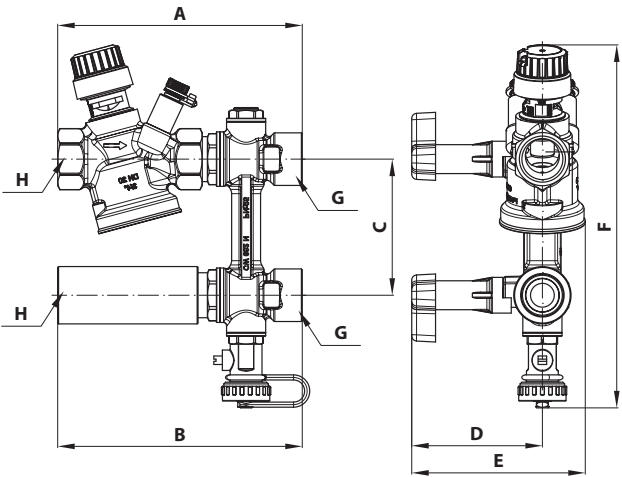

	DN15LF	DN15	DN15HF	DN20	DN20HF
A	134.5			144	
B	134.5			144	
C	80			80	
D	77			77	
E	98.5			102	
F	211			213	
G	Internal G $\frac{1}{2}$ "			Internal G $\frac{3}{4}$ "	
H	Internal Rp $\frac{1}{2}$ "			Internal Rp $\frac{3}{4}$ "	


AB-QM 4.0 Flexo, DN 15-20

Dimensions

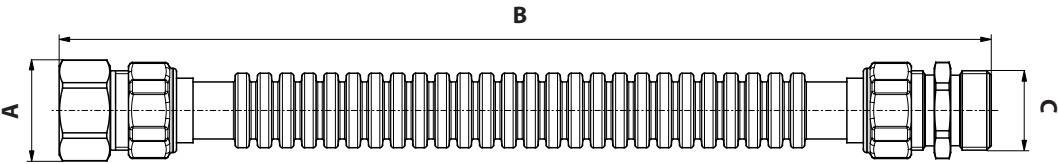

	A	B*	C
DN15	Internal G1/2" (ISO228/1)	298	External G1/2" (ISO 228/1)
DN20	Internal G3/4" (ISO228/1)	310	External G3/4" (ISO 228/1)

* The length of the flexible pipes might deviate +20 or -10mm.

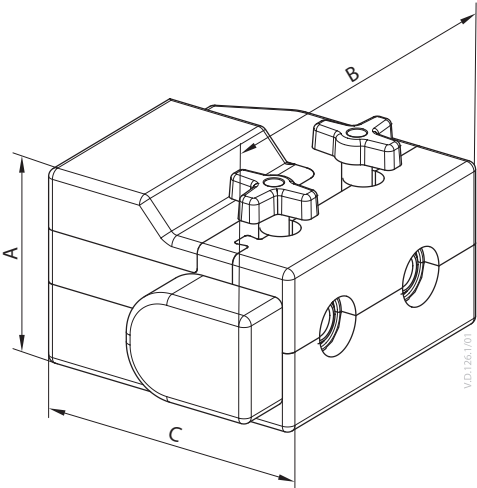

	A	B	C
DN15	95	215	160
DN20	120	220	167



AB-QM 4.0 Flexo, DN 15-20

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.