
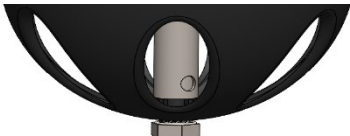
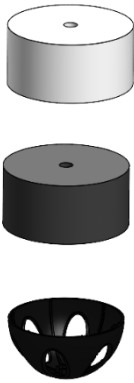


Changing the filters in Uponor Stormix rainwater filter unit

The yearly interval how often the filters in Uponor Stormix rainwater filter unit need changing depends on the chamber location, the amount of water and the number of particles contained in the treated water.

Both filters are changed at least once a year.

<ol style="list-style-type: none"> 1. Lift the filter unit out from the housing unit. 	
<ol style="list-style-type: none"> 2. Unscrew the filter unit bottom locking bolt and washer. <p>Remove the filter unit bottom.</p>	
<ol style="list-style-type: none"> 3. Remove both filters. 4. Put in new filters in the same order: finer filter on top, coarse filter below. 5. Insert and tighten the locking bolt and washer in filter unit bottom. 6. Lower the filter unit back in the housing unit. 	
<ol style="list-style-type: none"> 7. Dispose of the dirty filters in energy recycling. 	