


SHARKY 775 Ultrasonic Compact Energy Meter

Installation and User Guide

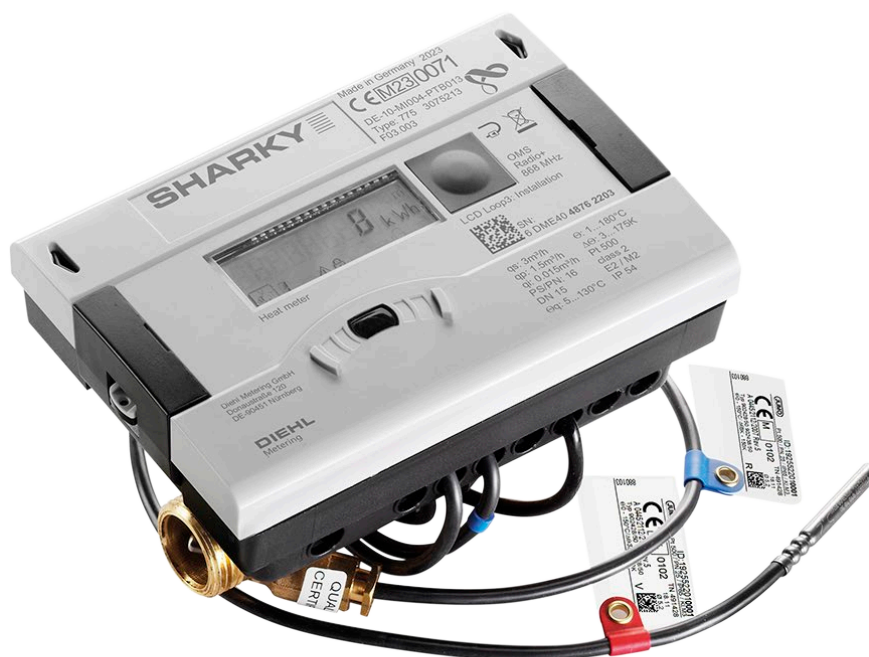

for software version F03-00 3

Contents

Contents.....	2
1 General information.....	6
1.1 About this Installation and User Guide.....	6
1.1.1 Target groups.....	6
1.1.2 Subject to change, validity.....	6
1.1.3 Completeness.....	6
1.1.4 Storage location.....	6
1.1.5 Warning signs in this manual.....	6
1.1.6 Symbols.....	7
1.2 Marking.....	7
1.2.1 CE marking.....	7
1.2.2 EU Declaration of Conformity.....	7
1.3 Copyright.....	7
2 Safety.....	8
2.1 Intended use.....	8
2.1.1 Misuse.....	8
2.2 Basic safety instructions.....	8
2.2.1 Product safety.....	8
2.2.2 Obligations of operator.....	8
2.2.3 Obligations of trained personnel/user.....	9
2.3 Specific hazards.....	9
3 Product description.....	10
3.1 Structure.....	10
3.2 Scope of delivery.....	10
3.3 Labelling.....	11
3.4 Functional description.....	11
3.5 Power supply.....	12
3.5.1 Battery.....	12
3.5.2 Overview of the measuring rates.....	13
3.5.3 Mains unit.....	13
3.6 Calculator interfaces.....	14
3.6.1 Communication modules.....	15
M-Bus module.....	15
Communication via radio.....	15

RS-232 module	16
RS-485 module	16
L-Bus module	16
Modbus RTU	16
LonWorks	16
LoRa WAN	16
NB-IoT	16
3.6.2 Function modules.....	16
Pulse output module.....	16
Pulse input module.....	16
Module IN-OUT	16
Analogue module	17
3.7 Tariff function.....	17
4 Technical data	21
4.1 Dimensions / Weight.....	21
4.2 General data.....	25
4.3 Power supply	25
4.4 Calculator interfaces.....	25
4.4.1 Communication modules	25
M-Bus.....	25
Communication via integrated radio.....	26
RS-232	26
RS-485	26
L-Bus.....	27
Modbus RTU	27
LonWorks	28
LoRa WAN	28
NB-IoT	29
4.4.2 Function modules	29
Pulse input module.....	29
Pulse output module.....	30
Module IN-OUT (Pulse-in and -output)	31
Analogue output module	32
4.4.3 Test output	33
5 Transport, storage.....	34
5.1 Unpacking the energy meter.....	34

5.2	Transporting the energy meters.....	34
5.3	Storage of energy meter	34
6	Installation.....	35
6.1	Installing the energy meter.....	36
6.1.1	Installing the flow sensor.....	37
6.1.2	Flow/return setting (optional ex works).....	38
6.1.3	Installing the calculator	40
6.1.4	Connecting temperature sensor	42
6.1.5	Fitting the temperature sensor	44
	Installation in a pocket	45
6.2	Installing extension modules	46
6.2.1	Display of the slot configuration.....	49
6.3	Connecting modules.....	50
6.3.1	Connecting communication modules	50
	M-Bus module.....	50
	RS-232 module	50
	RS-485 module	50
	L-bus module.....	51
	Modbus RTU	51
	LonWorks.....	51
6.3.2	Connecting function modules.....	52
	Pulse input module.....	52
	Pulse output module.....	52
	Combined pulse input and output module	52
	Analogue output module	52
6.4	Connect 230 V / 24 V mains voltage	53
6.5	Programming the energy meter	53
7	Taking into operation	54
8	Operation	55
8.1	Display	55
8.2	Operation of counter	55
8.3	Display indications (default settings)	57
9	Maintenance and repair	67
10	Testing.....	67
11	Removal.....	67
11.1	Disposal of energy meter.....	67

12	Error analysis.....	68
13	Declaration of Conformity	69

1 General information

1.1 About this Installation and User Guide

This Installation and User Guide refers exclusively to the SHARKY 775 ultrasonic energy meter and is part of the product. It describes how to use this product safely for the intended purpose throughout the product life cycle.

1.1.1 Target groups

Operators

The operator must ensure that personnel using the energy meter read and observe the instructions given in this guide and all necessary associated documents, particularly the safety instructions and warning signs.

Trained personnel/users

Trained personnel must read, observe and follow the instructions given in this guide and the necessary associated documents, particularly the safety instructions and warning signs.

1.1.2 Subject to change, validity

The information contained in this Installation and User Guide is valid at the time of release of this version. The version number and release date of this Installation and User Guide are shown on the back of the document. Changes to this guide are possible at any time.

1.1.3 Completeness

This Installation and User Guide is only complete in conjunction with the relevant associated documents for the respective application.

1.1.4 Storage location




 

This Installation and User Guide and all relevant associated documents for the respective application must be readily available and accessible at all times in the vicinity of the meter or the overriding system.

1.1.5 Warning signs in this manual

The warning levels indicated by the warning signs are explained below.

Signal word	Danger level	Consequences of non-compliance
DANGER	Direct threat of danger	Death or serious injury
WARNING	Possible imminent danger	Death or serious injury
CAUTION	Possible dangerous situation	Slight injuries

The symbols used in this Installation and User Guide are explained below.

Symbol	Meaning
	This symbol is the safety sign. All measures marked with the safety sign must be observed. It is used on warning signs.
	This symbol is a safety sign indicating that the ESD (electrostatic discharge) regulations must be observed. It is used on warning signs. Do not touch electronic component on PCB or modules. Do not touch connectors or connected wires, which are connected to the meter.
	This symbol draws attention to information.
	This symbol indicates a requirement that must be fulfilled before taking action.
1. , 2. , ...	These numbers indicate the steps in a sequence of numbered actions.
	This symbol shows the instructions for avoiding danger in a warning instruction or an individual step.

1.2 Marking

1.2.1 CE marking

This product bears the CE marking, the metrology marking and the identification number of the notified body. See Section 3.

1.2.2 EU Declaration of Conformity

The ultrasonic energy meter complies with the directives and standards for MID-approved meters as stated in the EC declaration of conformity. The EC declaration of conformity contains the number of the EC type examination certificate. A copy of the EC declaration of conformity can be found at the end of this document.

1.3 Copyright

© 2015 Diehl Metering GmbH
All rights reserved

No part of this Installation and User Guide may be reproduced in any form whatsoever (printing, photocopying or other process) or processed, reproduced or distributed by means of electronic systems without our written consent. Claims for damages will be asserted in the event of contravention.

Subject to change.

2 Safety



NOTE

Observe the following requirements before carrying out work of any work.

2.1 Intended use

The ultrasonic energy meter is used for recording all billing data for local and district heating and cooling.

2.1.1 Misuse

Operation of the meter outside the specified operating and environmental conditions is not permitted.

2.2 Basic safety instructions

2.2.1 Product safety

The ultrasonic energy meter is produced to the latest state of the art and the recognized safety standards, but the possibility of danger to the user, adverse effects on the meter itself or on other property cannot be ruled out.

- Use the meter only for the intended purpose in a fault-free condition with due regard for safety and hazards and in compliance with this guide.
- Keep this guide and all associated documents in a complete and legible state and accessible to personnel at all times.
- Avoid any kind of work that endangers personnel, persons not involved or third parties.
- In addition to the complete documentation, observe all legal or other safety and accident prevention regulations and the applicable standards and directives in the respective country of operation.

2.2.2 Obligations of operator

Safe working

The operator of the system is responsible for ensuring that the energy meter is used only for the intended purpose with due regard for safety and hazards and in compliance with this Installation and User Guide.

He must ensure and monitor compliance with the following:

- that the meter is used for the intended purpose
- legal and other safety and accident prevention regulations
- applicable standards and directives of the country of operation

He must provide safety equipment.

Personnel qualifications

The operator must ensure that personnel working on the energy meter have read and understood this Installation and User Guide and all associated documents, particularly safety and repair instructions, before commencing work.

All work must be performed only by technically trained personnel:

- installation and repair work
- work on the electronic circuits

Safety equipment

Safety equipment must be provided if required.

- E.g. install stop valves before and after the meter to simplify removal and installation.

Warranty

- Obtain the manufacturer's approval before carrying out modifications, repair work or changes during the warranty period.
- Use only genuine parts or parts approved by the manufacturer.

2.2.3 Obligations of trained personnel/user

- Observe all instructions in the Installation and User Guide and on the meter that are relevant to handling the meter.
- Use safety equipment if necessary.
- Always disconnect the energy meter from the electrical supply before carrying out repair work.

2.3 Specific hazards



DANGER

Do not touch live parts during installation work.

Risk of serious injuries or death!

⇒ The meter installation is only to be performed by an installation and/or electrical contractor.

⇒ Personnel must be trained in the installation of medium-voltage electrical Equipment (up to 1000V).



WARNING

Electrostatic discharge.

Risk of damage to energy meter and particularly electronic components, for which no liability is accepted!

⇒ Observe the relevant ESD (electrostatic discharge) regulations.



CAUTION

Electric and magnetic fields.

Risk of interference with electronic components in the energy meter!

⇒ Do not install the meter or the input/output cables near heavy electrical loads or their cables.

⇒ Maintain the exact separation. This depends on the magnitude of the voltage and current of these loads.

⇒ Consult a suitable expert in the event of doubt.

3 Product description

3.1 Structure

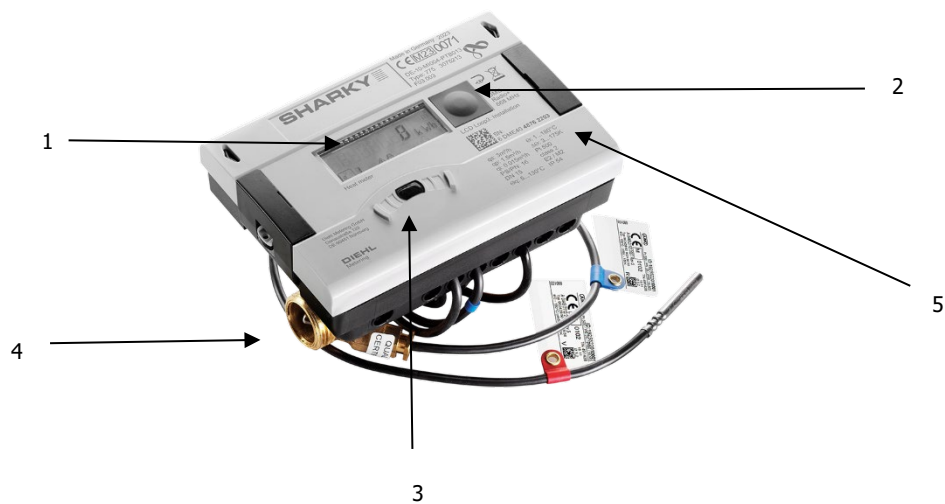


Fig. A Design of ultrasonic energy meter

- 1 LC display
- 2 Push button
- 3 Optical ZVEI interface
- 4 Flow sensor
- 5 Laser labelling

3.2 Scope of delivery

The scope of delivery for the standard version includes the following:

- Ultrasonic energy meter
- Wall mounting set incl. fixing material
- Installation Guide
- Installation kit for temperature sensors

3.3 Labelling

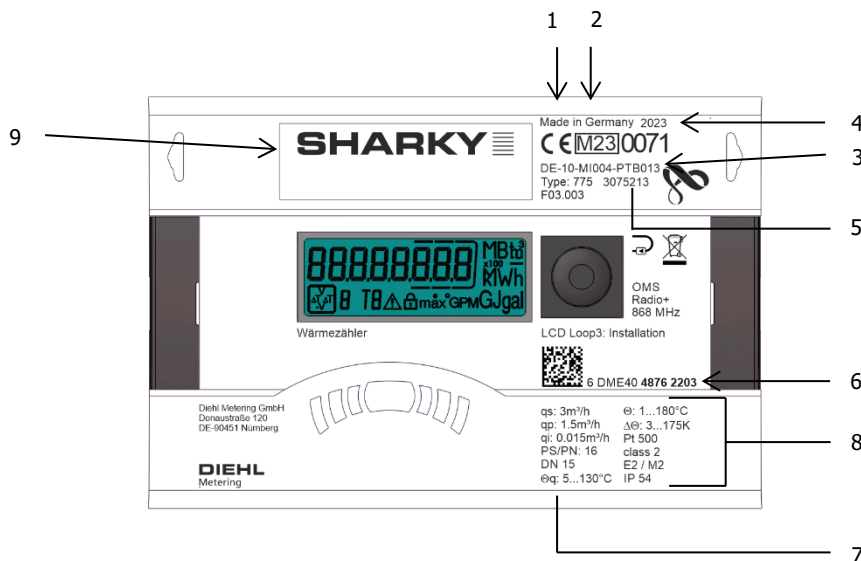


Fig. B Labelling (example)

The meter is labelled using a laser.

- 1 Conformity mark
- 2 Year of declaration of conformity
- 3 EU type examination certificate number
- 4 Year of manufacture
- 5 Meter article number
- 6 Meter serial number
- 7 Flow sensor data
- 8 Calculator data
- 9 Product name

3.4 Functional description

The ultrasonic energy meter is a static compact meter and a fully electronic measuring instrument based on the ultrasonic metering principle. It is equipped with a data memory that enables comparison of the previous months' readings with the current readings. The data read by the calculator are shown in the display. The display is provided with various windows as loop functions that can be called up in succession to display the system information assigned to each window (e.g. energy amounts, water amounts, current temperatures, maximum values).


The energy meter has 6 display loops: main loop, accounting date loop, info loop, pulse input loop, tariff loop and monthly value loop. The individual loops are described in Section 8 "Operation". Some windows in a loop and whole display loops can be deactivated separately to make the window structure clearer.

Various display windows comprise up to seven displays that change at intervals of 2 – 4 s. The loops in the display are numbered from 1 to 6 to help the user find his way around quickly. The main loop is programmed with the current data as default setting, e.g. for energy, volume, flow rate and other parameters. It is not possible to change the order of the available data.


3.5 Power supply

Possible power supplies:

- A cell, 3.6 V DC lithium battery, with a lifetime of 11 years (standard version, with radio)
- D cell, 3.6 V DC lithium battery, with a lifetime of 16 years
- Mains unit 24 V AC
- Mains unit 230 V AC

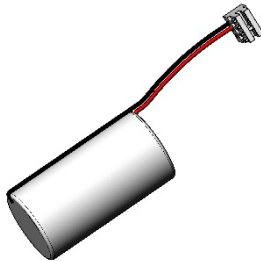

1

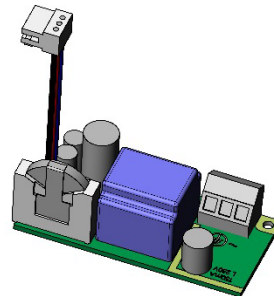

2

Fig. C. Power supplies

- 1 A or D cell, 3.6 V DC lithium battery
- 2 Mains unit 24 V AC / 230 V AC

The various power supplies can be changed in the field.



NOTE

The meter switches automatically to power save mode if the button is not pressed for approx. 4 minutes. The display is also switched off in this case, but can be switched on again by pressing the button. Communication is maintained, e.g. over the M-Bus or the optical interface. The meter does not switch to power save mode if an error exists. The error is shown in the display as an error code. Never connect between two phases if a mains unit is used, as this would destroy the mains unit. The protective safety cover must be installed at all times. The cable is to be fused at max. 6 A and protected against manipulation. Used batteries must be disposed of at suitable collection points.

3.5.1 Battery

A 3.6 V DC lithium battery is fitted in the standard version. The battery is not to be charged or short-circuited. Ambient temperatures below 40 °C extend the life of the battery.



DANGER

⇒ There is a risk of explosion if the battery is replaced with the wrong type of battery.

3.5.2 Overview of the measuring rates

The following table shows the lifetime of the batteries depending on the standard measuring rates. Customer versions can differ from the standard measuring rates in the measuring rate and battery lifetime.

DM Standard (average ambient temp.:22°C)	Battery- Lifetime [anno]	Radio Interval [s]	Measuring rate (independent from radio) [s]	
	A-cell ¹		Flow	Temperature
no radio/ no module	12	-	1	16
868MHz	11	180		
434MHz	11	180		
Quick mode	6,5	12		
	D-cell¹			
No radio/ no module	16	-	1	4
868MHz	16	12		
434MHz	16	12		
	Mains			
no radio/ no module	no limit	-	8Hz	2
868MHz	no limit	12		
434MHz	no limit	12		

¹: for "moderate" ambient temperature. Temperature above 35°C reduces the lifetime. The temperature at storage of the meter in a warehouse shall be less than 35°C.

The calculation of flow and volume is will be done every 2 seconds After that the display is updated every 2 seconds.

To save energy the meter tries to do all its operations like metering, calculation and updating the display at the same time.

3.5.3 Mains unit

The mains unit indicates to the meter if mains voltage is present. If the mains unit fails, the back-up battery (CR2032) in the mains unit provides the power supply for up to 1 year. This back-up battery can be replaced if necessary. The LCD readings (on pressing button) and the date and time are still updated, but none of the measuring functions work, incl. the flow rate measurement. Communication still functions over the optional M-Bus, RS485 and RS232 modules or the optical interface, but this reduces the life of the back-up battery. The integrated radio function is switched off in the event of mains failure.

3.6 Calculator interfaces

The meter is equipped as standard with a ZVEI optical interface. This is located on the calculator below the display (Fig. D). This interface can be use for communication with the meter (using the IZAR@mobile software) and for checking the meter. Communication uses the M-Bus protocol, for which the Bluetooth IZAR OH BT opto head is suitable.

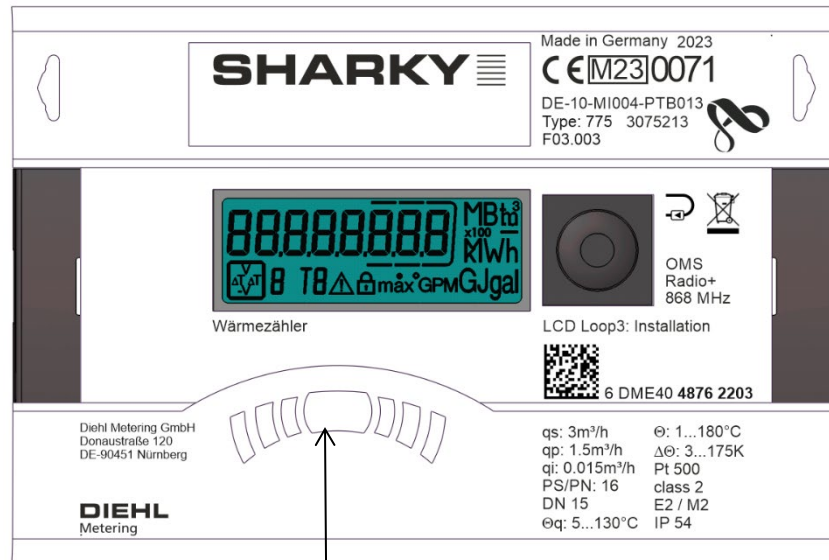


Fig. D Front of the calculator
1 optical ZVEI interface

1

The energy meter has two slots for extension modules, slot 1 and slot 2 (Fig. E). In addition, the meter can be equipped with an integrated radio.

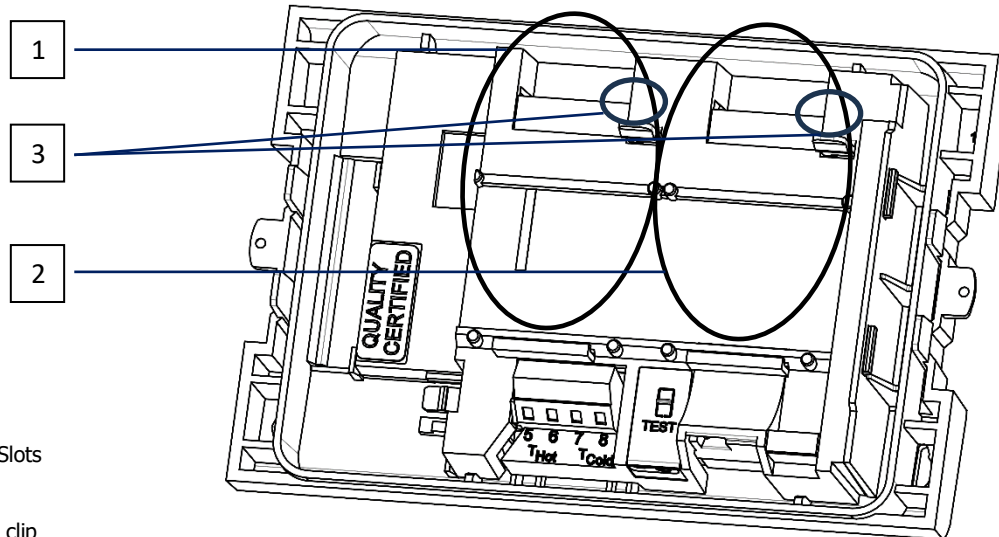


Fig. E Slots
1 Slot 1
2 Slot 2
3 Fixing clip



NOTE

The meter recognizes automatically which module is inserted. This is shown in the display loop 3 based on a module code. See also point 6.2.1



NOTE

If other external devices are connected to the meter, these must be of the safety extra-low voltage (SELV) type and comply with EN 60950-1.

3.6.1 Communication modules

The meter supports three communication channels over the same or different interfaces. If the meter has an integrated radio, it is possible to use additionally the two slots for modules. The protocol is different for each of the two modules and is present ex works, but can be programmed to customer-specific requirements using the IZAR@Mobile2 software. The content of the radio protocol is the same as the content from slot 2. Each module has its own primary address. Both modules have one secondary address, which is set to the serial number ex works. The meter is equipped with automatic baud rate detection.

M-Bus module

The M-Bus communication module is a serial interface for communication with external devices (M-Bus repeater), e.g. IZAR CENTER. It is possible to connect more meters to one M-Bus master.

Communication via radio

The integrated radio function is an interface for communication of predefined protocols with Diehl Metering radio receivers. The communication protocol is preset, but can be defined to a customer-specific protocol using the IZAR@Mobile2 software. By default, the internal radio is disabled. When the meter detects a flow, the integrated radio is enabled. If the meter detects a flow without an interruption at least 3 hours, the radio stays on, otherwise it is switched off again.

RS-232 module

The RS-232 communication module is a serial interface for communication with external devices, e.g. a PC. The transmission speed is 300 or 2400 baud. A special data cable is required for connecting this module to the PC. (Order no.: 087H0121)

RS-485 module

The RS-485 communication module is a serial interface for communication with external devices, e.g. a PC. It can only communicate at a transmission speed of 2400 baud.

L-Bus module

The L-Bus communication module is a serial interface for communication with an external radio module, in which the M-Bus protocol is transmitted. It can be used for example if the radio range of the internal radio is not enough.

Modbus RTU

The Modbus RTU module ensures a simple integration from SHARKY heat meters in to the Modbus network systems using EIA-485 channel.

LonWorks

The LonWorks module is designed for SHARKY heat meters for data transmission in the LonWorks network using the TP / FT-10 physical channel.

LoRa WAN

The LoRa WAN module is a cost-effective meter connection module. It uses a very energy-efficient scheme to deliver meter data to a receiving (application) server via a LoRaWAN® network. The meter data is transmitted securely, using the LoRaWAN® end-to-end security scheme.

NB-IoT

The NB-IoT module is a cost-effective meter connection module. It uses a very energy-efficient scheme to deliver meter data to a receiving application server via an NB-IoT cellular network (LPWAN). The NB-IoT module combines long range (cellular LPWAN) with energy efficient transmission.

3.6.2 Function modules

Pulse output module

This module contains connections for two pulse outputs, which can be programmed as desired using the IZAR@Mobile2 software. The energy pulse output is marked as "01 - \perp " on the module and "Out1" in the display. The volume output is marked as "02 - \perp " on the module and "Out2" in the display.

Pulse input module

This module has 2 pulse inputs for connecting 2 additional pulse meters, such as water meters, gas meters or electricity meters. The possibility of programming the pulse value using the IZAR@Mobile2 software enables volume or energy values to be displayed and transmitted remotely over a suitable communication module. Initial meter counts can also be parametrized for these two pulse inputs.

Module IN-OUT

The Module IN-OUT is equipped with two pulse inputs and a pulse output, which can be programmed as desired using the IZAR@Mobile2 software. Pulse input 1 is marked "I1 - \perp " on the module and "IN1" in the display, pulse input 2 "I2 - \perp " on the module and "IN2" in the display. The pulse output is marked "O1 - \perp " on the module and "Out1" in the display. The pulse output on this module is not galvanic isolated.

Analogue module

The analogue module has the size of 2 standard modules and has two 4-20 mA outputs. If an analogue module is mounted in the meter, no other module can be installed. The internal radio is still working. The connection cable between the main pcb board and the module has to be installed on port 1 (left slot). By default, the two analogue outputs are not programmed, the values can be programmed with the IZAR@Mobile2 software (standard version).

3.7 Tariff function

The meter has five flexible tariff function.

A tariff is a cumulating register, which starts accumulation after its defined function is valid.

The following tariff unit are selectable:


- Energy
- Volume
- time

Different thresholds are definable for each tariff independently:

Tariff counter 1

Type	gate	LCD text
<input type="checkbox"/> T	<input type="checkbox"/> T < Threshold	tz000y
<input type="checkbox"/> T	<input type="checkbox"/> T >= Threshold	tz010y
T _R	T _R < Threshold	tz001y
T _R	T _R >= Threshold	tz011y
T _F	T _F < Threshold	tz002y
T _F	T _F >= Threshold	tz012y
	fix enable	tz003y
P	Power < Threshold	tz004y
P	Power >= Threshold	tz014y
F	Flow rate < Threshold	tz005y
F	Flow rate >= Threshold	tz015y
C	Based on time	tz006y
E	External controlled	tz007y

Example: $\Delta t \geq 30K$ (tz010y) – accumulate power

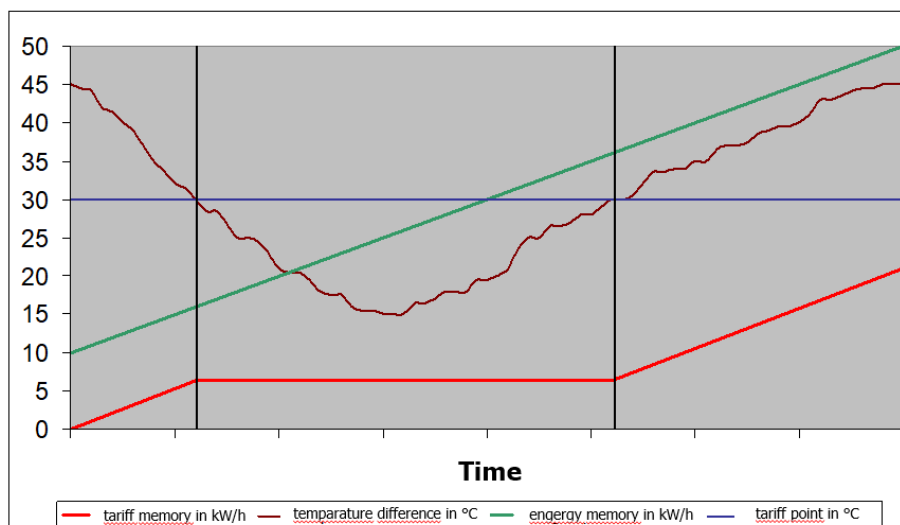

The meter accumulate the power to the defined tariff register when the function is active

Tariff counter 2.4

Type	Gate	LCD text
ΔT	$\Delta T < \text{Threshold}$	tz000y
ΔT	$\Delta T \geq \text{Threshold}$	tz010y
T_R	$T_R < \text{Threshold}$	tz001y
T_R	$T_R \geq \text{Threshold}$	tz011y
T_F	$T_F < \text{Threshold}$	tz002y
T_F	$T_F \geq \text{Threshold}$	tz012y
	fix enable	tz003y
P	Power < Threshold	tz004y
P	Power \geq Threshold	tz014y
F	Flow rate < Threshold	tz005y
F	Flow rate \geq Threshold	tz015y
C	Based on time	tz006y
E	External controlled	tz007y
ΔT	$\Delta T < \text{Threshold}$ AND NOT Tariff x-1 enable	tz100y
ΔT	$\Delta T \geq \text{Threshold}$ AND NOT Tariff x-1 enable	tz110y
T_R	$T_R < \text{Threshold}$ AND NOT Tariff x-1 enable	tz101y
T_R	$T_R \geq \text{Threshold}$ AND NOT Tariff x-1 enable	tz111y
T_F	$T_F < \text{Threshold}$ AND NOT Tariff x-1 enable	tz102y
T_F	$T_F \geq \text{Threshold}$ AND NOT Tariff x-1 enable	tz112y
	fix enable AND NOT Tariff x-1 enable	tz103y
P	Power < Threshold AND NOT Tariff x-1 enable	tz104y
P	Power \geq Threshold AND NOT Tariff x-1 enable	tz114y
F	Flow rate < Threshold AND NOT Tariff x-1 enable	tz105y
F	Flow rate \geq Threshold AND NOT Tariff x-1 enable	tz115y
C	Based on time AND NOT Tariff x-1 enable	tz106y
E	External controlled AND NOT Tariff x-1 enable	tz107y

The meter is supporting different count modes.


This function helps to switch on/off the tariff count only, when the meter measuring results are in a certain quadrant:

Counting	dT	Flow rate
Energy quadrant 1	+	+
Energy quadrant 4	-	+
Energy quadrant 2	+	-
Energy quadrant 3	-	-
Flow energy quadrant 1	+	+
Flow energy quadrant 4	-	+
Return energy quadrant 1	+	+
Return energy quadrant 4	-	+
Time counting		
Volume counting +		+
Volume counting -		-

The meter supports three different function for Bonus/Malus.

Start tariff accumulation energy, volume or time (named part in the following)

Arrow	Explanation	accumulation
blue	Total amount (for energy or value)	Total amount of Energy, volume
red	part between threshold and T-return	Tariff part of Energy, volume, time
green	part between T_return and threshold	Tariff part of Energy, volume, time
yellow	total amount when the T_return is below threshold	Tariff part of Energy, volume, time

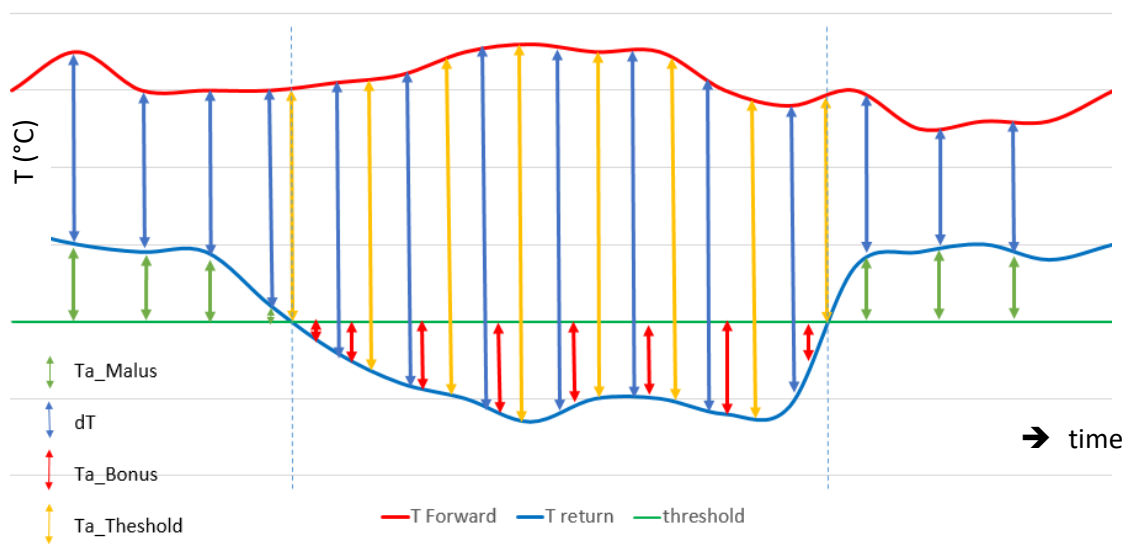

Formula for e.g. energy:

$$T_{\text{total}} = K' * m^3 * (T_f - T_r)$$

$$T_{a_Malus} = K' * m^3 * (T_r - T_{\text{threshold}})$$

$$T_{a_Bonus} = K' * m^3 * (T_{\text{threshold}} - T_r)$$

$$T_{a_threshold} = K' * m^3 * (T_f - T_r) \text{ when } T_r \text{ is lower than threshold}$$

K' - depends on the flow sensor installation - inlet or outlet

4 Technical data

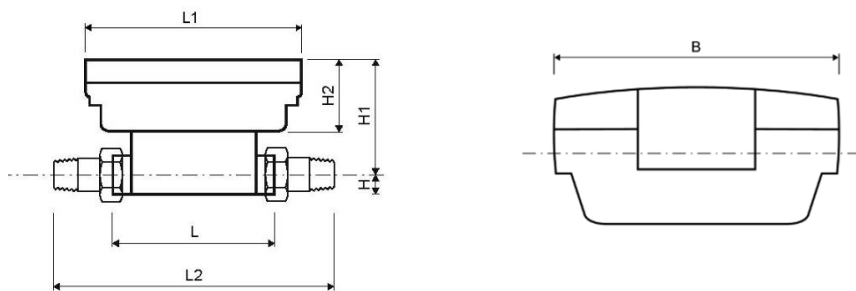


Fig. F

4.1 Dimensions / Weight

Nominal flow rate	q _n	m ³ /h	0.6	0.6	0.6	1.5	1.5	1.5	2.5
Nominal diameter	DN	mm	15	20	20	15	20	20	20
Overall length	L	mm	110	130	190	110	130	190	130
Overall length with coupling	L2	mm	190	230	290	190	230	290	230
Length of calculator	L1	mm	150	150	150	150	150	150	150
Height	H	mm	14.5	18	18	14.5	18	18	18
Height	H1	mm	82	84	84	82	84	84	84
Height of calculator	H2	mm	54	54	54	54	54	54	54
Width of calculator	B	mm	100	100	100	100	100	100	100
Connection thread on meter	Inch	G3/4B	G1B	G1B	G1B	G3/4B	G1B	G1B	G1B
Connection thread of coupling	Inch	R1/2	R3/4	R3/4	R3/4	R1/2	R3/4	R3/4	R3/4
Weight ¹	kg		0.76	0.85	0.96	0.76	0.85	0.96	0.85

Nominal flow rate	q _n	m ³ /h	2.5	3.5	3.5	3.5	3.5	3.5	6
Nominal diameter	DN	mm	20	25	25	25	32	32	25
Overall length	L	mm	190	135	150	260	150	260	135
Overall length with coupling	L2	mm	290	255	270	380	270	380	255
Length of calculator	L1	mm	150	150	150	150	150	150	150
Height	H	mm	18	23	23	23	23	23	23
Height	H1	mm	84	88.5	88.5	88.5	88.5	88.5	88.5
Height of calculator	H2	mm	54	54	54	54	54	54	54
Width of calculator	B	mm	100	100	100	100	100	100	100
Connection thread on meter	Inch	G1B	G1 1/4B	G1 1/4B	G1 1/4B	G1 1/4B	G1 1/2B	G1 1/2B	G1 1/4B
Connection thread of coupling	Inch	R3/4	R1	R1	R1	R1	R1 1/4	R1 1/4	R1
Weight ¹	kg		0.96	1.03	1.08	1.5	1.23	1.5	1.03

Nominal flow rate	q _n	m ³ /h	6	6	6	6	6	10
Nominal diameter	DN	mm	25	25	32	32	40	40
Overall length	L	mm	150	260	150	260	150	200
Overall length with coupling	L2	mm	270	380	270	380	-	340
Length of calculator	L1	mm	150	150	150	150	150	150
Height	H	mm	23	23	23	23	23	33
Height	H1	mm	88.5	88.5	88.5	88.5	88.5	94
Height of calculator	H2	mm	54	54	54	54	54	54
Width of calculator	B	mm	100	100	100	100	100	100
Connection thread on meter	Inch	G1 1/4B	G1 1/4B	G1 1/2B	G1 1/2B	G2B	G2B	
Connection thread of coupling	Inch	R1	R1	R1 1/4	R1 1/4	R1 1/2	R1 1/2	
Weight ¹	kg		1.08	1.5	1.23	1.5	1.52	2.9

Nominal flow rate	q _n	m ³ /h	10	15	25	40	60	100
Nominal diameter	DN	mm	40	50	65	80	100	100
Overall length	L	mm	300	270	300	300	360	360
Overall length with coupling	L2	mm	440	-	-	-	-	-
Length of calculator	L1	mm	150	-	-	-	-	-
Height	H	mm	33	-	-	-	-	-
Height	H1	mm	94	-	-	-	-	-
Height of calculator	H2	mm	54	-	-	-	-	-
Width of calculator	B	mm	100	-	-	-	-	-
Connection thread on meter		Inch	G2B	-	-	-	-	-
Connection thread of coupling		Inch	R1½	-	-	-	-	-
Weight ¹		kg	3.1	-	-	-	-	-

¹ Meter with A-cell, without modules, 1.4 m cable length, 1.9 m cable length of temperature sensor Ø 5.2 mm

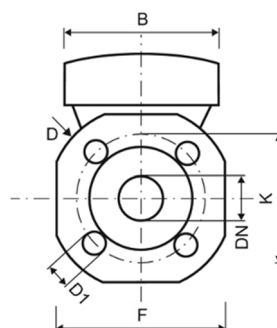
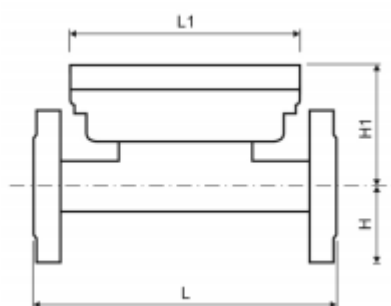


Fig. G Flange dimensions

Nominal flow rate	q _n	m ³ /h	0.6	0.6	0.6	1.5	1.5	1.5	2.5
Nominal diameter	DN	mm	15	20	20	15	20	20	20
Overall length	L	mm	110	130	190	110	130	190	130
Length of calculator	L1	mm	-	-	150	-	-	150	-
Height	H	mm	-	-	47.5	-	-	47.5	-
Height	H1	mm	-	-	84	-	-	84	-
Height of calculator	H2	mm	-	-	54	-	-	54	-
Width of calculator	B	mm	-	-	100	-	-	100	-
Flange dimension	F	mm	-	-	95	-	-	95	-
Flange diameter	D	mm	-	-	105	-	-	105	-
Hole circle diameter	K	mm	-	-	75	-	-	75	-
Screw hole diameter	D1	mm	-	-	14	-	-	14	-
Number of screw holes		pcs	-	-	4	-	-	4	-
Weight brass body ²		kg	-	-	2.75	-	-	2.75	-
Weight spheroidal cast iron body ²		kg	-	-	-	-	-	-	-
Nominal flow rate	q _n	m ³ /h	2.5	3.5	3.5	3.5	3.5	3.5	6
Nominal diameter	DN	mm	20	25	25	25	32	32	25
Overall length	L	mm	190	135	150	260	150	260	135
Length of calculator	L1	mm	150	-	-	150	-	150	-
Height	H	mm	47.5	-	-	50	-	62.5	-
Height	H1	mm	84	-	-	88.5	-	88.5	-
Height of calculator	H2	mm	54	-	-	54	-	54	-
Width of calculator	B	mm	100	-	-	100	-	100	-
Flange dimension	F	mm	95	-	-	100	-	125	-
Flange diameter	D	mm	105	-	-	114	-	139	-
Hole circle diameter	K	mm	75	-	-	85	-	100	-
Screw hole diameter	D1	mm	14	-	-	14	-	18	-
Number of screw holes		pcs	4	-	-	4	-	4	-
Weight brass body ²		kg	2.75	-	-	3.5	-	4.8	-
Weight spheroidal cast iron body ²		kg	-	-	-	-	-	-	-

Nominal flow rate	q _n	m ³ /h	6	6	6	6	6	10
Nominal diameter	DN	mm	25	25	32	32	40	40
Overall length	L	mm	150	260	150	260	150	200
Length of calculator	L1	mm	-	150	-	150	-	-
Height	H	mm	-	50	-	62.5	-	-
Height	H1	mm	-	88.5	-	88.5	-	-
Height of calculator	H2	mm	-	54	-	54	-	-
Width of calculator	B	mm	-	100	-	100	-	-
Flange dimension	F	mm	-	100	-	125	-	-
Flange diameter	D	mm	-	114	-	139	-	-
Hole circle diameter	K	mm	-	85	-	100	-	-
Screw hole diameter	D1	mm	-	14	-	18	-	-
Number of screw holes		pcs	-	4	-	4	-	-
Weight brass body ²		kg	-	3.5	-	4.8	-	-
Weight spheroidal cast iron body ²		kg	-	-	-	-	-	-

Nominal flow rate	q _n	m ³ /h	10	15	25	40	60	100
Nominal diameter	DN	mm	40	50	65	80	100	100
Overall length	L	mm	300	270	300	300	360	360
Length of calculator	L1	mm	150	150	150	150	150	150
Height	H	mm	69	73.5	85	92.5	108	108
Height	H1	mm	94	99	106.5	114	119	119
Height of calculator	H2	mm	54	54	54	54	54	54
Width of calculator	B	mm	100	100	100	100	100	100
Flange dimension	F	mm	138	147	170	185	216	216
Flange diameter	D	mm	148	163	184	200	235	235
Hole circle diameter	K	mm	110	125	145	160	180 ¹ /190	180 ¹ /190
Screw hole diameter	D1	mm	18	18	18	19	19 ¹ /22	19 ¹ /22
Number of screw holes		pcs	4	4	8	8	8	8
Weight brass body ²		kg	6.4	7.0	8.9	10.9	16.4	16.4
Weight spheroidal cast iron body ²		kg	-	5.9	7.7	9.6	15.2	15.2

¹ Value for PN 16 housing

² Meter with A-cell, without modules, 1.4 m cable length, 1.9 m cable length of temperature sensor Ø 5.2 mm

4.2 General data

- Nominal size q_p : 0.6 – 100 m³/h
- Ambient temperature: 5 ... 55 °C
- Medium temperature: 5 ... 130 °C (150 °C), depending on variant and nominal size

4.3 Power supply

External power supply

230 V AC module / 24 V AC module (Fig. C, item 2, page 12)

- Terminals suitable for wires up to 2.5 mm²
- Electrical isolation
- Frequency 50 Hz
- Power consumption 0.12 VA \pm 10 %
- Soldered fuse (50mA)
- The cable is to be fused at max. 6A and protected against manipulation.

4.4 Calculator interfaces

4.4.1 Communication modules

M-Bus

- M-Bus module to EN 1434-3 standard
- 2 wire terminal with marking "24" and "25"
- Terminals suitable for a cable with 2 wires of 2.5 mm²
- Electrical isolation
- Polarity reversal protection
- Maximum voltage: 50 V DC
- Current drawn: one M-Bus load
- Primary or secondary addressing
- Baud rate 300 or 2400 baud (automatic baud rate detection)
- Protocol: M-Bus
- max. reading interval

at battery supply A-Cell: every 3 minutes*

at battery supply D-Cell: each minutes*

at mains supply: unlimited

* If the master reads more, then the meter recognizes and doesn't allow it. The display will show then the error code E - 5. In addition, this error code will be shown in the header of the M- Bus telegram (to frequent reading via M-Bus).

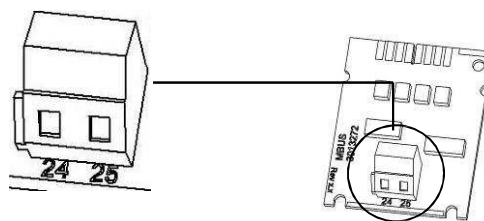


Fig. H M-Bus module

Communication via integrated radio

The integrated radio communication has the following specification:

- Unidirectional transmission
- The module sends every 8 ... 256 s (variable, depending on protocol length)
- Typical radio transmitting power 10 dBm \pm 10 mW
- Data actuality: online – no time delay between recording readings and data transfer
- The integrated radio module always accesses the current meter counts
- Transmission frequency: 868 MHz or 434 MHz
- Various Diehl Metering receivers are available for receiving the protocol (e.g. Bluetooth, GPRS, LAN, ...)
- Encrypted protocol: Open Metering
- Reading modes: Walk-By, Drive-By, Fixed Network

For difficult radio installations (shielding) and to short distance to the radio receiver also the module set external radio can be used.

RS-232

- Terminals suitable for a cable with 3 wires of 2.5 mm²
- Protocol: M-Bus
- Transmission speed: 300 or 2400 baud

The module contains a 3 wire terminal with marking 62 (Dat), 63 (Req) and 64 (GND). A special adapter cable (code no. 087H0121) is required. The coloured wires are to be connected as shown:

62 = brown
63 = White
64 = green

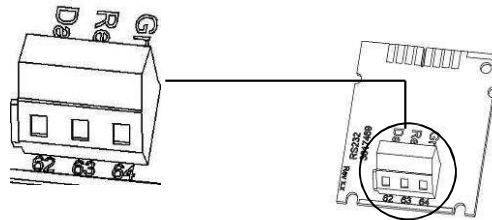


Fig. I RS-232 module

RS-485

- Terminals suitable for a cable with 4 wires of 2.5 mm²
- Protocol: M-Bus
- Transmission speed: 2400 baud

The module contains a 4 wire terminal with marking "D+", "D-", "+12V" and "-12V". The module requires an external power supply of 12 V DC \pm 5 V.

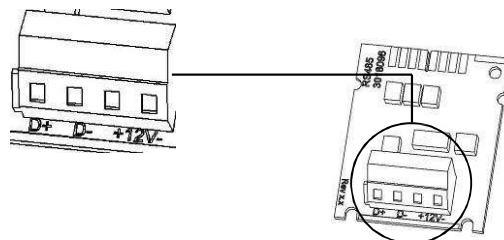


Fig. J RS-485 module

L-Bus

- 2 wire terminal with marking "Dat" and "┴"
- Terminals suitable for a cable with 2 wires of 2.5 mm²
- Maximum voltage: 50 V DC
- Primary or secondary addressing
- Baud rate 300 or 2400 baud (automatic baud rate detection)
- Protocol: M-Bus
- in combination with the external radio module IZAR RADIO EXTERN L-Bus RS232 the meter sends the data every 3 minutes via the L-Bus module to the radio module
- once the module is connected the meter recognizes that and disables the integrated radio permanent! (as long as the L-Bus module is mounted)
- the L-Bus module should be mounted on slot 2, to make sure that the same protocol will be transferred as it is done via the integrated radio.

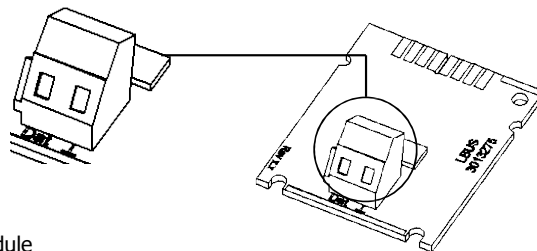


Fig. K L-Bus module

Modbus RTU

- Polarity independent: Connections 60 and 61
- External power supply: 12-24 V AC/DC
- Energy consumption: max. 150 mW
- Connection 90 (not inverted, +)
- Connection 91 (inverted, -)
- Communication protocol: Modbus RTU
- Channel EIA-485 (electrically isolated)
- Flexible data format: Standard 9600 bits/s, 8N1, Modbus slave ID-1

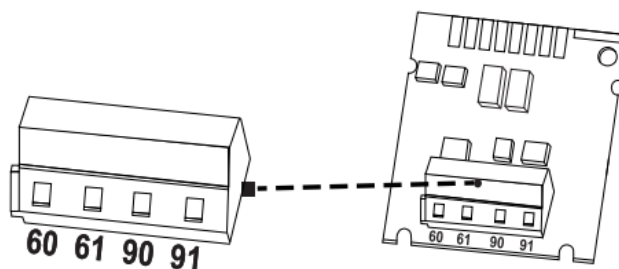


Fig. L Modbus RTU Modul

LonWorks

- Polarity independent: Connections 60 and 61
- External power supply: 12-24 V AC/DC
- Energy consumption: max. 150 mW
- Polarity independent: Connections 96 (A) and 97 (B)
- Channel TP/FT-10
- Baud rate: 78 kbit/s
- Data format: Differential Manchester encoding

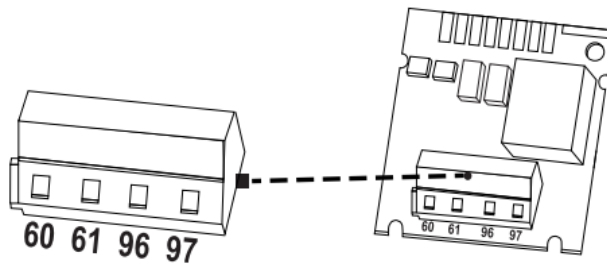


Fig. M LonWorks module

LoRa WAN

- Join EUI:
 - Internal antenna: 94193A0303000001
 - External antenna: 94193A0304000001
- Activation type - There are two different activation types for LoRa WAN
 - Over-the-air activation (OTAA) and
 - Activation through personalisation (ABP).
 - We strongly recommend the use of OTAA
- EcoMode is activated by default to ensure a battery life of 11 years. A change to a fixed data rate can reduce the service life.

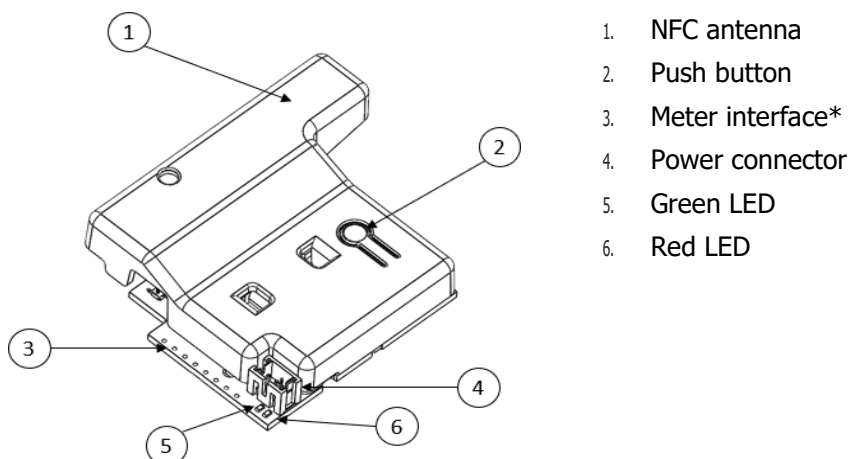


Fig. N LoRa WAN module

NB-IoT

- Mobile radio:
 - 3GPP Release 14 (NB2)
 - Volume 20, 8, 3 (NB-IoT)
 - Transmit power Maximum 23.0 dBm
 - Receiver sensitivity -135 dBm
 - Antenna max gain 4 dBi
- Connection of an external antenna possible
- Transport of meter data via MQTTSN
- LwM2M protocol for device management and remote configuration
- NFC interface for configuration

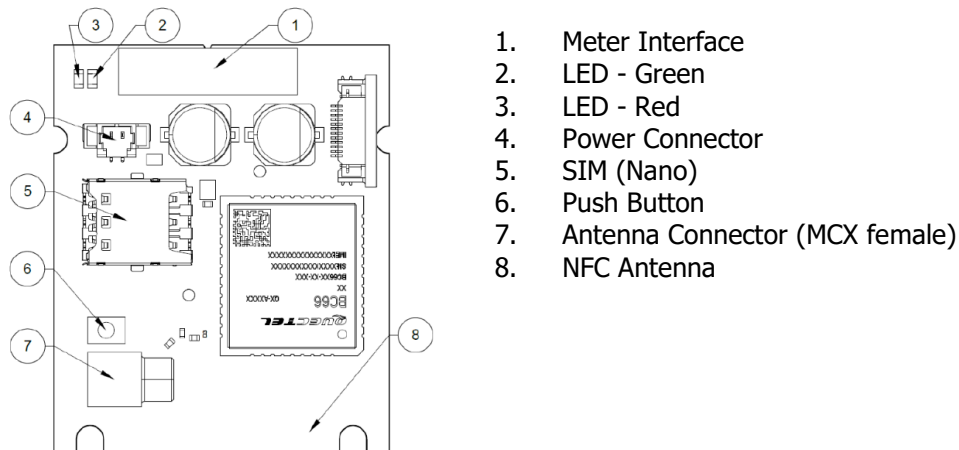


Fig. O NB-IoT module

4.4.2 Function modules

Pulse input module

- The two pulse inputs can be programmed independently of each other with values of 1, 2.5, 10, 25, 100, 250, 1000 or 2500 litres per pulse.
- Possible units are all the energy units available in the meter, such as kWh/pulse and GJ/pulse, but also volume units like l/pulse, m³/pulse or no units.
- The input frequency is in the range 0 – 8 Hz, min. pulse duration 10 ms
- Input resistance 2.2 MΩ
- Terminal voltage 3 V DC
- Cable length ≤ 10 m

Pulse input 1 is marked "I1 - \perp " on the module and "IN1" in the display, pulse input 2 "I2 - \perp " on the module and "IN2" in the display.

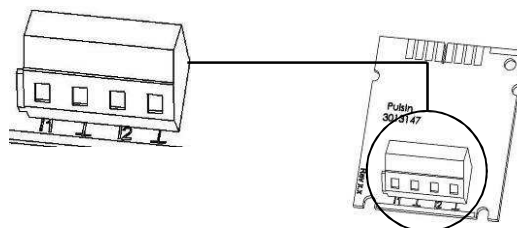


Fig. N Pulse input module

Pulse output module

- External power supply necessary $V_{CC} = 3 - 30 \text{ V DC}$
- Output current $\leq 20 \text{ mA}$ with a residual voltage of $\leq 0.5 \text{ V}$
- Open collector (drain)
- The module consists of 2 programmable pulse outputs
- Output 1:
 - Frequency: $\leq 4 \text{ Hz}$
 - Pulse duration: $125 \text{ ms} \pm 10 \%$
 - Pulse break: $\geq 125 \text{ ms} - 10 \%$
- Output 2:
 - Frequency $\leq 100 \text{ Hz}$
 - Pulse duration/pulse break: $\sim 1:1$
- As a standard the output 1 will give an energy pulse, the output 2 will give a volume pulse (at heat meter or cooling meter)
- At a heat meter with cooling tariff the output 1 will give an heating energy impulse and the output 2 a cooling energy impulse (standard)
- The pulse value depends on the digits after the comma of the corresponding display unit. As a standard the value is always the last digit of the display.
- The volume pulse value is freely programmable
- Floating contact (electrically isolated)
- The lifetime of the battery which is mounted on the module is 12 years.

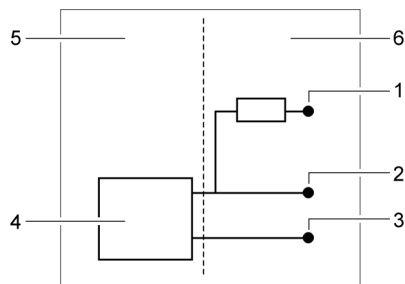


Fig. O Connection diagram for one pulse output

- 1 connection of the external power supply V_{CC}
- 2 Pulse output
- 3 GND
- 4 Pulse output module
- 5 Energy meter
- 6 External connection

To use the pulse output module an external power supply is necessary. Via a resistor the current has to be limited to max. 20mA. At point 2 in the diagram the pulse will be given.

The outputs are marked "01 - \perp " and "02 - \perp " on the terminal and "Out1" and "Out2" in the display.

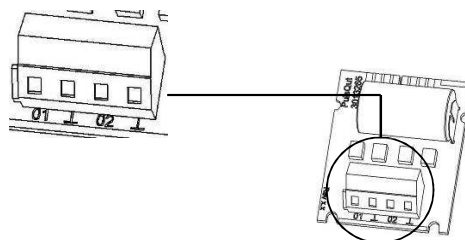


Fig. P Pulse output module

Module IN-OUT (Pulse-in and -output)

The module IN-OUT is equipped with 2 pulse inputs and 1 pulse output.

The pulse inputs have the following specification:

- The two pulse inputs can be programmed independently of each other with values of 1, 2.5, 10, 25, 100, 250, 1000 or 2500 litres per pulse.
- Possible units are all the energy units available in the meter, such as kWh/pulse and GJ/pulse, but also volume units like l/pulse, m³/pulse, or no units.
- The input frequency is in the range 0 – 8 Hz, min. pulse duration 10 ms
- Input resistance 2.2 MΩ
- Terminal voltage 3 V DC
- Cable length < 10 m

The pulse output has the following specification:

- External power supply V_{cc} = 3 – 30 V DC
- Output current ≤ 20 mA with a residual voltage of ≤ 0.5 V
- Open collector (drain)
- Output frequency ≤ 4 Hz
- Pulse duration: 125 ms ±10 %
- Pulse break: ≥ 125 ms -10 %
- Volume pulse value is programmable as desired (default: last digit in display)
- No floating contact (not galvanic isolated)

Pulse input 1 is marked "I1 - ⊥" on the module and "IN1" in the display, pulse input 2 "I2 - ⊥" on the module and "IN2" in the display (Fig. Q, item 1).

The pulse output is marked "O1 - ⊥" on the terminal and "Out1" in the display (Fig. Q, item 2).

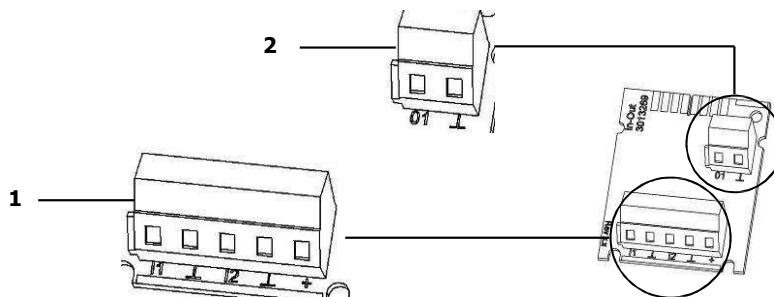


Fig. Q Module IN-OUT

- 1 Terminals for pulse inputs
- 2 Terminals for pulse output

Analogue output module

- 2 passive outputs
- External power supply: 10 ... 30 V DC
- Current loop 4 ... 20 mA
- where 4 mA = 0 value; 20 mA = programmed max. value. value
- Overload up to 20.5 mA, then residual current
- Errors are output at 3.5 mA or 22.6 mA (programmable)
- Output values: , flow rate, flow-return temperature, temperature difference
- Maximum cable length 10 m

An external supply voltage is required to operate the analogue output module. The outputs are labelled "1" or "2" on the terminal strip with the respective polarity "+" and "-".


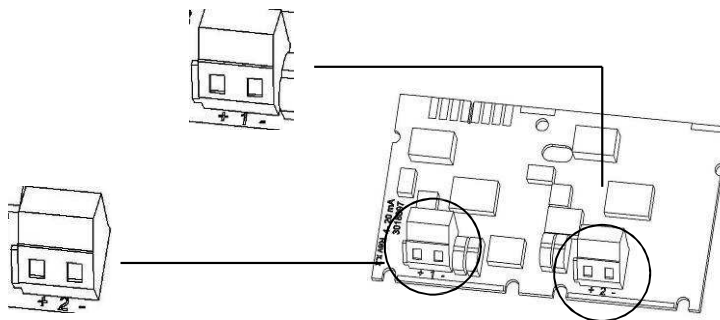


Fig. R Analogue module

Connection diagram:

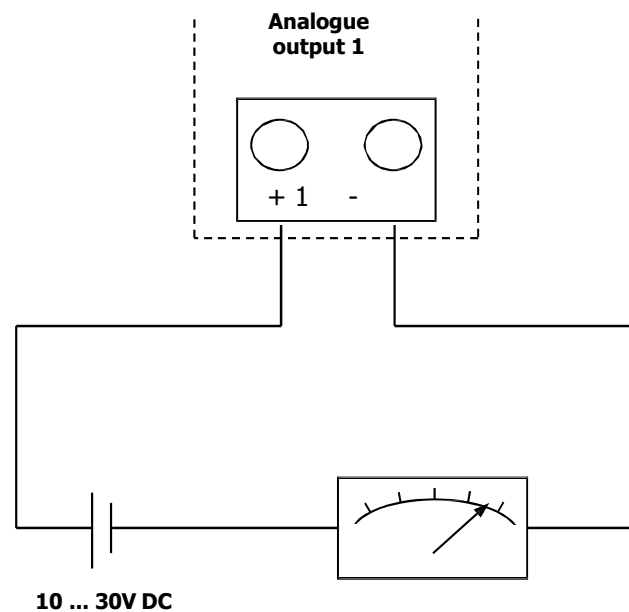

4.4.3 Test output

The test output located on the side of the main electronics assembly is for use by test centres (Fig.S)

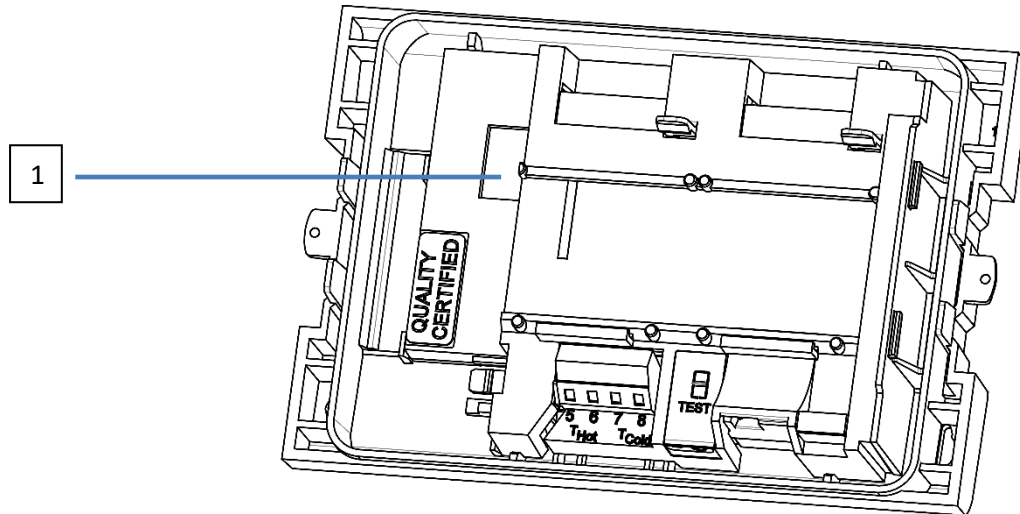


Fig. S Test output
1 connection for the test cable

Two special cables are required for testing:

1. Test cable for volume test pulses (Order. Nr 3024794)
2. Test cable for energy test pulses (Order. Nr 3024799)

Other specifications (pulse value, pulse duration/break, pulse frequency) can be obtained from the Inspection and Test Instruction.

5 Transport, storage

5.1 Unpacking the energy meter

Heat meters and cooling meters are measuring instruments and must be handled carefully. To protect against damage and soiling, they should not be removed from the packaging until shortly before installation.

5.2 Transporting the energy meters

The meter is only to be transported in its original packaging.

5.3 Storage of energy meter

- The meter must be stored in a dry place.
- Storage temperature -20 °C ... +60 °C (<35°C favours the battery service life)
- Relative ambient humidity < 93 %

6 Installation



NOTE

This installation guide is intended for trained personnel and does not contain any basic working steps.

The meter may only be installed in dry and frost-free areas in buildings.

Avoid sharp edges (thread, flange, measuring tube). Only install and remove the meter when the system is not under pressure.

Important! The seal on the meter (Fig. T) must not be damaged! A damaged seal immediately invalidates the factory warranty and the verification or declaration of conformity. The cables supplied with the meter must not be shortened or changed in any other way.

Live parts may be exposed when opening covers or removing parts. Connection points may also be live.

The regulations covering the use of energy meters and electrical installations must be observed!

All instructions listed in the installation guide for the meter must be observed. A cold leakage test by hydraulic pressure is to be carried out after installation.

The specified medium temperature is 5 ... 130 °C (150 °C). The temperature

range depends on variant and nominal size. The encapsulated variant is to be used if condensation is expected (cooling and heat meter with cooling tariff).

Only water without additives may be used as medium, according to AGFW leaflet

FW510 (**Exception:** Specifically programmed meter for medium Tyfocor LS). With a medium temperature above 90 °C or if the water temperature is lower than the ambient temperature, the calculator **must** be switched off.

The IZAR@Mobile2 software is used for reading/parametrization and can be downloaded from the webpage at www.diehl.com/metering/de/diehl-metering



DANGER

Do not touch live parts during installation work.

Risk of serious injuries or death!

⇒ The meter installation is only to be performed by an installation and/or electrical contractor.

⇒ Personnel must be trained in the installation of medium-voltage electrical equipment (up to 1000 V).



Frost on the counter must be avoided at all times.

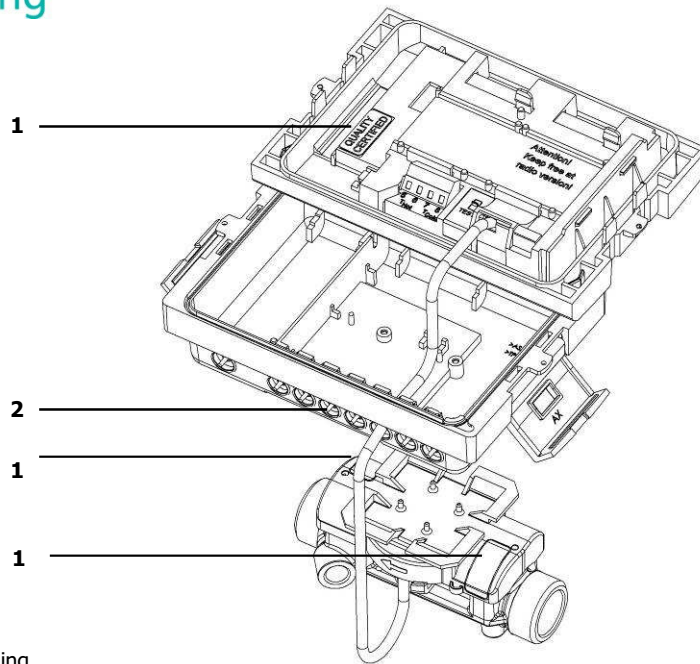


Fig. T Sealing
1 Sealing
2 Cable bushings

6.1 Installing the energy meter



CAUTION

If medium temperature is lower than ambient temperature!
Risk of damage to calculator due to condensation.
⇒ Use the sealed variant of the ultrasonic energy meter.
⇒ Remove calculator from the flow sensor (Fig. X) and install remotely.



NOTE

Install the meter in an accessible position for service and operating personnel.
It is recommended that stop valves be fitted before and after the meter to simplify removing the meter.

The following tasks are necessary for installing the energy meter:

1. Install the flow sensor, see Section 6.1.1
2. Install the calculator, see Section 6.1.2
3. Connect the temperature sensor, see Section 6.1.3
4. Install the temperature sensor, see Section 6.1.4

6.1.1 Installing the flow sensor



NOTE

The system must be thoroughly flushed before installing the flow sensor. We recommend installing a strainer upstream of the flow sensor or at another suitable point in the heating or cooling circuit. The undisturbed straight inlet length to the flow sensor may be 0 DN, as may the undisturbed straight outlet length at the outlet of the meter. For heating systems with a lack of temperature mixing or with temperature stratification, it is recommended that an inlet length of 3...10 DN be connected upstream of the meter.

Can be installed in both horizontal (fig. U, item 2) and vertical pipe sections (fig. U, item 1).

We also strongly recommend installing the flow sensor tilted (45°) in order to remove possible air bubbles from the circuit.

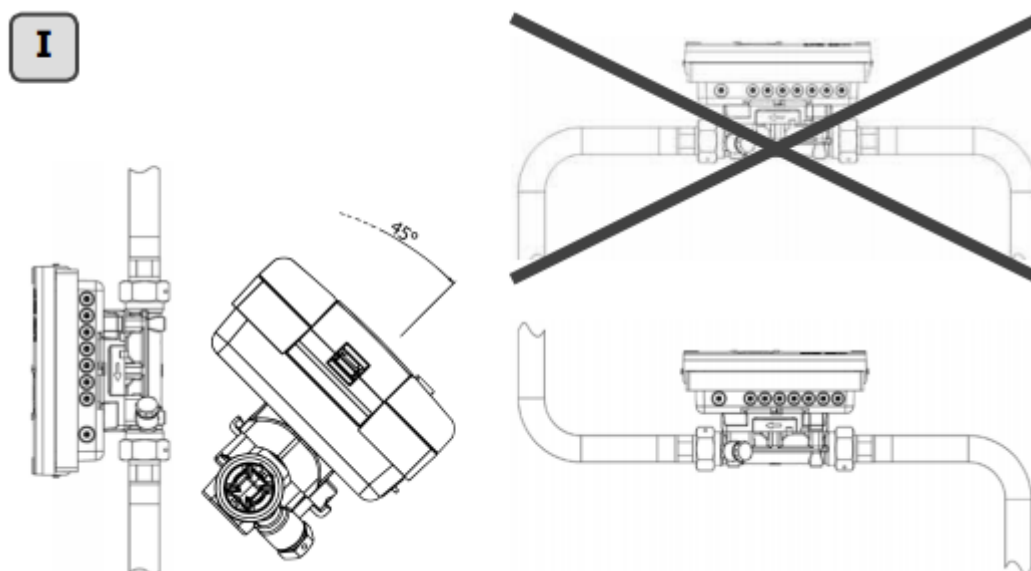


Fig. U Installation positions

- 1 Vertical installation position
- 2 Horizontal installation position
- 3 Installation position not permitted or not approved

Select the installation position to suit the design of the meter. Check the information in the display loop 3 to determine whether the meter is intended for installation in the hot or cold line of the system.

Select the installation position to avoid air bubbles collecting in the meter (Fig. U, item 1 and 2).

1. Install the flow sensor so that the direction of the arrow on the sensor corresponds to the direction of flow (Fig. V).

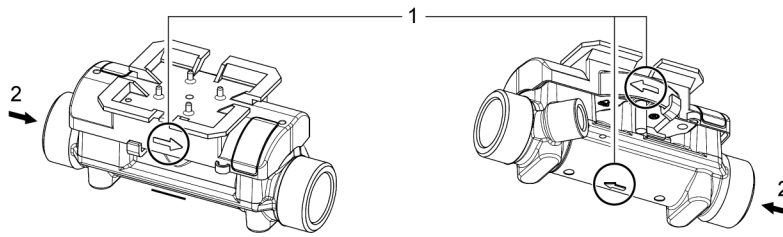


Fig. V Flow direction
1 Arrow indicating direction
2 Flow direction

2. Ensure that the flow sensor is always filled with water. The meter only measures the energy if the pipes are completely filled, otherwise a corresponding error message is shown in the display.

6.1.2 Flow/return setting (optional ex works)


Optionally, the installation position of the meter can be set in loop 3 ("3.5" page 62). Therefore the installation in the inlet (flow) or outlet (return) is possible.



NOTE

This setting must be made before start operation of the meter (fill in water)

As supplied, the outlet (return) is preset and is shown as follows in the display. Setting and number of possible changes.

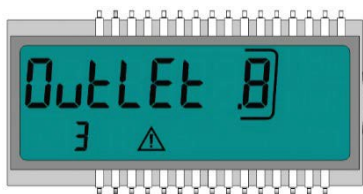

To changeover, switch to the "Outlet" window in loop 3 (see 9. Operation). Pressing and holding the button for > 6 s changes the display/setting to "Inlet". This setting can be changed a total of 8 times by pressing the button.




NOTE

The display changes during the 6 s.
This has no influence on the function.

Sequence during changing



If the button is pressed and held for > 6 s, the meter performs the command shown in the display.

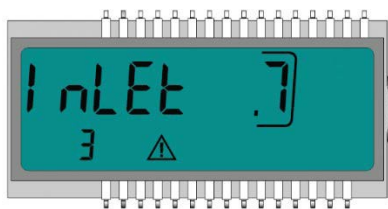

In each change, the framed number in the display is reduced by 1


After 8 changes, it is no longer possible to change the installation position.



NOTE

The function ends with water detection or after 3 hours of operation without Error detection (defined by production).

The following indication appears in the display (example):

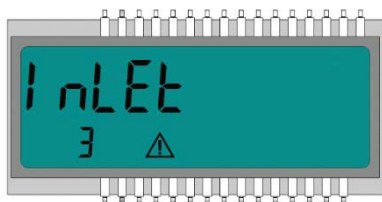

The changes indication disappears.



NOTE

Depending on the setting, the sensors may need to be converted. For flow installation, the sensor marked in red must be assigned to the volume measuring section. For return flow installation, the sensor marked in blue must be assigned to the volume measuring section. See also 6.1.4

6.1.3 Installing the calculator

- ⇒ Make sure the calculator is sufficiently far away from possible sources of electromagnetic interference (switches, electric motors, fluorescent lamps, etc.).
- ⇒ Installation at medium temperature $< 90\text{ °C}$ or at $T_{\text{Water}} > T_{\text{Ambient}}$: Install the calculator on the flow sensor (Fig. W).

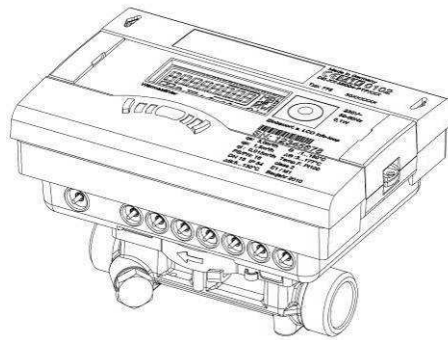


Fig. W Calculator installed on the flow sensor

- ⇒ Installation at medium temperature $> 90\text{ °C}$ or at $T_{\text{Water}} < T_{\text{Ambient}}$ (application as cooling meter or heat meter with cooling tariff). Install the calculator remotely at a sufficient distance away from heat sources (Fig. X), e.g. on the wall (Fig. Y). A wall mounting adapter (Fig. Y, item 1, supplied with meter) or a spacer holder (Fig. Z, optional) is available for this purpose.

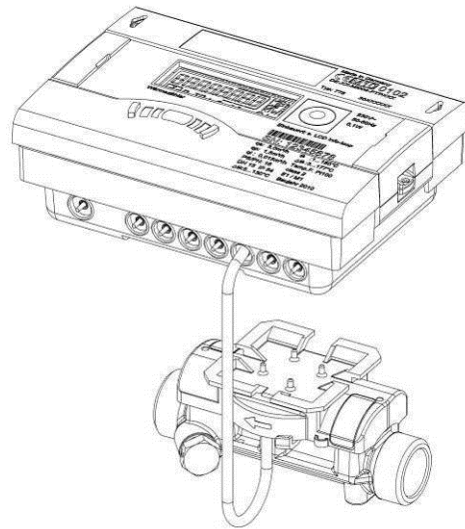


Fig. X Remote calculator

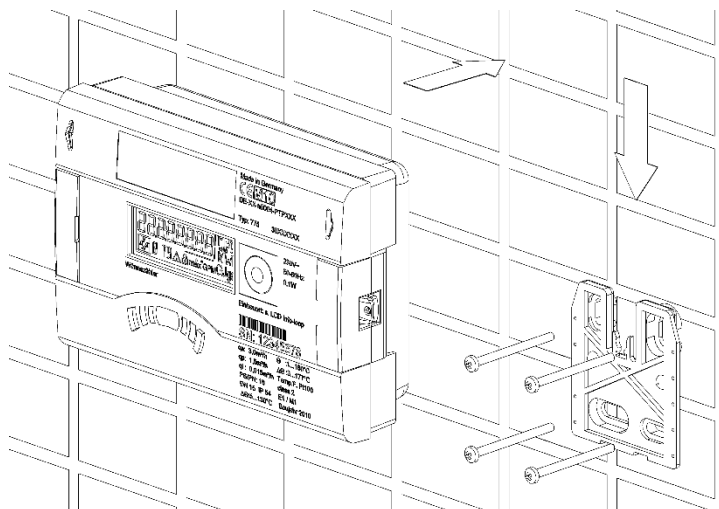


Fig. Y Wall mounting
1 wall mounting adapter (supplied with meter)

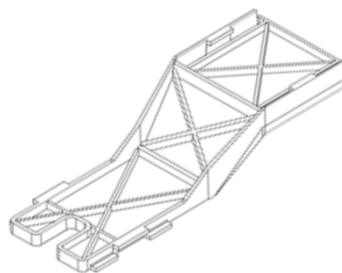


Fig. Z Spacer holder (not supplied with meter)

6.1.4 Connecting temperature sensor



NOTE

The meter is operated with separately approved pair of Pt 100 or Pt 500 temperature sensors. The type of sensor to be used is printed at the front of the calculator. Ensure that the approved temperature range of the temperature sensors is the same as the temperature range of the calculator! A temperature sensor is normally installed in the flow sensor for nominal sizes from q_p 0.6 m³/h to 2.5 m³/h. Both temperature sensors are installed free for nominal sizes $\geq q_p$ 3.5 m³/h.

- Handle the temperature sensors carefully!
- The sensor cables are fitted with coloured type labels:
 - Red: sensor in hot line
 - Blue: sensor in cold line

1. Feed the sensor cables through the cable entries (Fig. AA).

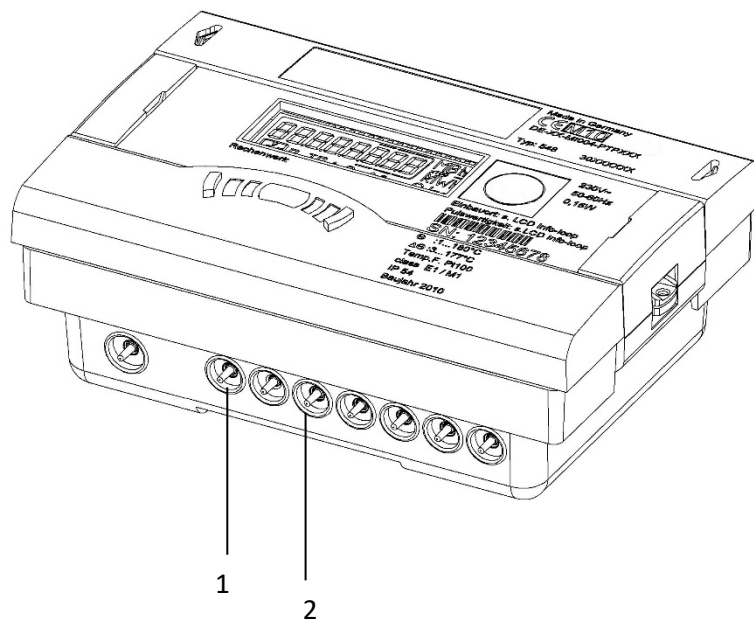


Fig. AA Cable entries

- 1 Cable entry for connecting T_{Hot} (5, 6)
- 2 Cable entry for connecting T_{Cold} (7, 8)

2. Connect the sensor cables to terminals 5-6 / 7-8 (Fig. BB, page 43) as shown in the following table.

Meter type	Sensor marking	Terminal	Installation position
Energy meter in cold pipe	Red	5 T _{Hot} 6	In the hot pipe/ flow
	Blue	7 T _{Cold} 8	In the meter / return
Energy meter in hot pipe	Red	5 T _{Hot} 6	In the meter / flow
	Blue	7 T _{Cold} 8	In the cold pipe / return
Cooling meter in hot pipe	Blue	7 T _{Cold} 8	In the cold pipe / flow
	Red	5 T _{Hot} 6	In the meter / return
Cooling meter in cold pipe	Blue	7 T _{Cold} 8	In the meter / flow
	Red	5 T _{Hot} 6	In the hot pipe /return
Heat Meter with cooling tariff in cold pipe	Red	5 T _{Hot} 6	In the hot pipe / flow
	Blue	7 T _{Cold} 8	In the meter / return
Heat Meter with cooling tariff in hot pipe	Red	5 T _{Hot} 6	In the meter / flow
	Blue	7 T _{Cold} 8	In the cold pipe /return

The programmed installation position is shown in the information loop (loop 3, "hot pipe" or "cold pipe").

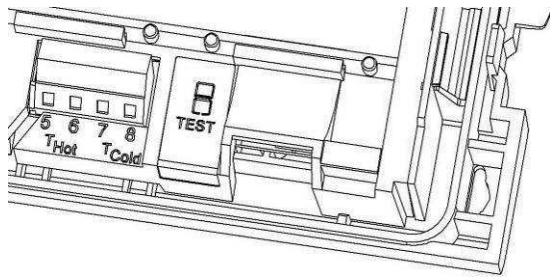


Fig. BB Terminals for temperature sensors

3. Press the sensor cables into the strain relief.
4. Close the top part with the bottom part.

6.1.5 Fitting the temperature sensor



NOTE

The temperature sensors are to be installed symmetrically in the forward and return line and preferably direct. The free temperature sensor can be installed in a ball valve or in a pocket conforming to the requirements for this type of sensor. The forward and return sensors must be inserted as far as the bottom of the pocket and then fixed in position. For installation in a ball valve, a 5-piece coupling set is enclosed with the meter in a separate bag. Bores in the flow sensor can be used for symmetrical installation of the temperature sensors. In Germany, sensors up to nominal pipe diameters of 25 mm are to be installed directly immersed.

If the temperature sensors are connected permanently, the cables must not be shortened or lengthened. If replaceable conformity-marked temperature sensors are used, the connecting cables must have the same length for the forward and return line and not exceed 10 m; the cross-sections of the cables must comply with

EN 1434-2. They are connected to the marked Pt 100 or Pt 500 terminals in line with the electrical compatibility of the integrator and finally sealed. The connecting cables of the temperature sensors must be as short as possible. These cables are not to be laid together with mains supply cables in cable ducts or cable racks. The minimum separation of 50 mm for low-voltage cables must be maintained in accordance with EN1434-6.

Installation possibilities:

- Installation in a ball valve with adapter (5-piece coupling set in separate bag)
- Installation in a pocket

Installation in a ball valve with adapter

Use ball valves suitable for temperature sensor installation with M10 x 1.

- Close the ball valve.
- Unscrew the plug screw from the ball valve.

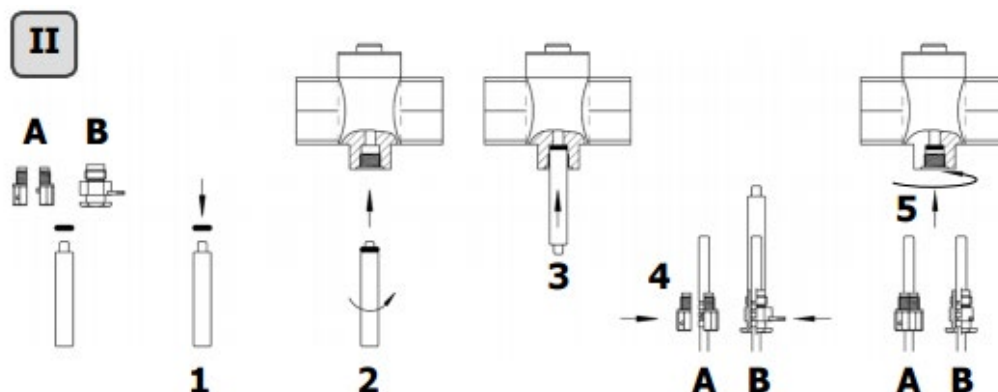


Fig. CC Installing the temperature sensor

Installation (see Fig. II)

- Place the O-ring on the mounting pin from the enclosed screw set (type A or B).
- Insert the O-ring with the mounting pin into the ball valve hole (turning the pin).
- Fix the hole end position the O-ring with the other end of the mounting pin.

Fixing screw

- Insert type A (plastic) – put the screw on the temperature sensor.
- Type B (brass) put screw on the temperature sensor
- and fix it with the fixation pin. Press the fixation pin completely in. Remove the mounting pin from the temperature sensor.
- Insert the temperature sensor with the adapter screw into the ball valve and tighten the fastening screw in a hand-tight manner (2-3 Nm).

Installation in a pocket

The pockets are best installed in T-pieces with a 45 ° or 90 ° angle. The tip of the pocket must point in the opposite direction to the direction of flow and must be located in the middle of the pipe (Fig. DD, item 1-5). The temperature sensors must be sealed after installation in the pockets.


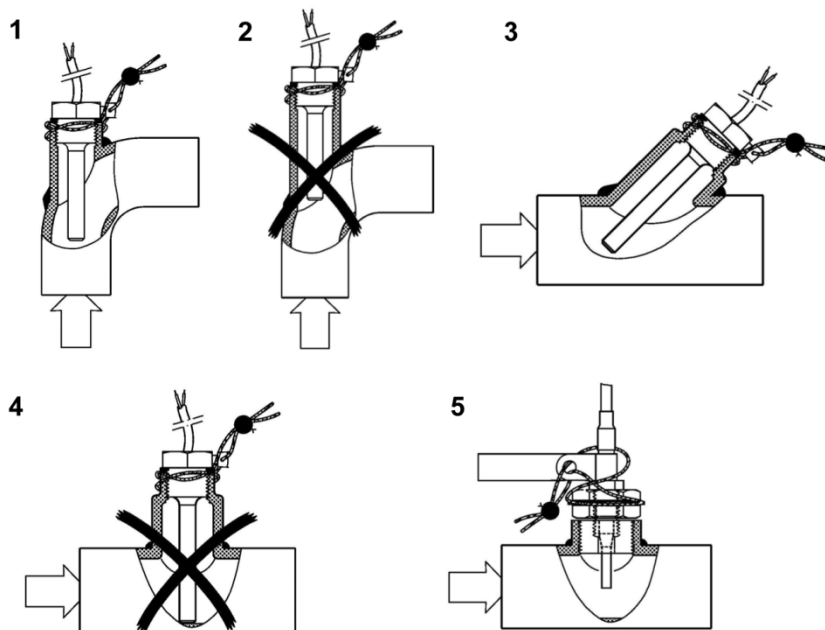


Fig. DD Example for mounting and sealing

6.2 Installing extension modules

The energy meter has two slots for extension modules.

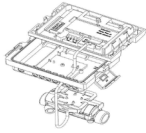

CAUTION

Do not insert modules in the wrong slots.

Risk of damage to calculator!

☐ Install modules in the correct slots.



NOTE

These modules have no effect on consumption recording and can be fitted retrospectively without damaging the verification mark.

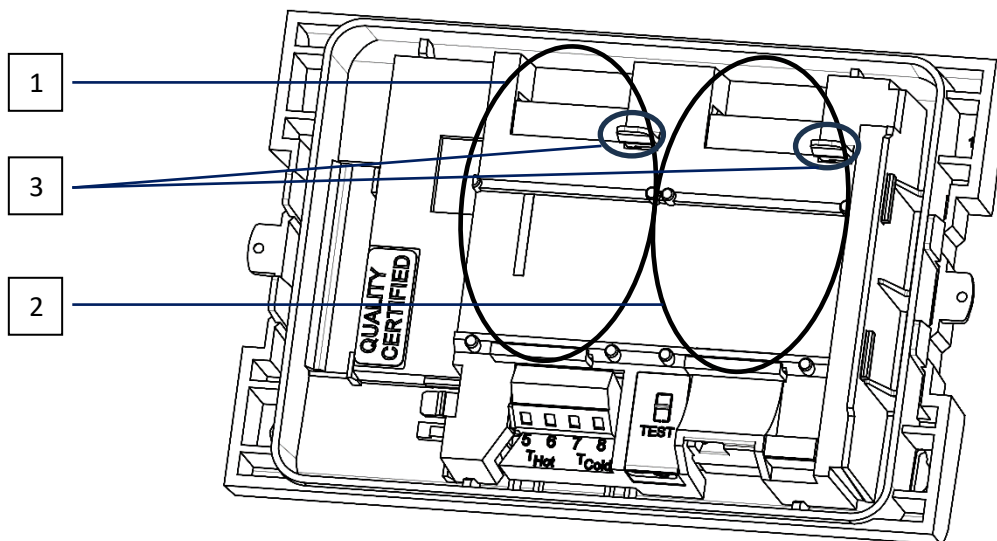


Fig. EE Slots

- 1 Slot 1
- 2 Slot 2
- 3 Fixing clips

The energy meter has two slots for expansion modules.

Overview of the possible combinations for the modules for slot 1 and slot 2

Combinations		Module Port 2								
		no module	M-Bus	RS232	RS485	Impulse-IN	L-Bus (for external radio)	MODbus	LON-Works	LoRa WAN
Module Port 1	no module	•	(•)	•	(•)	(•)	(•)	(•)	(•)	•
	M-Bus	•	•	•	•	(•)	•	(•)	(•)	(•)
	RS485	•	(•)	•	-	(•)	(•)	(•)	(•)	(•)
	Impulse-IN	•	•	•	•	-	•	(•)	(•)	(•)
	Impulse-OUT	•	•	•	•	•	•	(•)	(•)	(•)
	Impulse-IN/-OUT	•	•	•	•	-	•	(•)	(•)	(•)
	Analogue output 4...20 mA	•	-	-	-	-	-	-	-	-
	L-Bus (for external radio)	•	(•)	•	•	(•)	-	(•)	(•)	(•)
	MODbus	•	•	•	•	•	•	(•)	(•)	(•)
	LON-Works	•	•	•	•	•	•	(•)	(•)	(•)
	NB-IoT	•	(•)	(•)	(•)	(•)	(•)	(•)	(•)	-

- Combination is allowed
- Combination is not allowed
- (•) technically possible but not ex works

The modules can be used and combined as shown in the above table. The analogue module needs both slots. These modules have no effect on consumption recording and can be fitted retrospectively without damaging the verification mark.



WARNING

Electrostatic discharge.

Risk of damage to meter and particularly electronic components, for which no liability is accepted!

Observe the relevant ESD (electrostatic discharge) regulations. No liability is accepted for damage (especially to electronic components) resulting from failure to comply with the ESD regulations.

1. Remove the seal from the calculator housing and open the calculator by releasing the side catches.
2. Take the top part of the calculator and turn it so that the inside of the calculator is facing you. You can simplify installing the modules by using the two openings in the top part to place this on the bottom part (Fig. FF, item 1).

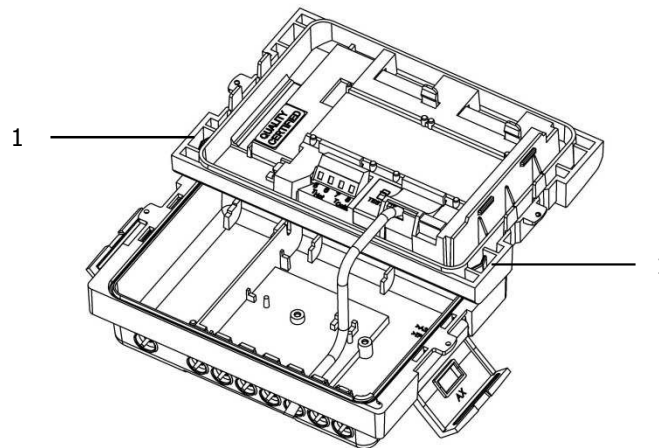


Fig. FF Installation position of top part


1 Openings in the top part for placing on the bottom part

3. Insert the module in the relevant slot (Fig. EE), secure with the fixing lugs and carefully connect the pre-formed ribbon cable at both ends.
4. Now remove the top part from the installation position, turn it and replace it in the correct position on the bottom part of the calculator.
5. Check the meter for correct operation before sealing the housing cover. The meter is equipped with automatic detection for detecting which module is inserted in which slot (port). The detection result is shown in loop 3 of the display in two different sequences (windows) for port 1 and port 2. This display automatically changes between "Port 1" and "Port 2" and the relevant module number (module code).


6.2.1 Display of the slot configuration

The SHARKY 775 is equipped with an automatic detection which module is mounted in which slot (port). This detection will be shown in the display in loop 3 in two different sequences for port 1 resp. port 2. The two sequences will be shown alternating.



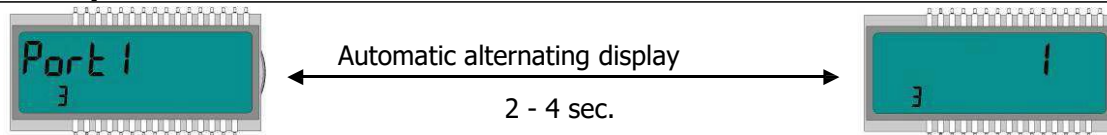

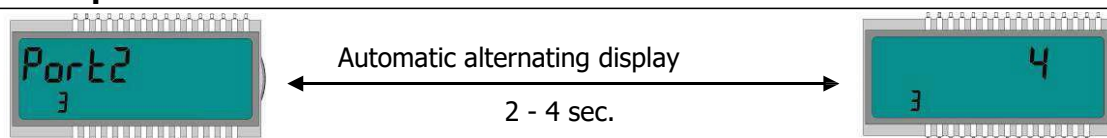


Example slot 1:







Example slot 2:



Module detection:

Module type	Module code in the display
No module	
M-Bus, LoRa WAN, MOD Bus, LON Works, NB-IoT	
RS232	
RS485	
Pulse input	
Pulse output	
Analogue output	

Module type	Module code in the display
Combined pulse input/output	
Test cable energy	
Test cable volume	
L-Bus (for external radio)	

6.3 Connecting modules

6.3.1 Connecting communication modules

M-Bus module



NOTE

A 2-pole terminal strip with the labelled connections 24, 25 is attached to the circuit board (Fig. H).

⇒ Connect the M-Bus Master to the marked terminals.

RS-232 module



NOTE

The board contains a 3 wire terminal with marking 62 (TX), 63 (RX) and 64 (GND) (Fig. I).

A special adapter cable is required for connecting to a PC (order no. 087H0121).

⇒ Connect the coloured wires as follows: 62 = brown; 63 = white; 64 = green.

RS-485 module



NOTE

The board contains a 4 wire terminal with marking "D+", "D-", "+12V" and "-12V" (Fig. J). The module requires an external power supply of 12 V DC ± 5 V.

⇒ Connect the cable to the marked terminals.

L-bus module

**NOTE**

The board contains a 2 wire terminal with marking "Dat" and " \perp " (Fig. K).

⇒ Connect the cable of the external radio module with the marked terminals.

Modbus RTU

**NOTE**

The board contains a 4 wire terminal with marking 60, 61, 90 (not inverted, +) and 91 (inverted, -) (Fig. N, page 29). The module requires an external power supply of 12-24 V AC/DC.

⇒ Connect the cable to the marked terminals.

LonWorks

**NOTE**

The board contains a 4 wire terminal with marking 60, 61, 96 (A) and 97 (B) (Fig. O, page 29). The module requires an external power supply of 12-24 V AC/DC. Polarity independent: Connections 60 and 61 / Connections 96 (A) and 97 (B)

⇒ Connect the cable to the marked terminals.

6.3.2 Connecting function modules

Pulse input module



NOTE

The board contains a 4 wire terminal with marking "I1 - \perp " and "I2 - \perp " (Fig. N).

⇒ Connect the cable for pulse input 1 to terminals "I1 - \perp " and the cable for pulse input 2 to terminals "I2 - \perp ".

Pulse output module



NOTE

The board contains a 4 wire terminal with marking "O1 - \perp " and "O2 - \perp " (Fig. P, page 30).

⇒ Connect the cable for pulse output 1 to terminals "O1" and " \perp " and for pulse output 2 to terminals "O2" and " \perp ".

Combined pulse input and output module



NOTE

The board contains a 5 wire terminal for the two pulse inputs with marking "I1 - \perp " and "I2 - \perp ". A 3 V DC voltage is connected to the "+" terminal and can be used as the supply for a flow sensor. A 2 wire terminal is also provided for the pulse output with marking "O1 - \perp " (Fig. Q).

⇒ Connect the cable for pulse input 1 to terminals "I1 - \perp " and the cable for pulse input 2 to terminals "I2 - \perp ".

⇒ Connect the cable for the pulse output to terminals "O1" and " \perp ".

Analogue output module



NOTE

The board contains two 2 wire terminals for the two analogue outputs; output 1 is marked "+ 1 -" and output 2 "+ 2 -" (Fig. R, page 32).

⇒ Connect the cable for analogue output 1 to the terminals marked "+" and "-" of terminal 1. Connect the cable for the second analogue output to the terminals marked "+" and "-" on terminal 2. Observe the correct polarity.

6.4 Connect 230 V / 24 V mains voltage



DANGER

Before you connect the mains cable, be sure that no mains voltage is existing.

Risk of serious injuries or death!

Please take care that the mains voltage corresponds to the mounted mains unit.

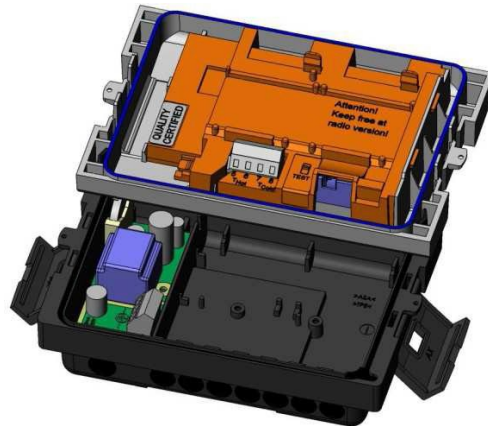


Fig. GG Meter with mains unit

1. Remove the top part of the calculator
2. Dismount the terminal cover of the mains unit
3. Install the mains cable via the wire protecting sleeve into the bottom part of the calculator
4. Connect the cable according the labelling of the terminal
5. Reinstall the terminal cover
6. Mount the top part of the calculator back
7. Turn on the mains voltage again
 - ⇒ Error E - 8 disappears automatically from the display when the mains voltage is available.
8. The calculator has to be protected against manipulation (sealing)

6.5 Programming the energy meter



NOTE

A number of settings can be programmed in the meter using the IZAR@Mobile2 software. More information is available at <http://www.diehl.com/metering/de/diehl-metering/support-center/downloads>

7 Taking into operation

The meter can be taken into operation once it has been installed. Proceed as follows:

- Open the stop valves.
- Check the system for leaks.
- Carefully bleed the system.
- The message "E – 7" disappears from the display after a short time.
- Check the flow rate and temperature displays for plausibility.
- Bleed the system until the flow rate display is steady. Regulate the system using the flow rate display.
- Seal the sensors.
- Attach the seals to the calculator and temperature sensors.
- Read the meter counts for energy, volume and operating hours.

Error messages for incorrect installation:

Error display	Meaning
E - 3	Temperature sensors reversed during installation or connection
E - 6	Meter has not been installed in the intended direction of flow.




NOTE

If the system is idle, these error messages can appear even though the installation has been carried out correctly.

8 Operation

8.1 Display

The meter readings are displayed with units and symbols on an 8-digit LCD.

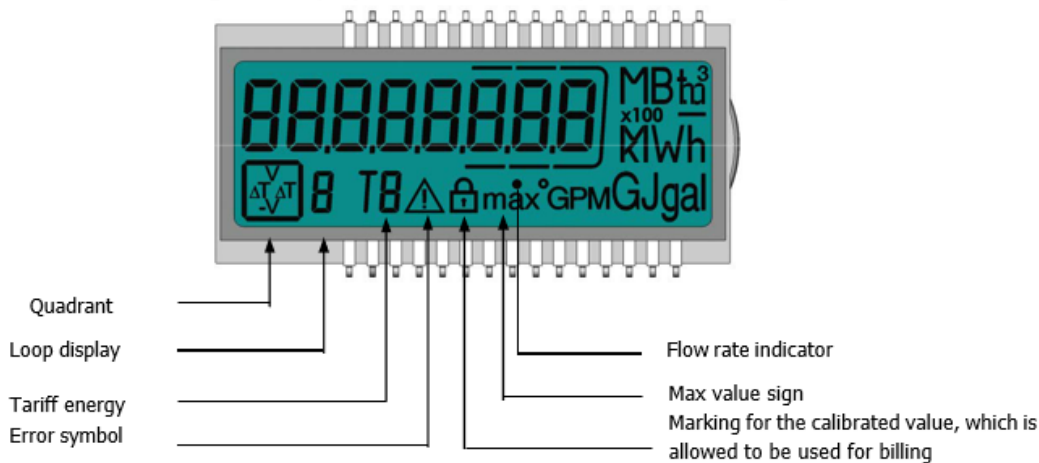

8.2 Operation of counter

A pushbutton mounted on the front of the meter is used to switch to the various displays. To show the data read out by the calculator in the display, various windows have been created as loop functions that can be called up in succession to display the system information assigned to each window (e.g. amount of energy, operating hours, volume of water, current temperatures, ...).

The meter has 6 different display loops: main loop, accounting date loop, info loop, impulse loop, tariff loop and monthly value loop.

The tariff loop (5) in a heating or cooling meter is switched off in the default setting. This loop is only switched on in a heat meter with cooling tariff.

The window content of each loop is programmed with the standard information ex works. Various display windows comprise up to seven displays that change at intervals of 2 – 4 s. The loops in the display are numbered from 1 to 6 to help the user find his way around quickly (Fig. GG). The main loop (1) is programmed with the current data as default setting, e.g. for energy, volume, flow rate.

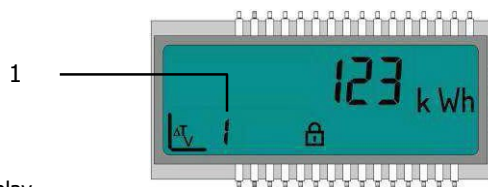


Fig. HH LC display
1 Display of the loop (here loop 1)

The basic display shows the "Energy" window in the main loop when the meter is attached to the pipe, the pipe is completely filled with water and there is no error (sequence 1.1). If there is an error it is shown permanently in the basic display. The meter doesn't switch to the power save mode. Is the cause of error removed the error disappears from the display. See Section 8.3 Display indications (default settings).

The loop settings can be programmed to suit customer-specific requirements using the IZAR@Mobile2 software.

The pushbutton is used to switch through the various displays. The button can be pressed for a short or long time.


The following table shows the possible uses of the button:

Action	Result
Short press => ▼ (< 3 seconds)	Switches to the next display within a loop
Long press (> 3 seconds)	Switches to the next display loop
Button not pressed for 4 minutes	Meter switches off the display automatically (to save power, but only if no error exists)
Button pressed again	Meter shows the basic display


8.3 Display indications (default settings)

Main loop (1)


Sequence Window 1

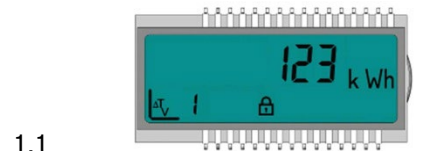

Accumulated energy
▼

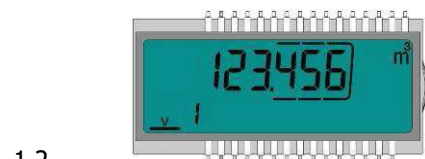

Volume
▼

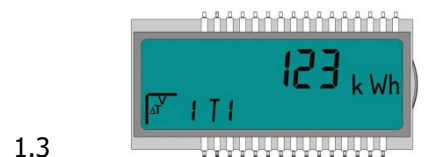


Accumulated energy (cooling)
▼

(Sequence only in a heat meter with cooling tariff)



Flow rate
▼

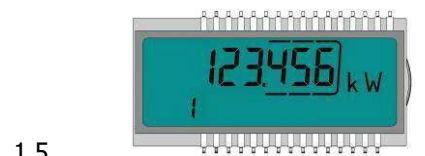


Power
▼

Sequence

Window 1


1.6

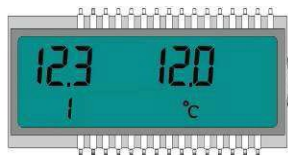

Forward/-Return temperature



1.7

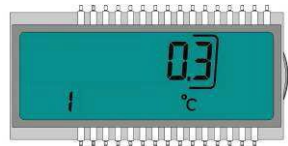

Temperature difference




1.8



Operating days




2s

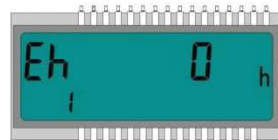

error hours

1.9

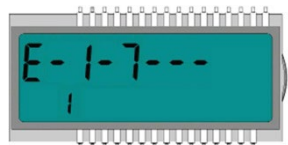

Error code



1.10





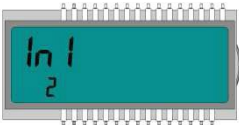











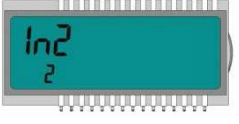
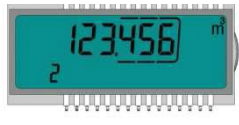


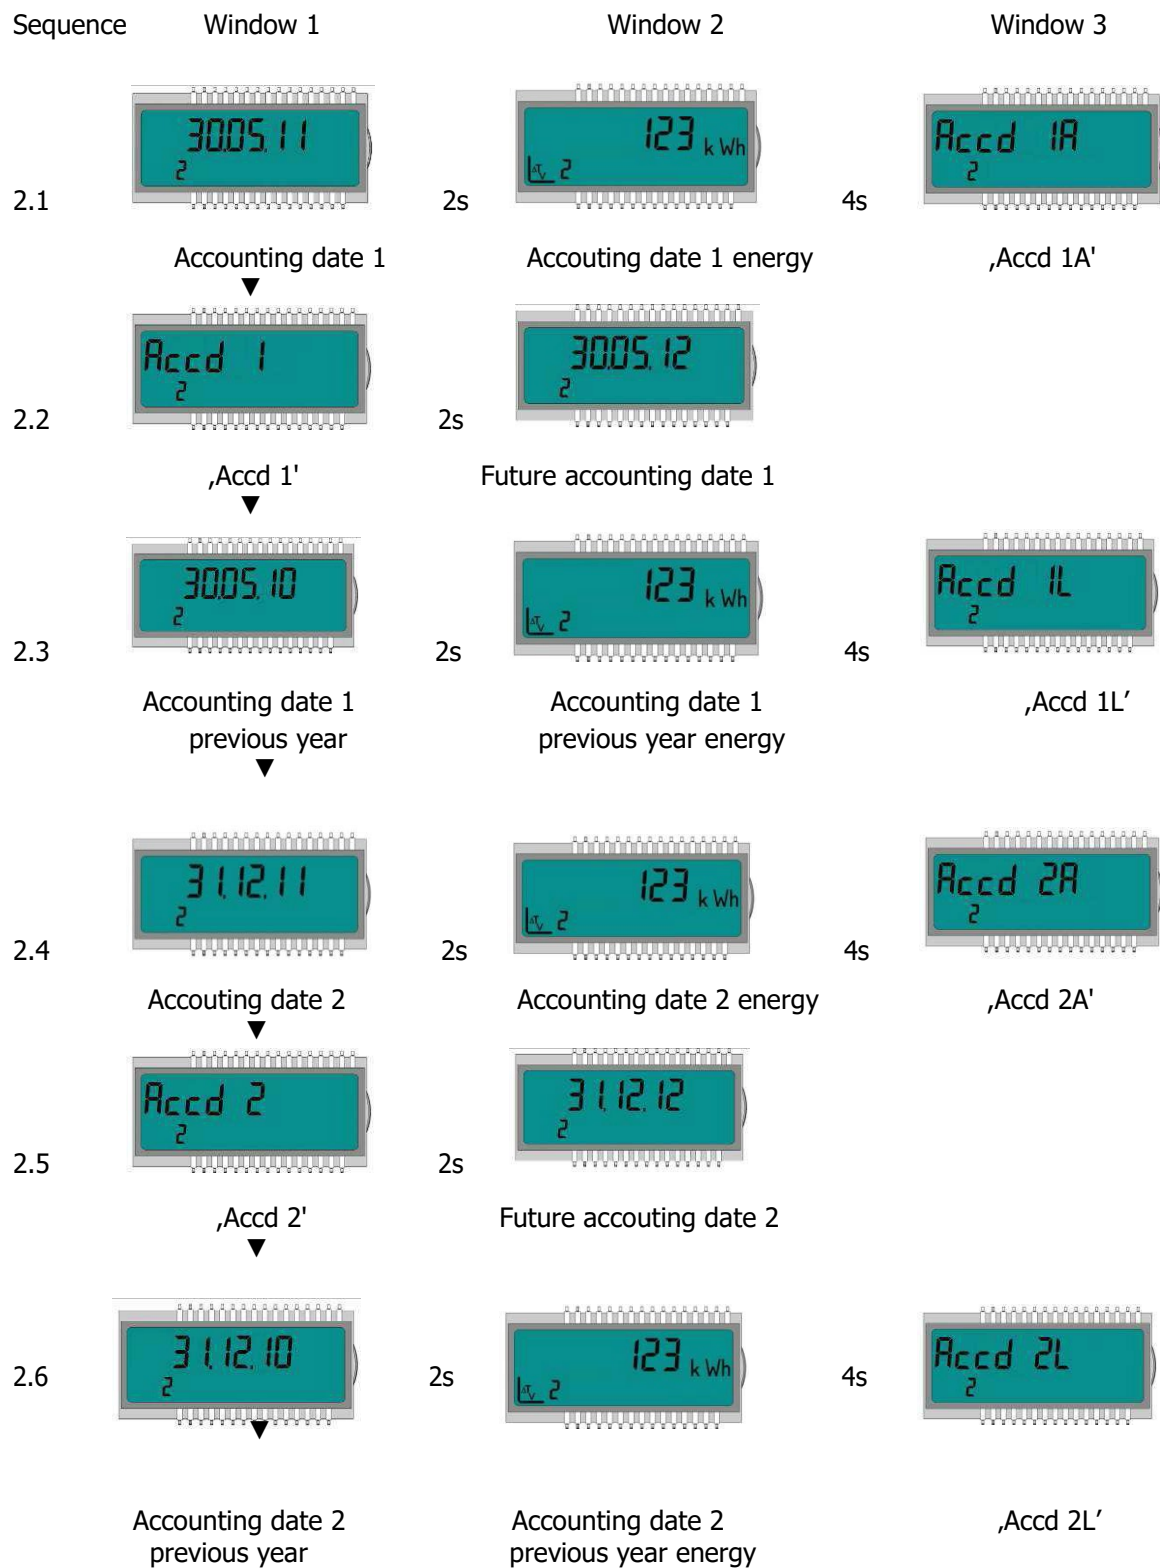
Display test

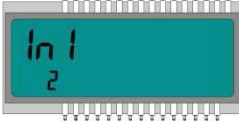


Sequence 1.1

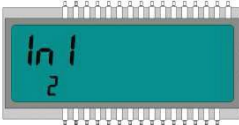
Accounting date loop (2)

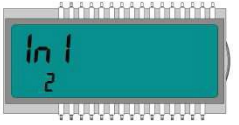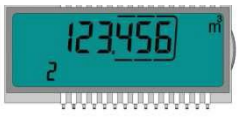


Sequence	Window 1	Window 2	Window 3
2.7	 <p>Accounting date 1</p>	 <p>Pulse input 1</p>	 <p>Pulse input volume 1</p>
2.8	 <p>Accounting date 1 previous year</p>	 <p>Pulse input 1</p>	 <p>Pulse input volume 1</p>
2.9	 <p>Accounting date 2</p>	 <p>Pulse input 1</p>	 <p>Pulse input volume 1</p>
2.10	 <p>Accounting date 2 previous year</p>	 <p>Pulse input 1</p>	 <p>Pulse input volume 1</p>
2.11	 <p>Accounting date 1</p>	 <p>Pulse input 2</p>	 <p>Pulse input volume 2</p>
2.12	 <p>Accounting date</p>	 <p>Pulse input 2</p>	 <p>Pulse input volume 2</p>

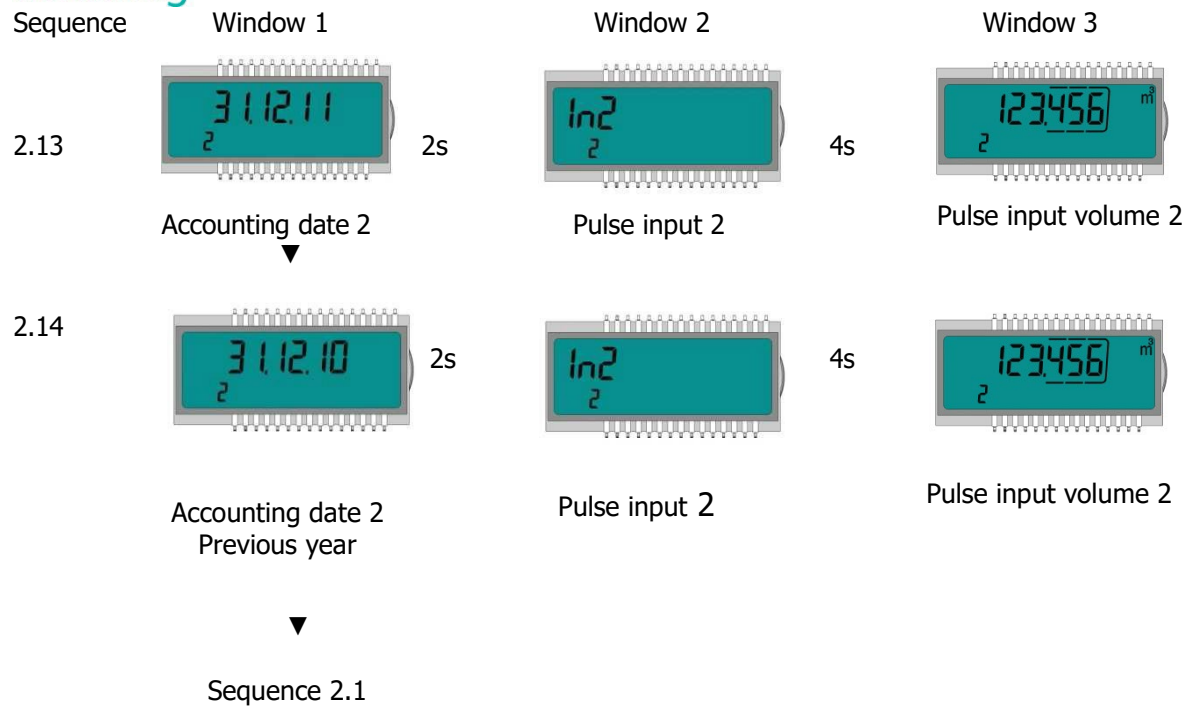

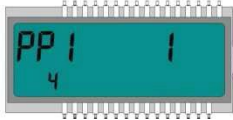





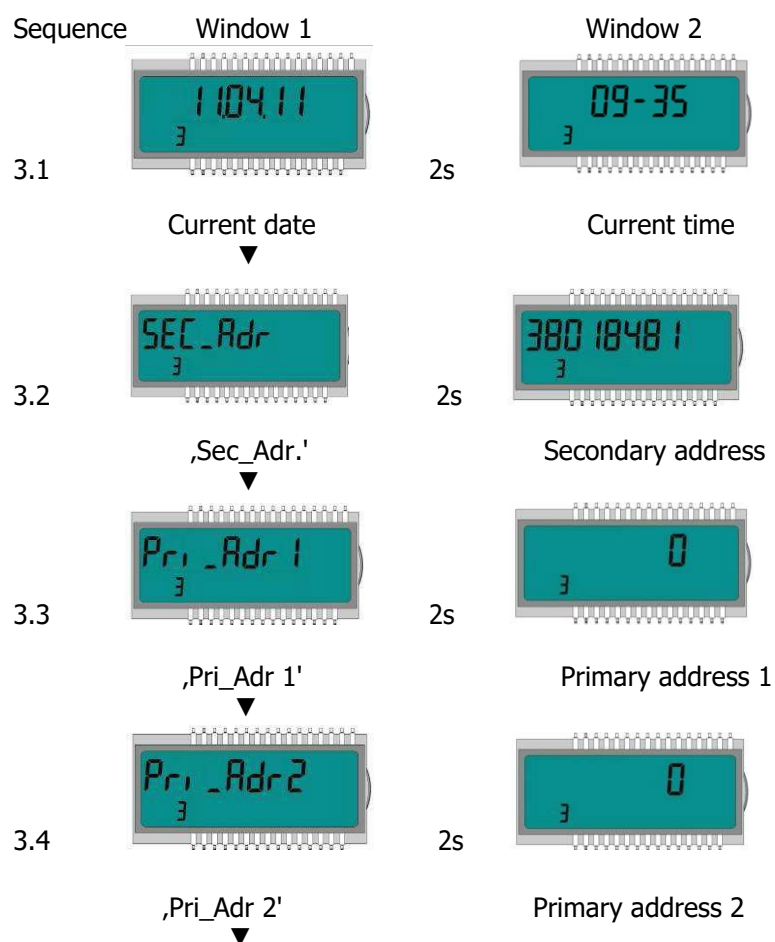

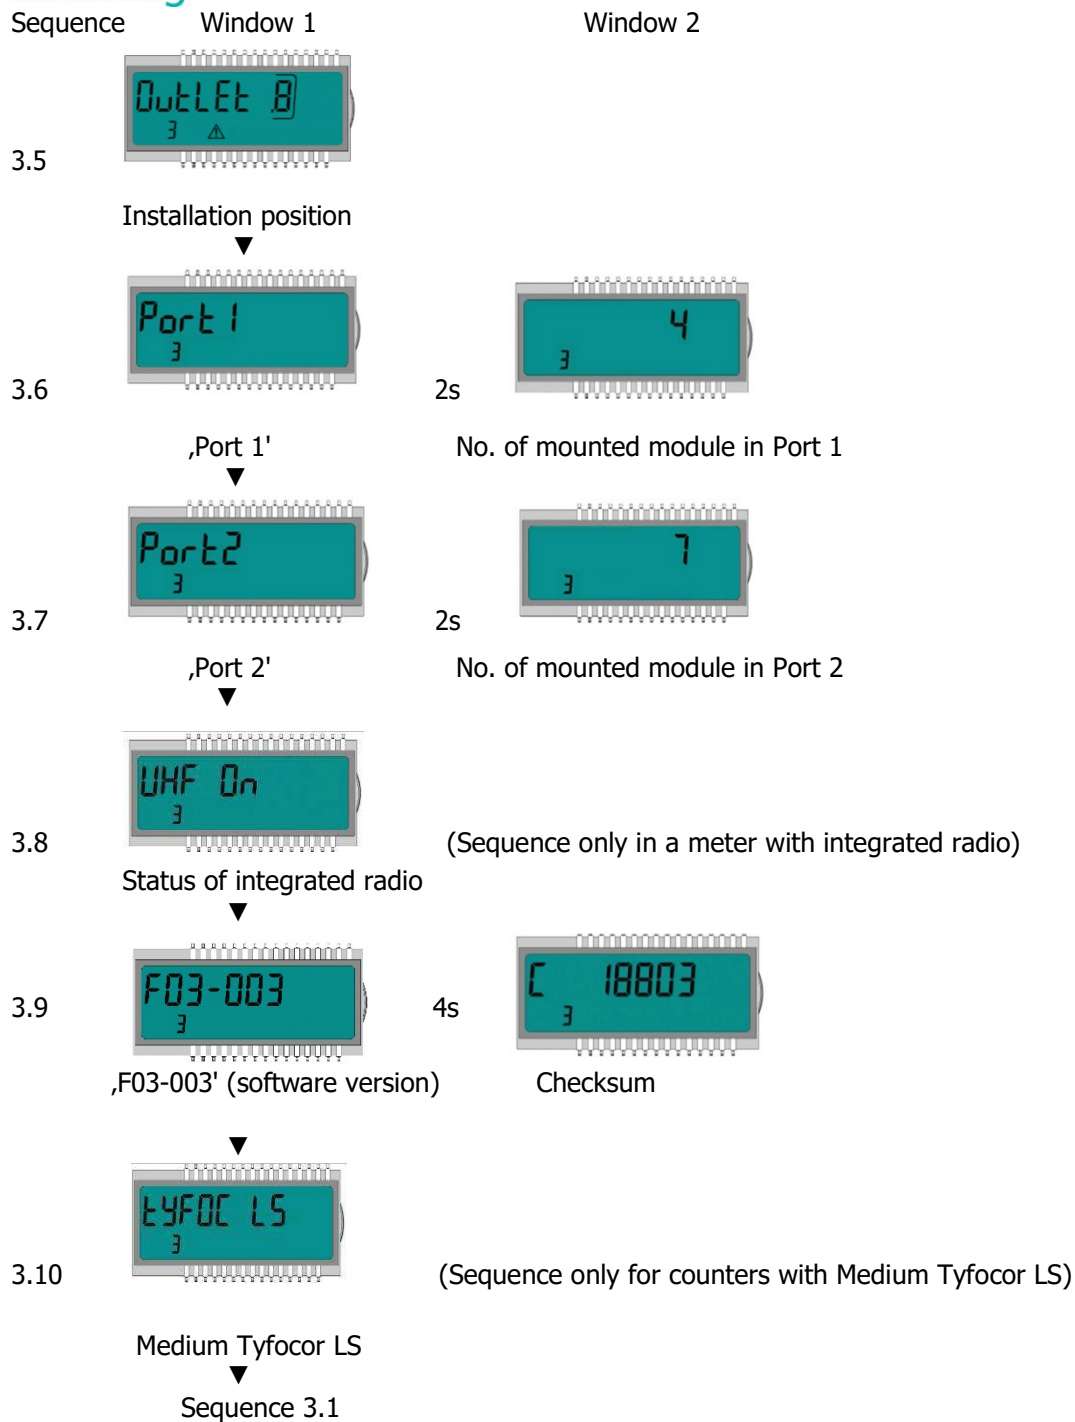
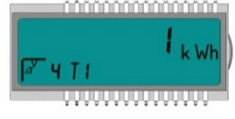


Info loop (3)

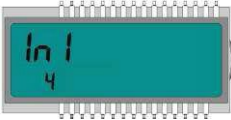


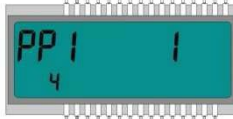


Pulse loop (4)


Sequence	Window 1	Window 2	Window 3
4.1		2s 	4s 
	Pulse input 1 ▼	Accumulated value pulse input 1	Pulse value 1 [L/P] (pulse per increment, depends on the decimal place of the accumulated value, here 1L/pulse)
4.2		2s 	4s 
	Pulse input 2 ▼	Accumulated value pulse input 2	Pulse value 2 [L/P] (pulse per increment, depends on the decimal place of the accumulated value, here 1L/pulse)
4.3		2s 	
	Pulse output 1 ▼	Value of pulse output 1	
4.4		2s 	
	Pulse output 2 ▼	Value of pulse output 2	(Sequence only in a heat-or cooling meter)
4.5		2s 	(Sequence only in a heat meter with cooling tariff)
	Pulse output 2 ▼ Sequence 4.1	Value of pulse output 2	

Tariff loop (5) (Only in a heat meter with cooling tariff)

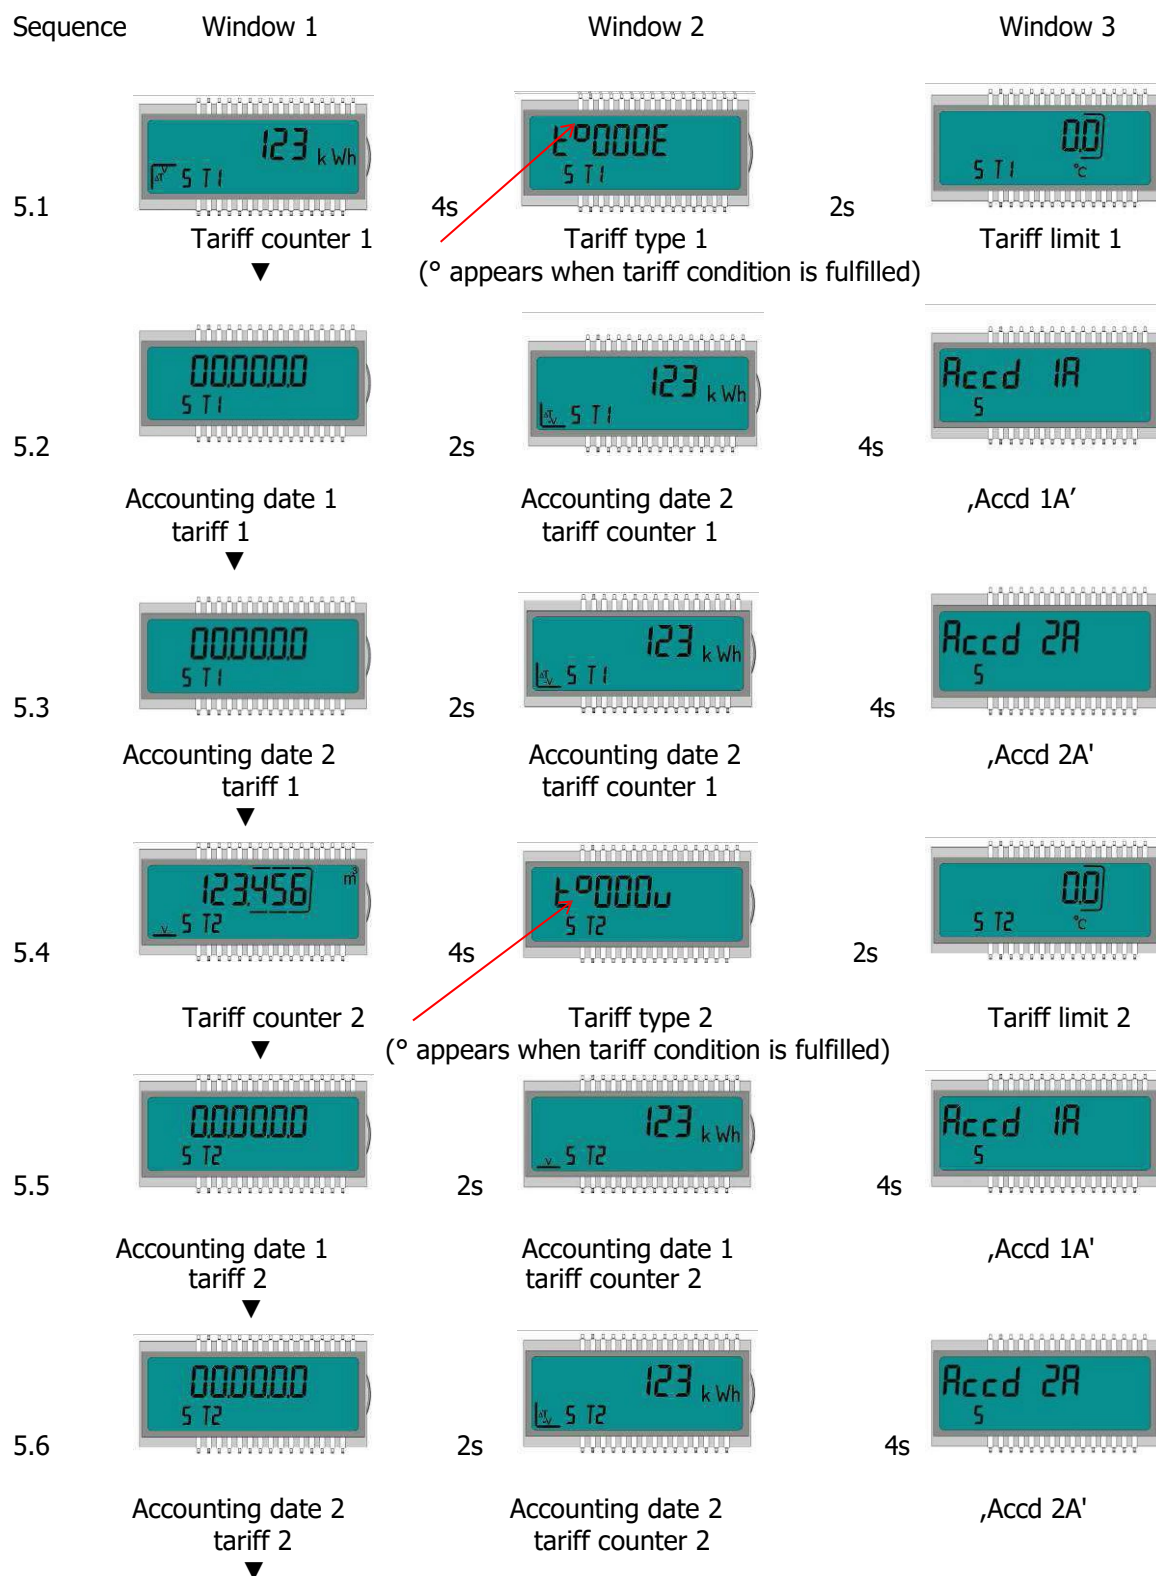


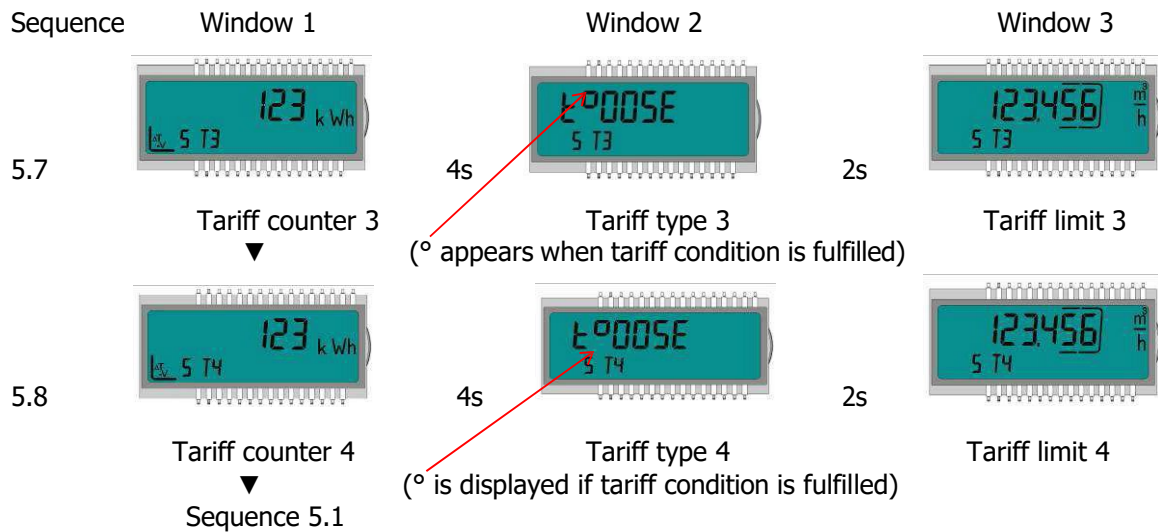

Monthly value loop (6) (Heat - or cooling meter)

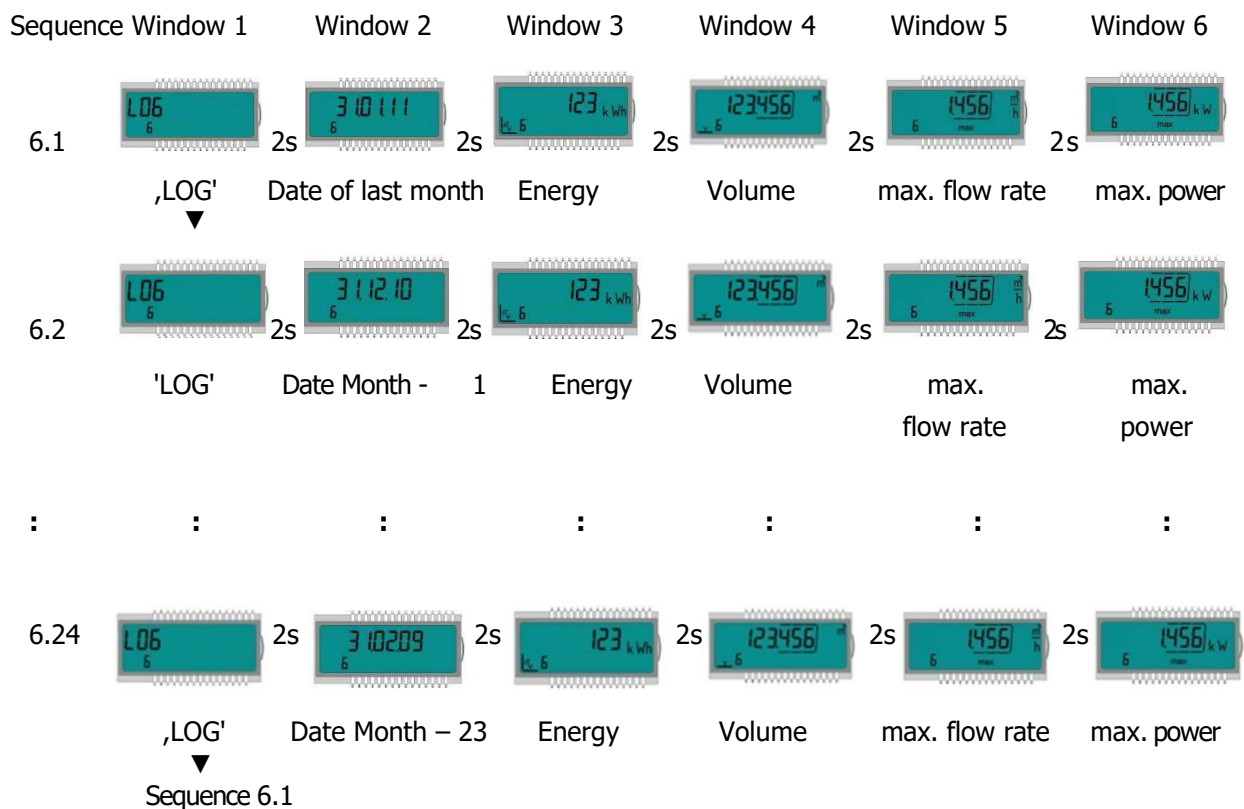

Monthly value loop (6) (heat meter with cooling tariff)

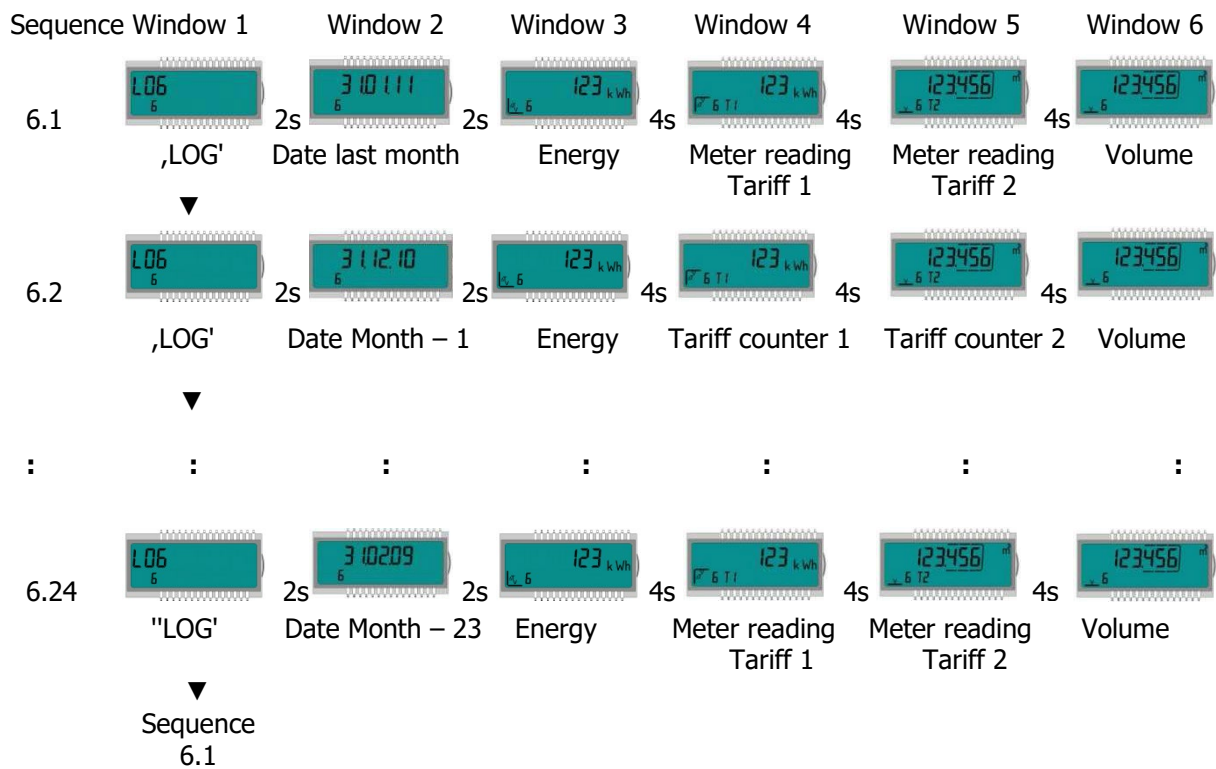

9 Maintenance and repair

**NOTE**

Information concerning repair and maintenance can be obtained from the Repair Concept.

10 Testing

**NOTE**

Information concerning testing can be obtained from the relevant Inspection and Test Instruction.

Test information can also be found in the EC type examination certificate of the meter under 5.1 (Test documentation) and in EN 1434-5. The number of the type examination certificate is printed on the calculator of the meter.

11 Removal

**CAUTION**

Danger due to escape of heat medium

Risk of burns !

⇒ Close the stop valves before removing the meter.

⇒ Switch off the energy meter.

11.1 Disposal of energy meter

**NOTE**

The meter contains a lithium battery. This must not be opened by force, come into contact with water, be short-circuited or exposed to temperatures above 85 °C. Used batteries and electronic equipment or components no longer required are to be handled as special waste.

⇒ Dismantle energy meter.

⇒ Dispose of the individual parts of the meter at a suitable waste collection point.

12 Error analysis

The following table shows the error codes shown on the display with their respective meanings:

The meter continuously monitors its own operation and displays various error messages. The error code is displayed in the main loop if an error occurs. The permanent display shown corresponds to the "normal" display (e.g. a temperature sensor error is not shown in the flow rate display). In the basic display mode, the display changes between error codes 1, 4 and 7 and the basic display (exception: error display "C - 1" is shown permanently). All the other windows can still be selected by pressing the button.

The error display disappears automatically as soon as the cause of the error has been cleared. All errors present longer than 6 minutes are saved in the error log.

The following table shows the error codes indicated in the display with their respective meaning:

Error display	Meaning
C - 1	Basic parameter error in flash or RAM
E - 1	Temperature measurement error - Temperature range exceeded [-9.9 °C ... 190 °C] - Sensor short-circuit - Sensor break
E - 3**	Temperature sensors reversed in hot and cold lines
E - 4	Hardware error in ultrasonic measurement - Ultrasonic transducer defective - Short-circuit in ultrasonic transducer
E - 5	Reading too frequently - M-Bus communication not possible for short time
E - 6**	Wrong direction of flow Flow sensor incorrectly installed
E - 7	No meaningful ultrasonic receive signal - Air in the measuring path
E - 8	No primary voltage (only if mains unit used) - Powered by back-up battery
E - 9	Warning: battery nearly exhausted
E - A*	Leakage: pipe break detected
E - b*	Leakage: leakage detected in energy meter
E - C*	Leakage: leakage pulse input 1
E - d*	Leakage: leakage pulse input 2

* optional

** depends on application

13 Declaration of Conformity

Download:

[Download Centre | Diehl Metering](#)

PS: You need a customer account for this download.
You are welcome to request this from us.