

Mounting Instruction

Revision set : Capacitor 50/60 Hz
Article No. : R60.488

Contents of the revision set:


1x Capacitor
1x Mounting Instruction



NOTE: Before servicing the SpiroVent Superior make sure the unit is isolated from the power supply. (see chapter 7.2 of the user manual).

(De)mounting:

- 1) Loosen the 2 screws (A) on both sides of the unit and remove the cover (B).
- 2) Open the cover (C) of the electrical connection (junction) box on the pump with the 4 screws (D).
- 3) Loosen the nuts (E) and remove the defect capacitor and mount the replacement capacitor (F) according to the picture.
- 4) Make sure that the capacitor (F) is well in place when closing the electrical connection box of the pump motor. The cover needs to be closing the junction box completely.
- 5) Position the cover (B) in the slot in the bottom of the frame and fix it with the 2 screws (A).

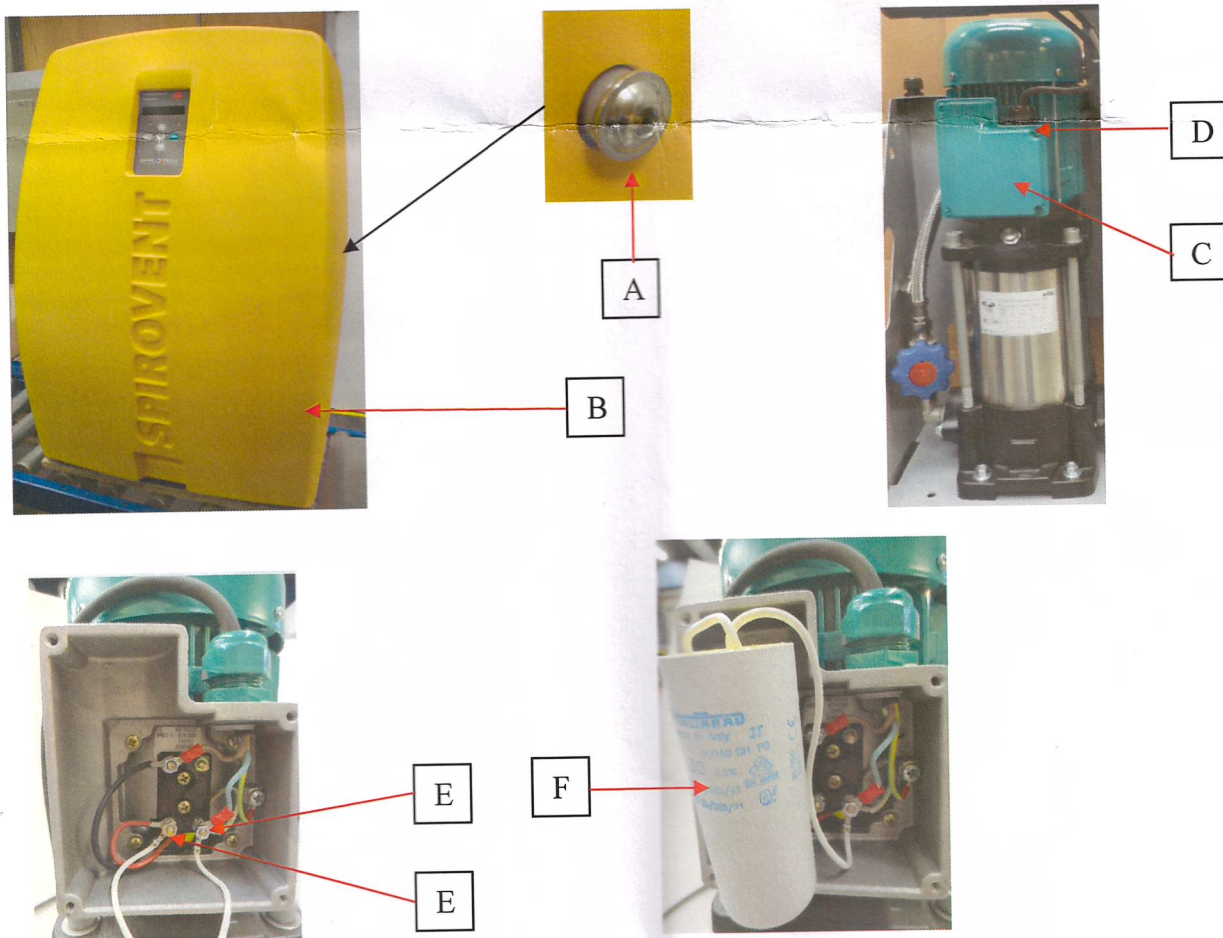

Putting the SpiroVent Superior back into operation.

see chapter 5.5.2 of the user manual for taking the SpiroVent Superior in operation again.