


# AN/VKR/VRVM


Radiatorkoppel  
 Radiator manifold  
 Radiatorverteiler

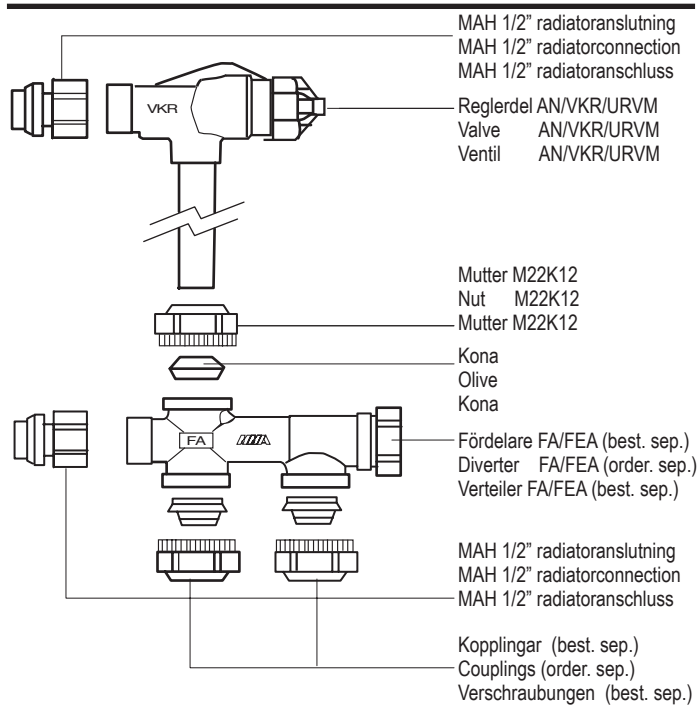


AB Markaryds Metallarmatur 482 80 40  
 Tel. +46 (0)433 737 00 090218 rev. 01




**1** MAH 1/2"  
 MAH 1/2"  
 MAH 1/2"

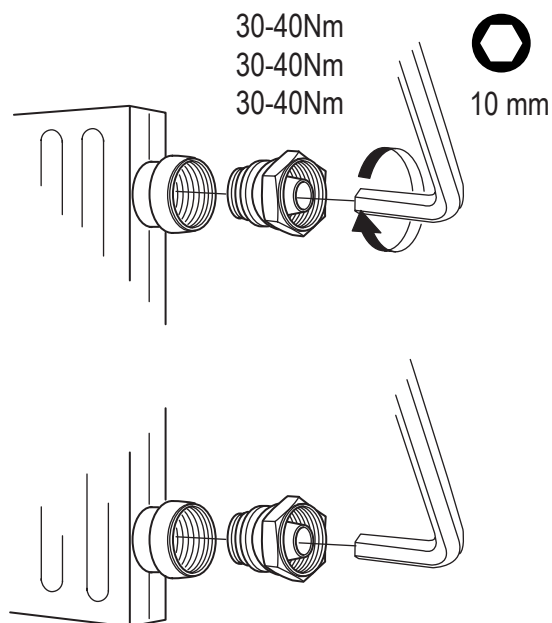


**2** Fördelare  
 Diverter  
 Verteiler

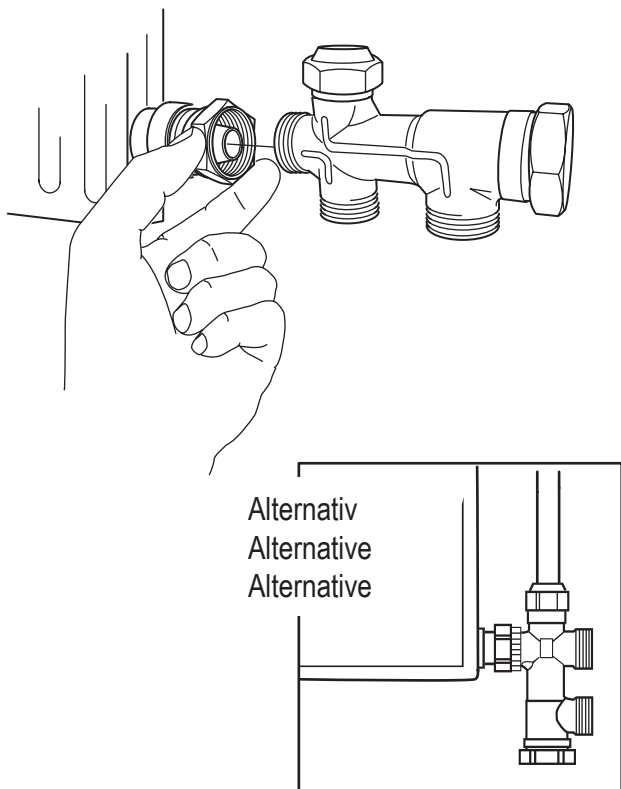


**3** Mutter och kona M22K12  
 Nut and olive M22K12  
 Klemmschraubung M22K12

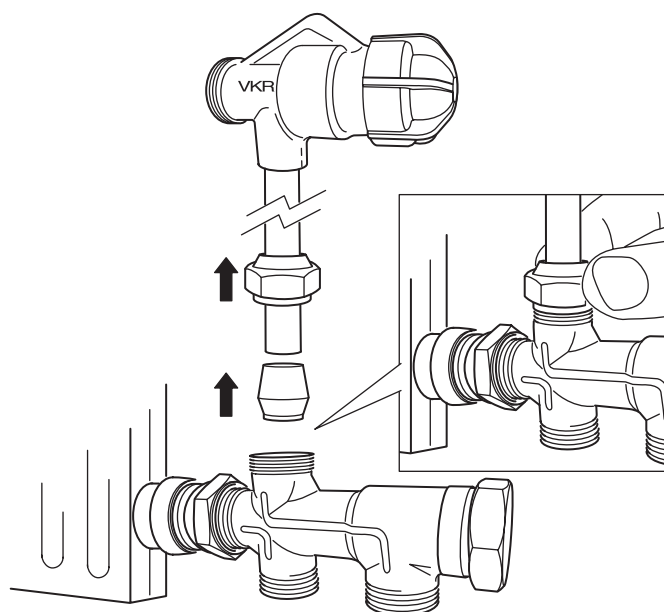


- 4** Reglerdel AN/VKR/VRM  
 Valve type AN/VKR/VRM  
 Ventil type AN/VKR/VRM

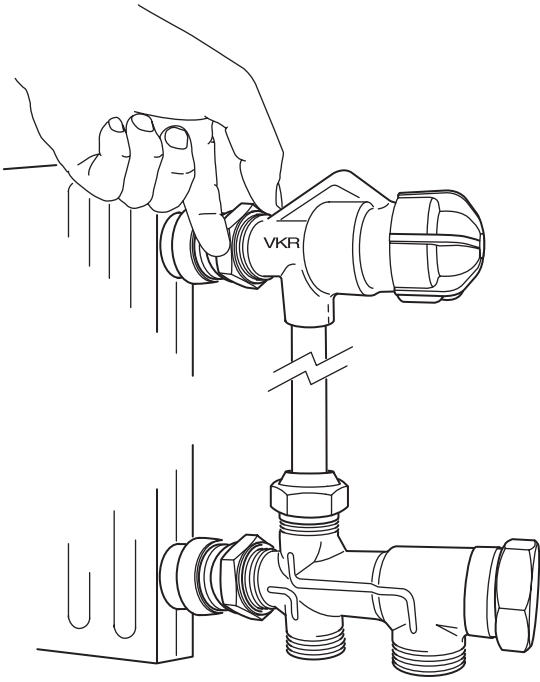


- 5** Koppla mot systemet.  
 Connect to heating system.  
 An Heizungssysteme Anschliessen.

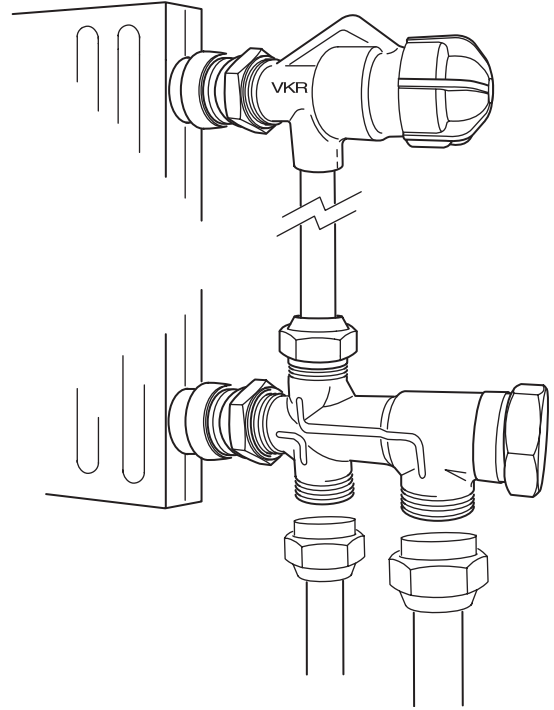


- 6** Dra åt, kontrollera ev. läckage.  
 Pull tight check for leakage.  
 Anziehen, mit hinsicht auf dichtigkeit kontrollieren.

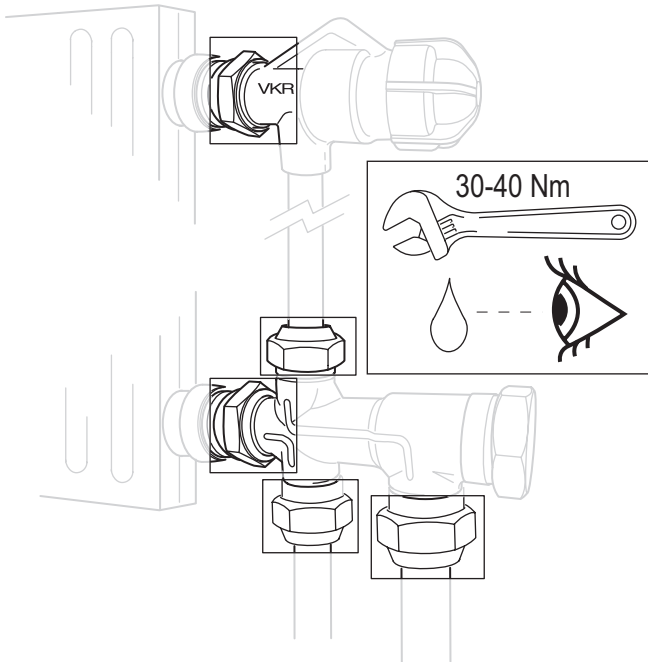

- 7** Montera termostat.  
 Assemble thermostat.  
 Thermostatkopf montieren.

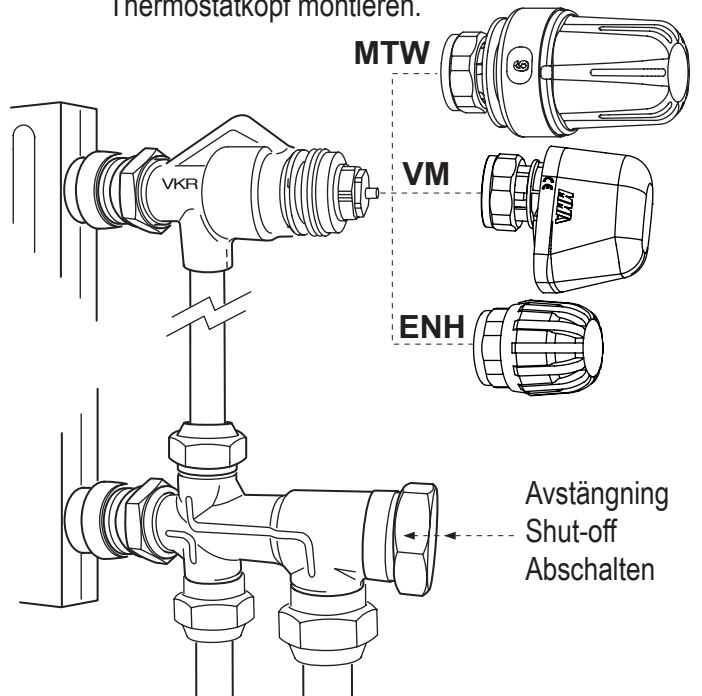

 Allt montage skall utföras enligt AMA

