
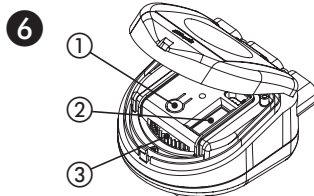
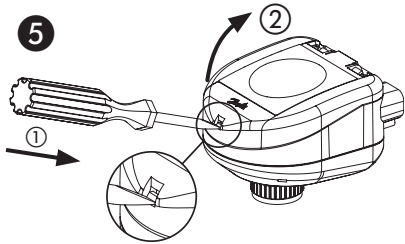
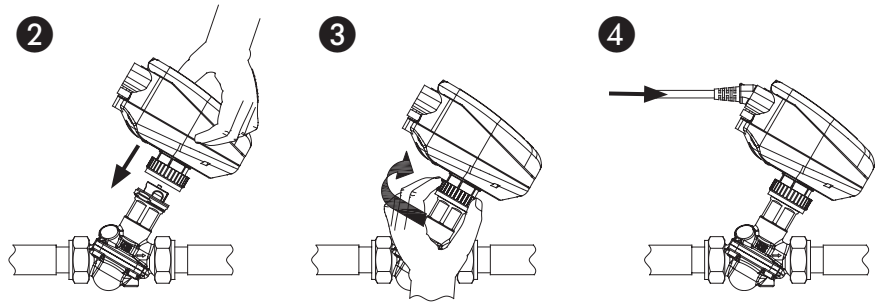




Operating Guide

NovoCon® S / 73690900


# NovoCon® S - High Accuracy Actuator

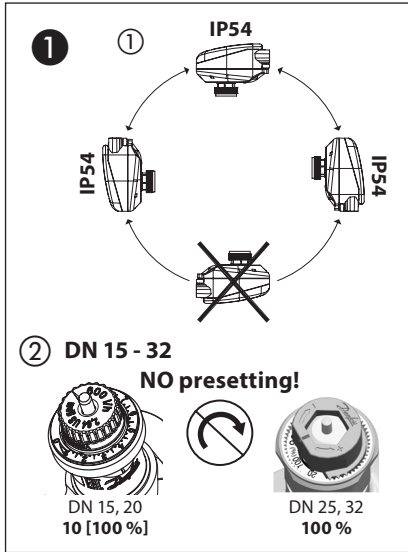




Manual Calibration: Press button ① until two LED's are turned on, and then release again.  
DIP switch: ②  
Manual override: Adjust wheel ③

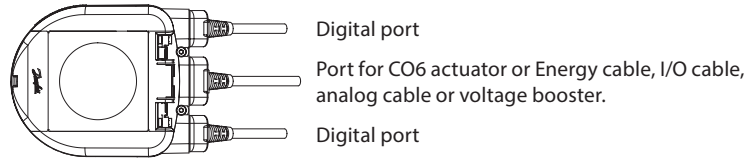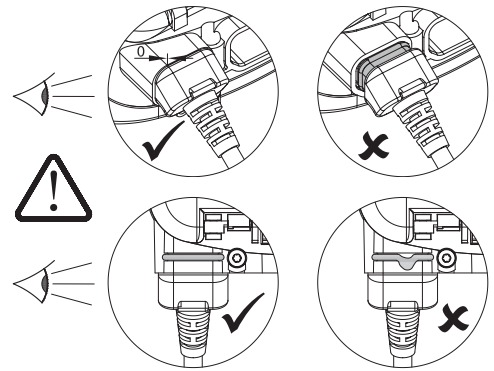


**NovoCon® digital cable**

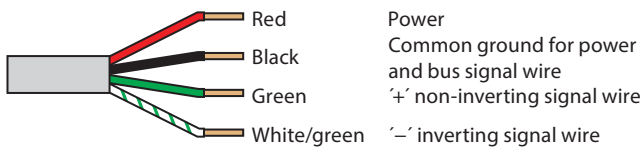


**NovoCon® analog cable**

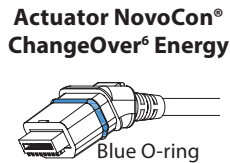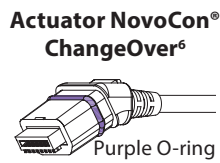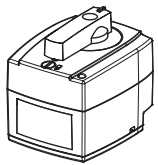

**Actuator NovoCon® ChangeOver6 Flexible**

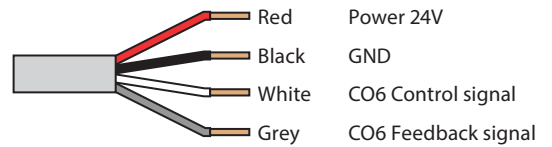


**NovoCon® Energy cable**

 


**NovoCon® Energy cable**



**NovoCon® I/O cable**

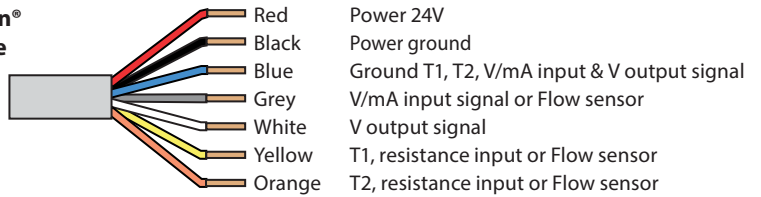

**Cable NovoCon® Temperature I/O**

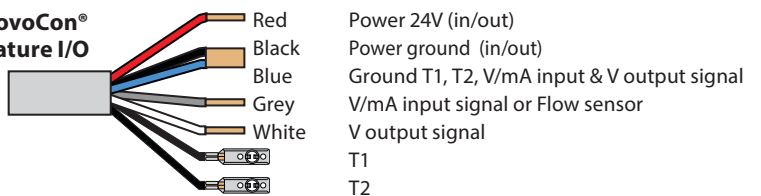

## NovoCon® S - High Accuracy Actuator

**8**

**NovoCon® S**  
**003Z8504**  
**Actuator for AB-QM DN10-32**  
Control signal: BACnet MS/TP, Modbus RTU, 0-10V, 0-20mA

Power: 24VAC/DC, 50/60 HZ  
Force: 90N, Stroke: 7 mm, Speed: 3-24s/mm  
Consumption: 3.3VA running, Standby 0.9W  
IP54/40, -10T55

E100 V01  
281624  
0030471

6430 Nordborg, Denmark  
MADE IN SLOVENIA

Serial number and QR code can be removed from the NovoCon® S label and added to installation drawing.

Device Object Instance Number

**9**

**10**

**DIP Switch**

1	2	3	4	5	6	7	8	9	10
								ON	
								OFF	

DIP Switches 1 to 7 are used to assign the MAC address manually. Default MAC address assignment method is Auto MAC addressing for BACnet MS/TP and DIP Switches for Modbus RTU.  
For termination of last unit on the field bus, turn DIP Switch 8 ON.  
Dip switch 9 is not used.  
Dip switch 10 is used to select between BACnet MS/TP (OFF=Default) and Modbus RTU (ON).  
When the protocol is changed on DIP Switch 10, a power cycle is required.

**11**


**Optional step (connecting flow sensor)**

**Cable NovoCon® I/O**

**SonoSensor 30**

Terminal Nr.	Description
18	Volume pulse output (+)
19	Ground (-)

**12 Initial configuration**

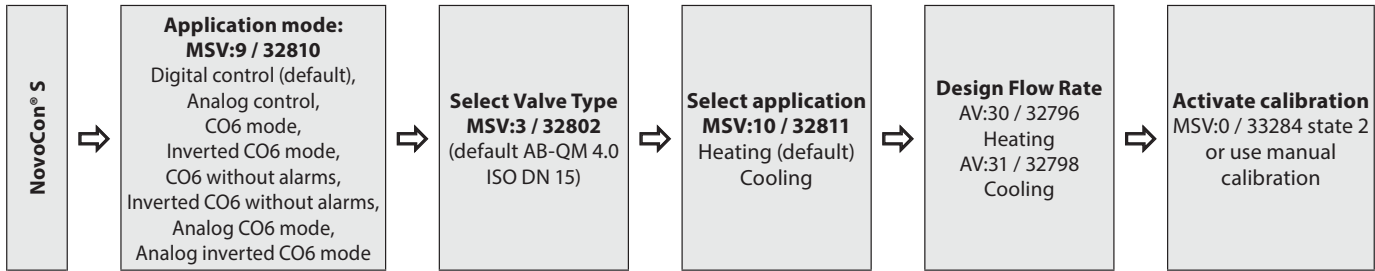

**13 Safety Note**

To avoid injury and damage to persons and devices, it is absolutely necessary these instructions are carefully read and observed prior to assembly and commissioning. Necessary assembly, start-up, and maintenance work must be performed only by qualified, trained and authorised personnel. Switch off the power line before wiring the actuator.

**Safety Note**

If the NovoCon® S network is supplied with two or more AC power boosters, caution must be observed when disconnecting one of the transformers from the high voltage power line. As the NovoCons are connected in a daisy chain, there may be high voltage on the primary side of the disconnected power supply. Disconnect always both the primary and secondary side of the transformer.

**Safety Note**

Connect via safety isolating transformer. Galvanic separations shall be provided for segments crossing buildings.

**Firmware update**

We recommend to validate the firmware version before installation. The latest firmware can be downloaded at [www.novocon.com](http://www.novocon.com) by selecting the tab: Support files.

Part Name 部件名称	Hazardous Substances Table/有害物质含量表					
	Pb/铅	Hg/汞	Cd/镉	Cr(VI)/六价铬	PBB/多溴联苯	PBDE/多溴二苯醚
Union nut / 连接螺母	X	O	O	O	O	O

O: Indicates that this hazardous substance contained in all of the homogeneous material for this part is below the limit requirement in GB/T 26572;  
O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X: Indicates that this hazardous substance contained in at least one of the homogeneous material for this part is above the limit requirement in GB/T 26572;  
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

**ИМПОРТЕР:**  
UA: ТОВ з ІІ «Данфосс ТОВ», вул. Вікентія Хвойки, 15/15/6, м. Київ, 04080, Україна

**Danfoss A/S**  
Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.  
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.