

Mounting Instruction

Revision set : Automatic air vent
Article No. : R73.287

Contents of the revision set:


- 1x Automatic air vent base (with o-ring 17x1.5)
- 1x Check valve (with o-ring 12x1.5)
- 1x Mounting instruction



NOTE: Before servicing the Spirovent Superior, make sure the unit is isolated from the power supply and that all pressure is released. (see chapter 7.3 of the user manual) Make sure that the fresh water supply is blocked.

Demounting old float valve

1. Remove smart switch from automatic air vent by
 - a. firstly loosening hose from restrictor,
 - b. then pulling clip away from restrictor.
2. Remove restrictor (2) by pulling it down.
3. Remove check valve incl. o-ring (3).
4. Demount automatic air vent (4).

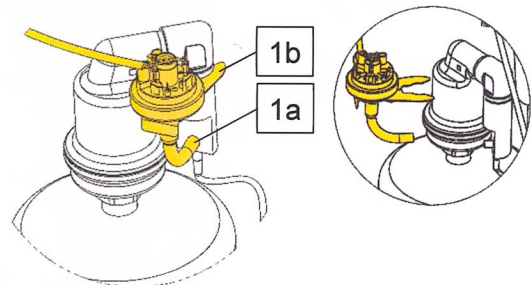

Mount new float valve

1. Replace the old automatic air vent with the new one. Be sure that the o-ring 17x1.5 is in its place (4a).
2. Mount automatic air vent (4) into the socket of vessel with $90 \pm 5 \text{ Nm}$.
3. Mount the new check valve (3). Be sure that the o-ring 12x1.5 of check valve is on it.
3. Mount back the restrictor (2).
4. Mount smart switch (1) by pushing clip into slots on restrictor (1b) until it snaps on. Be sure that the hose and clip are mounted correctly (1a). Avoid sharp bends!
5. See chapter 5.4 to take the Spirovent Superior in operation again.

