

Mounting Instruction

Revision set : Float valve
 Article No. : R73.262

Contents of the revision set:


- 1x Float valve
- 1x Gasket Ø15xØ10x1
- 1x Gasket Ø19xØ13x2
- 1x Mounting instruction



NOTE: Before servicing the Spirovent Superior, make sure the unit is isolated from the power supply and that all pressure is released. (see chapter 7.3 of the user manual) Make sure that the fresh water supply is blocked.

Demounting old float valve

1. First demount the float tank.
 - 1.1. Close the valve (1) in the refill line.
 - 1.2. Remove the suction pipe (2).
 - 1.3. Unscrew the mounting screw (3).
 - 1.4. Disconnect water supply hose (4).
 - 1.5. Disconnect the cable connector of the float switch (5).
2. Take the lid from the break tank (6).
3. Loosen the two screws (7).

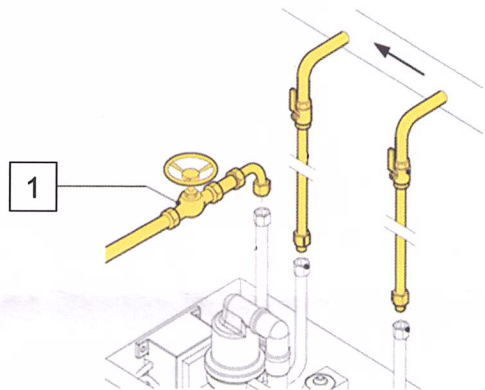

Mount new float valve

1. Replace the old break valve with the new one.
2. Tighten the two screws (7).
3. Mount the lid on the break tank (6).
4. Mount the float tank back to the unit.
 - 1.1. Connect the cable connector of the float switch (5).
 - 1.2. Connect water supply hose (4). (Don't forget to replace gasket.)
 - 1.3. Tighten the mounting screw (3).
 - 1.4. Mount back the suction pipe (2). (Don't forget to replace gasket.)
 - 1.5. Open the valve (1) in the refill line.

