


Mounting Instruction

Revision set : Interior for solenoid valve
 Article No. : R61.532

Contents of the revision set:

- A) 1x Armature tube
- B) 1x Armature with spring
- C) 1x O-ring
- D) 1x Diaphragm

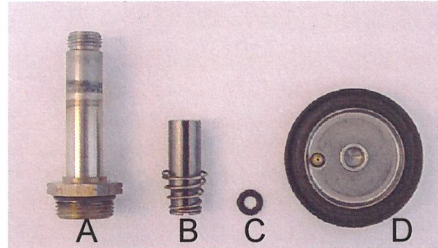

NOTE: Before servicing the Spirovent Superior make sure the unit is isolated from the power supply and that all pressure is released. (see chapter 7.2 of the user manual)




(De)mounting:

Note: It is not necessary to demount the complete solenoid valve from the Superior before servicing it.

- 1) Unscrew the nut (1) and remove the nut, washer and label.
- 2) Remove the coil (2) from the armature tube.
- 3) Open the valve by unscrewing the 4 bolts (3)
- 4) Unscrew the armature tube (4).
- 5) Replace the armature tube and the armature with spring (5).
- 6) Replace the O-ring (6) and the diaphragm (7).

NOTE: The diaphragm should be mounted exactly as shown on the picture meaning that the small opening in the diaphragm points to the O-ring.

- 7) Close the valve by screwing down the bolts.
- 8) Put the coil back on the armature tube.
- 9) Put the label and the washer back on the coil and screw the nut on top of it.

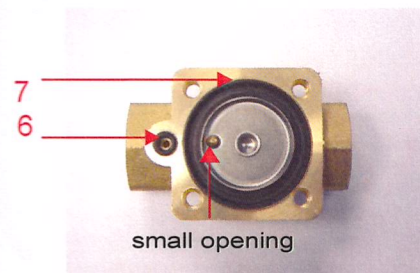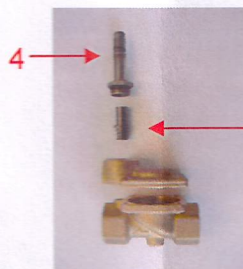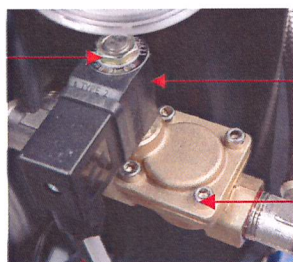

Putting the Spirovent Superior back into operation.
 See chapter 5.5.4 of the installation and operating instructions