


Mounting Instruction

Revision set : Rev. Flowmeter Huba Control
 Article No. : R61.424

Contents of the revision set:

- 1x Flowmeter
- 2x Gasket Ø19xØ13x2
- 1x Gasket Ø26xØ16x1,5
- 1x Mounting Instruction

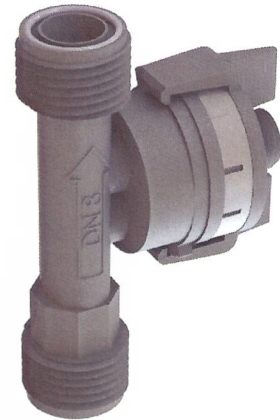

NOTE 1: Before servicing the Spirovent Superior, make sure the unit is isolated from the power supply and that all pressure is released. (see chapter 7.3 of the user manual) Make sure that the fresh water supply is blocked.

Demounting Flowmeter

1. Unscrew the cable sensor. (1)
2. Unscrew the housing of the non-return valve. (2)
3. Unscrew the coupling. (3)
4. Replace the old flowmeter with the new one. Make sure that the flow indicator arrow points upwards and that you're replacing the gaskets with the new ones.
5. Reassemble all parts in the following order: 3,2,1.

