


Mounting Instruction

Revision set : Automatic air vent
Article No. : R73.235

Contents of the revision set:


- 1x Automatic air vent base
- 1x Check valve (with o-ring 12x1.5)
- 1x O-ring EPDM 17x1.5
- 1x Mounting instruction

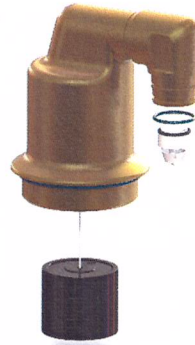

NOTE: Before servicing the Spirovent Superior, make sure the unit is isolated from the power supply and that all pressure is released. (see chapter 7.3 of the user manual) Make sure that the fresh water supply is blocked.


Demounting old float valve

1. Remove smart switch from automatic air vent by
 - a. firstly loosening hose from restrictor,
 - b. then pulling clip away from restrictor.
2. Remove restrictor (2) by pulling it down.
3. Remove check valve (3). (Don't forget to remove o-ring of check valve.)
4. Demount automatic air vent (4).

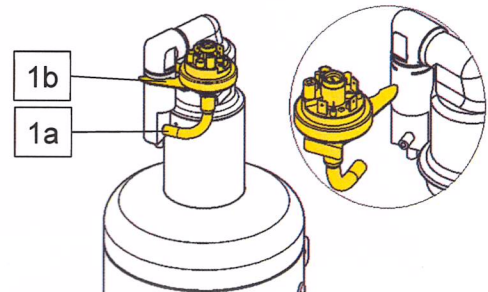

Mount new float valve

1. Replace the old automatic air vent with the new one. Be sure that the o-ring 17x1.5 is on its place (4a).
2. Mount automatic air vent (4) into the socket of vessel with 90±5Nm.
3. Mount the new check valve (3). Be sure that the o-ring 12x1.5 of check valve is on it.
3. Mount back the restrictor (2).
4. Mount smart switch (1) by pushing clip into slots on restrictor (1b) until it snaps on. Be sure that the hose and clip are mounted correctly (1a). Hose may not be nodded.

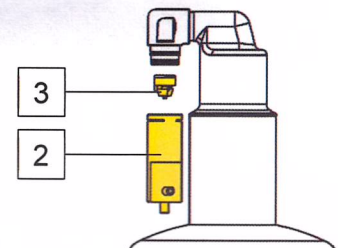

The slot where mounting clip of smart switch is slided.

