

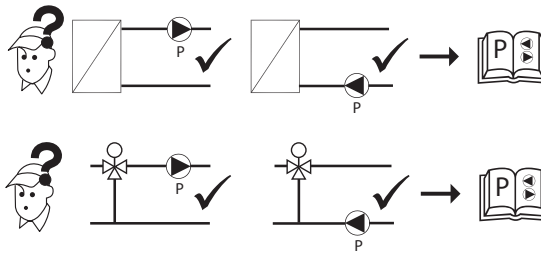
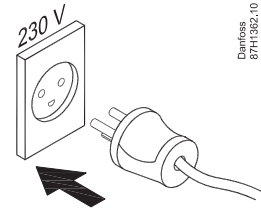
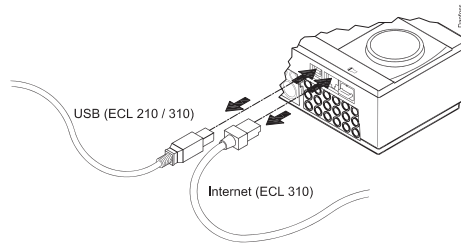


Installation Guide


ECL Comfort 310, A361 (code no. 087H3804)

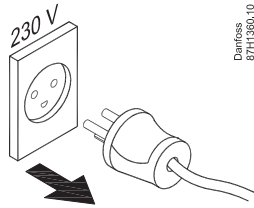

A361.1:

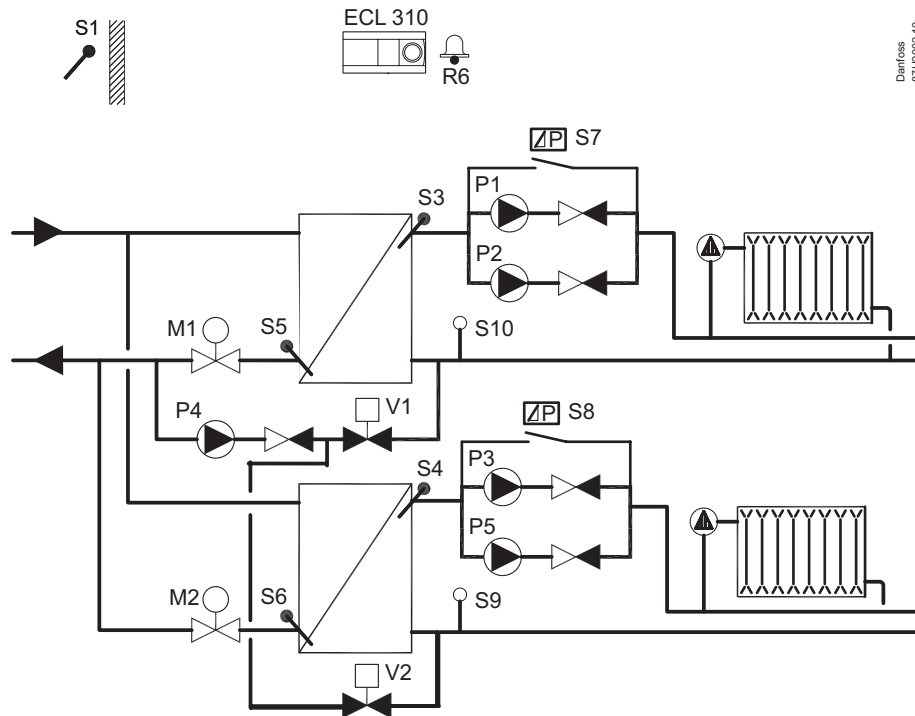


A361.2:

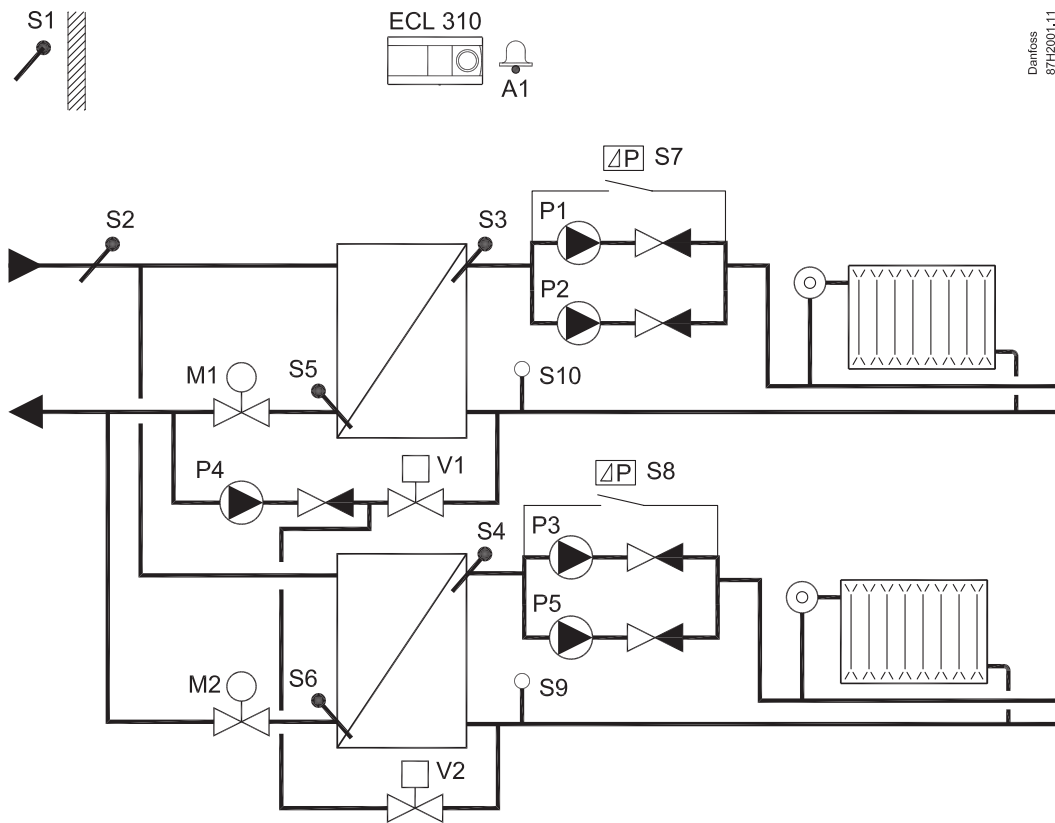


ECL Comfort 210 / 310:
230 V a.c.

R	4 (2) A / 230 V a.c.
R	0,2 A / 230 V a.c.
Tr	0,2 A / 230 V a.c.

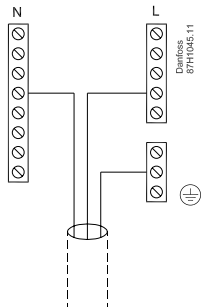


230 V a.c., A361.1 / A361.2:

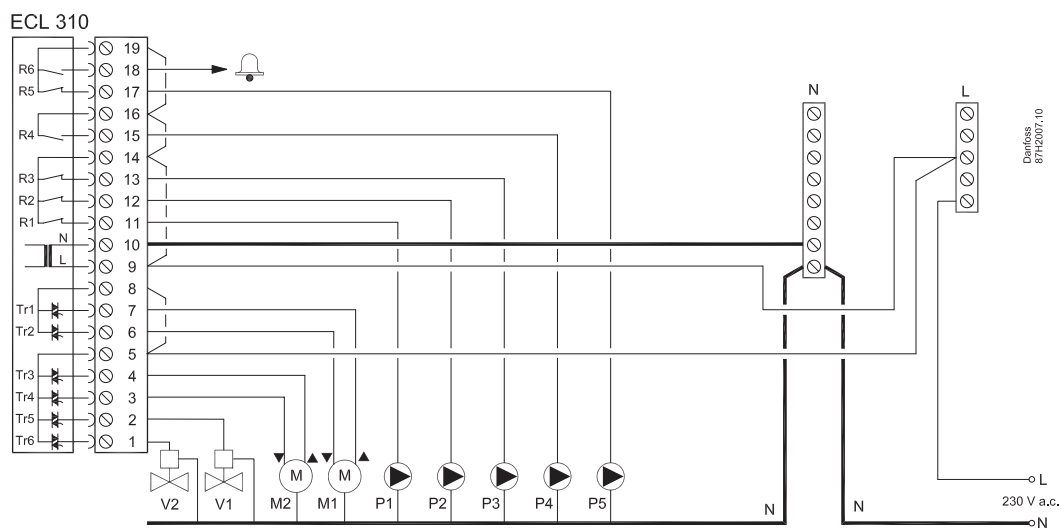

**ECL Comfort 310:
24 V a.c.**


R  R 	4 (2) A / 24 V a.c.
Tr 	1 A / 24 V a.c.

24 V a.c., A361.1 / A361.2:

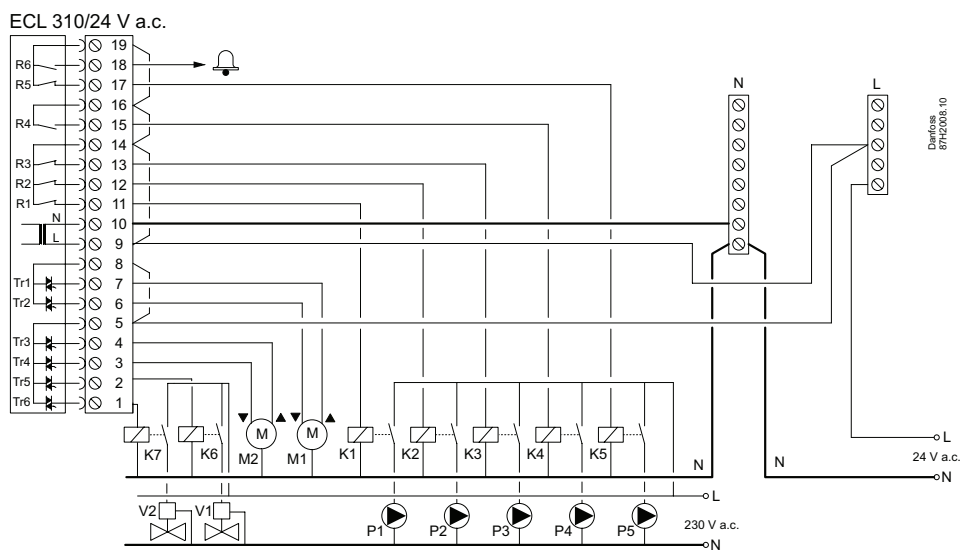


Installation Guide, ECL Comfort 310, A361

 **Pt 1000** (1000 Ω / 0 °C)

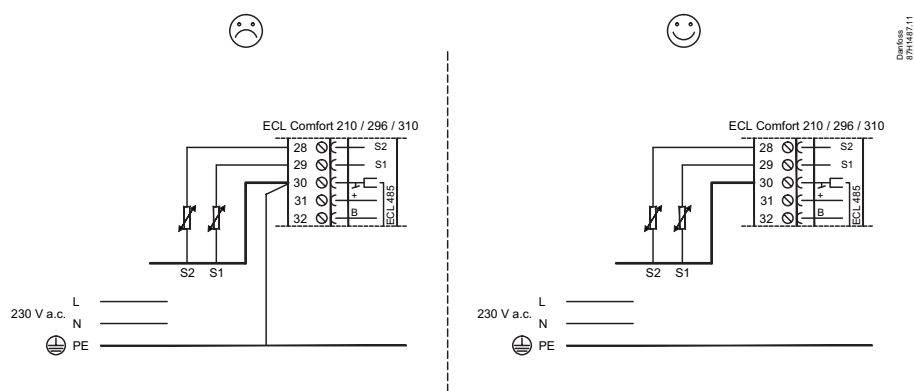


24 V a.c. / 230 V a.c. safety thermostat

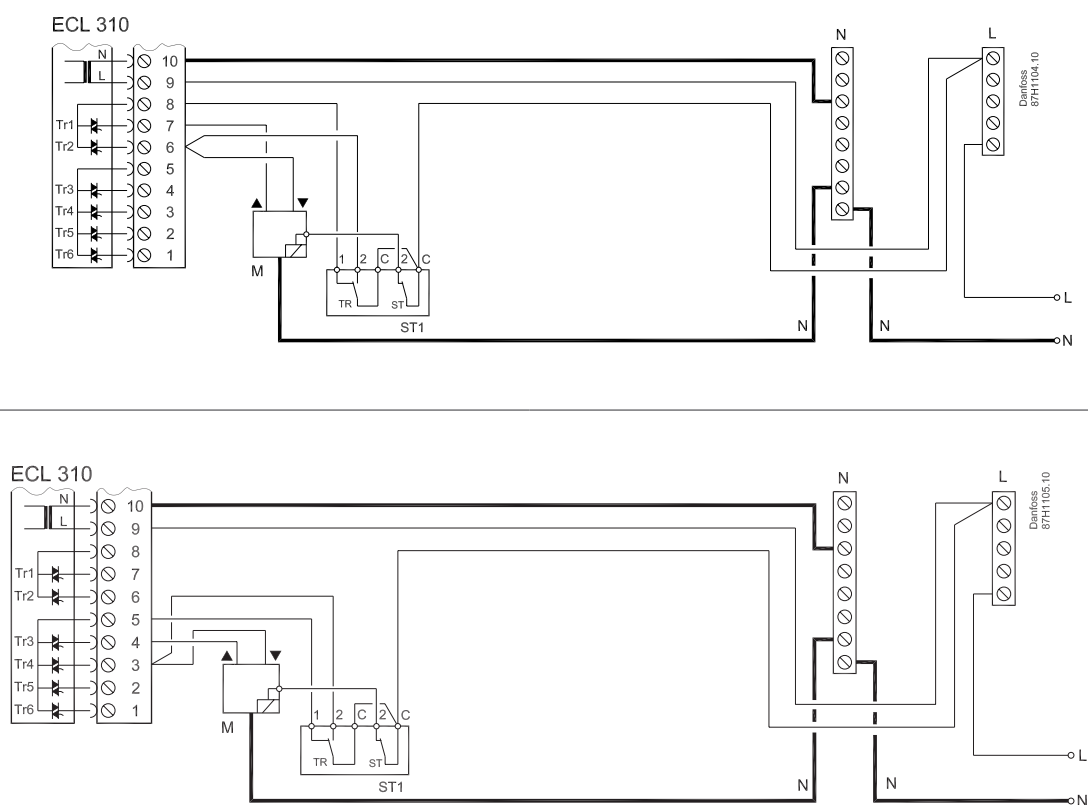


Pt 1000 (1000 Ω / 0 °C)


A361.1 ($\div$ S2) / A361.2

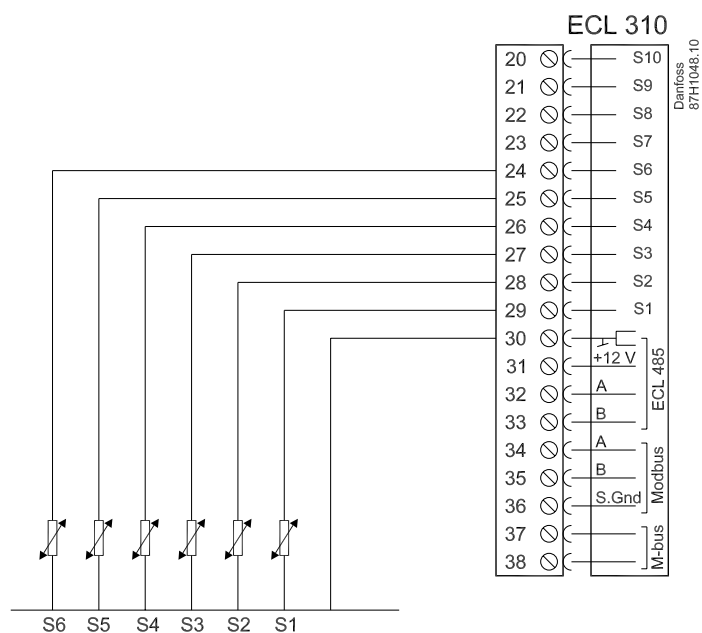


A361.1 / A361.2

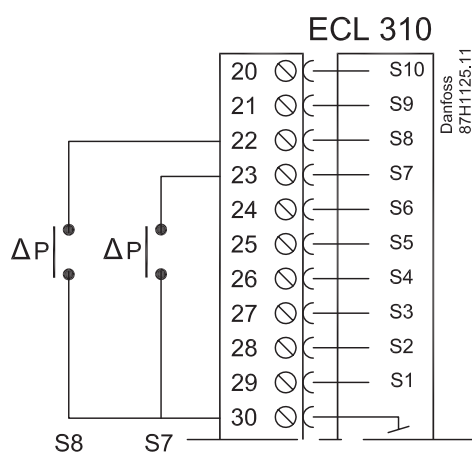


A361.1 / A361.2

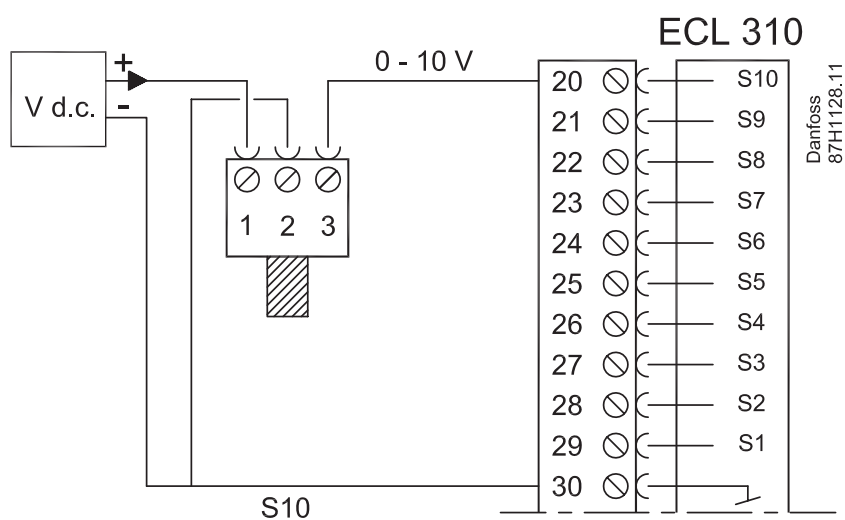



A361.1 / A361.2

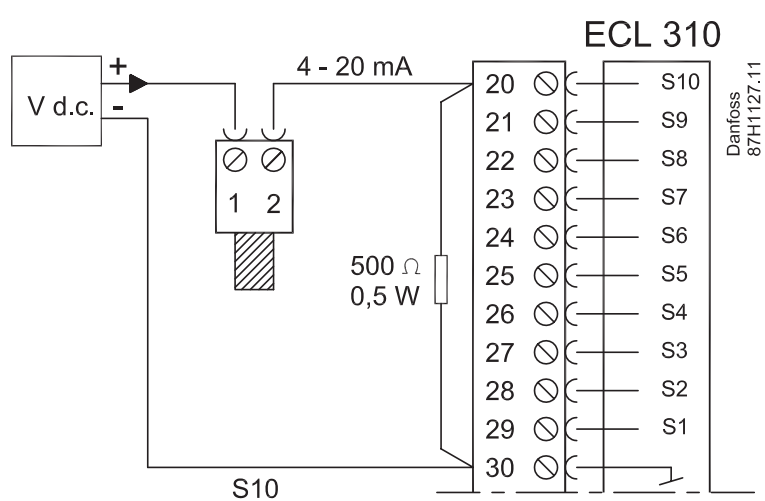


A361.1 / A362.2

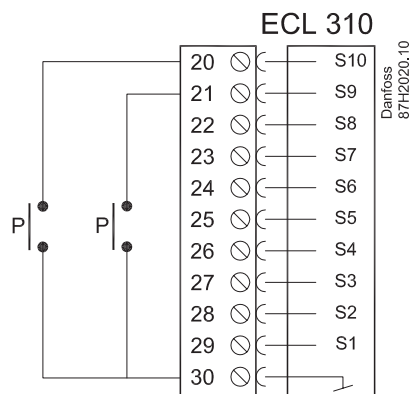


ECA 30 / 31

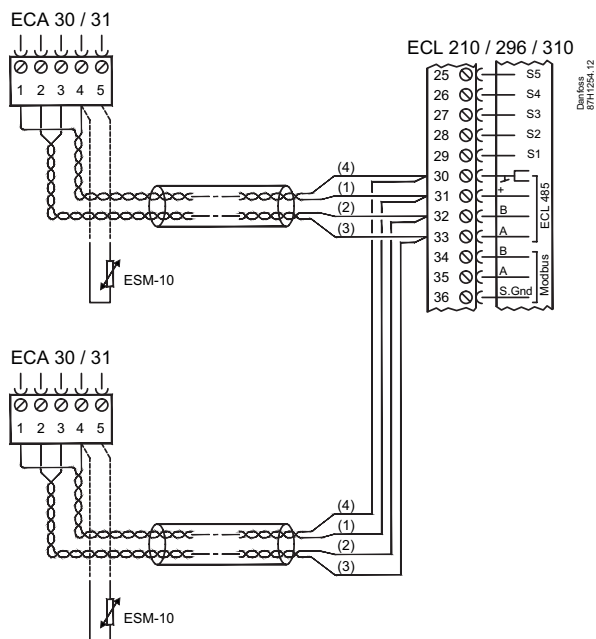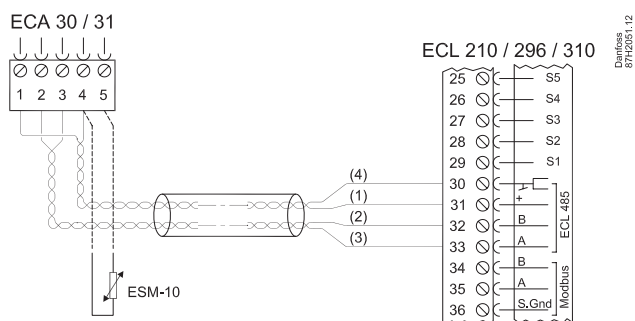


Master / slave

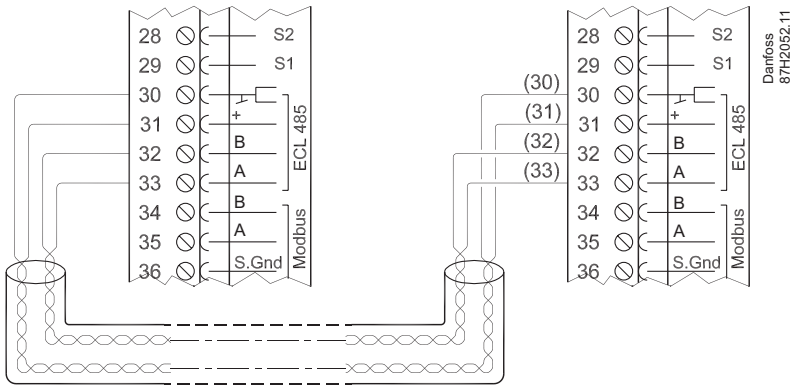


Modbus

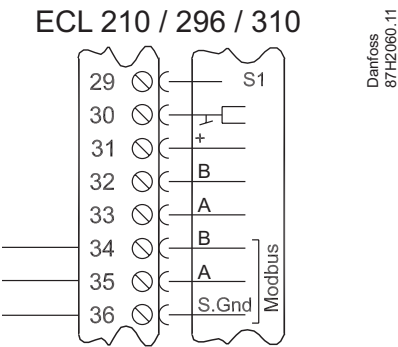


M- bus

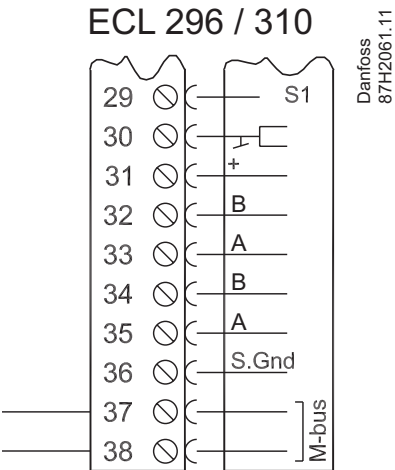


M-bus

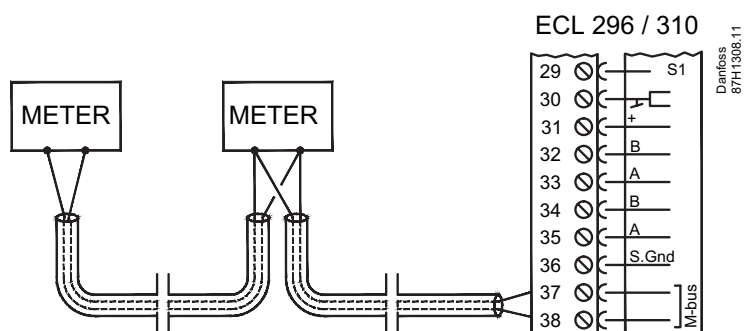

Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

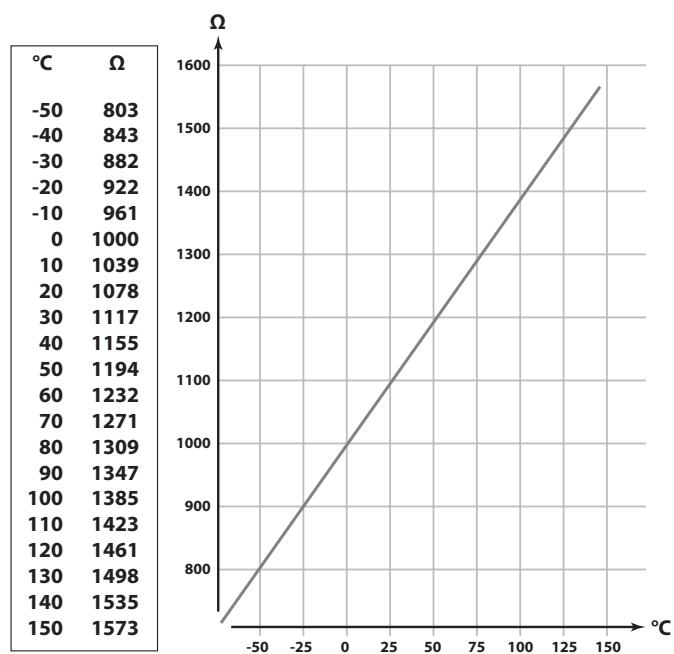


Heat curves

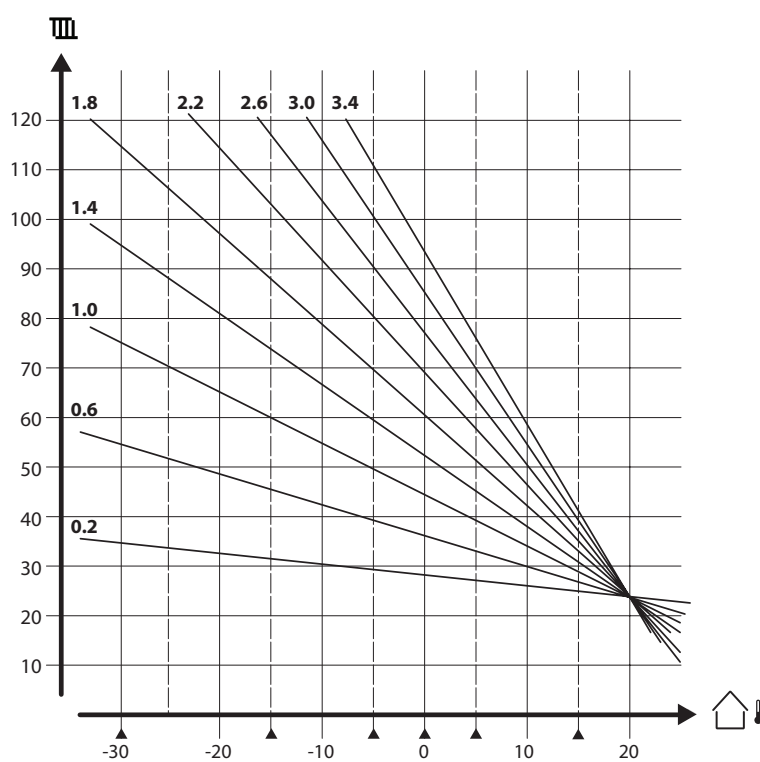


ECA 30


1

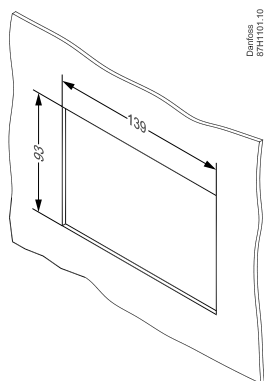


2

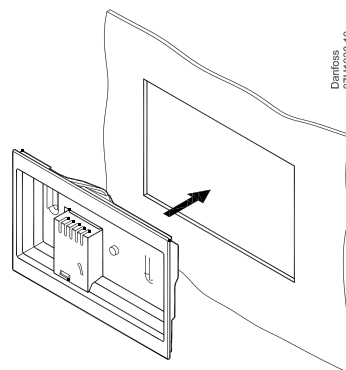


3

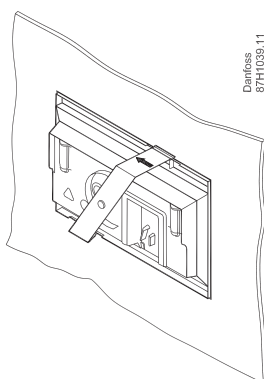


4

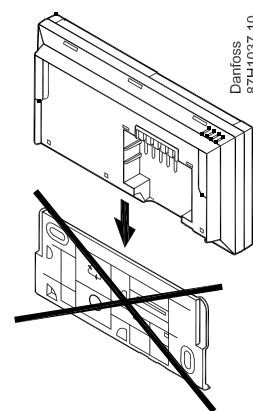


5

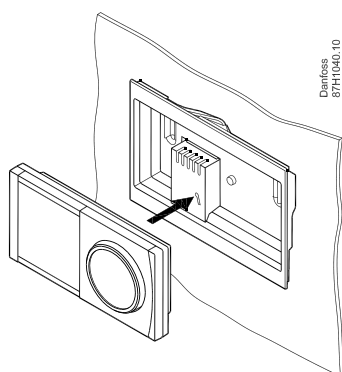


6

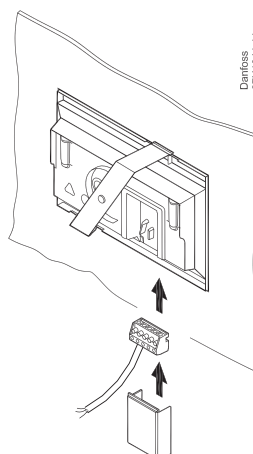

7

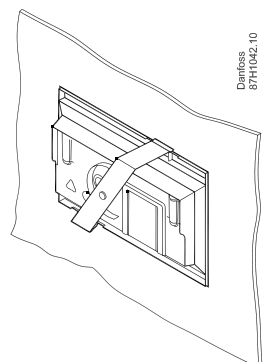


8

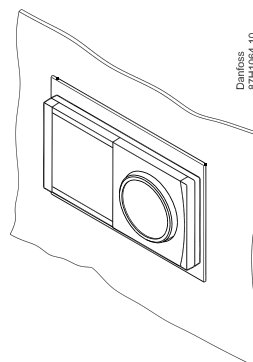


Installation Guide, ECL Comfort 310, A361


Danfoss
87H1021.11

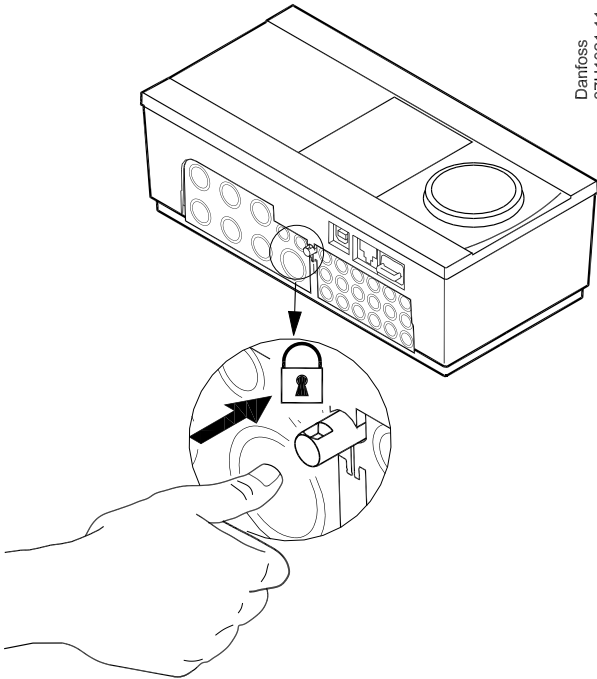


Danfoss
87H1017.11

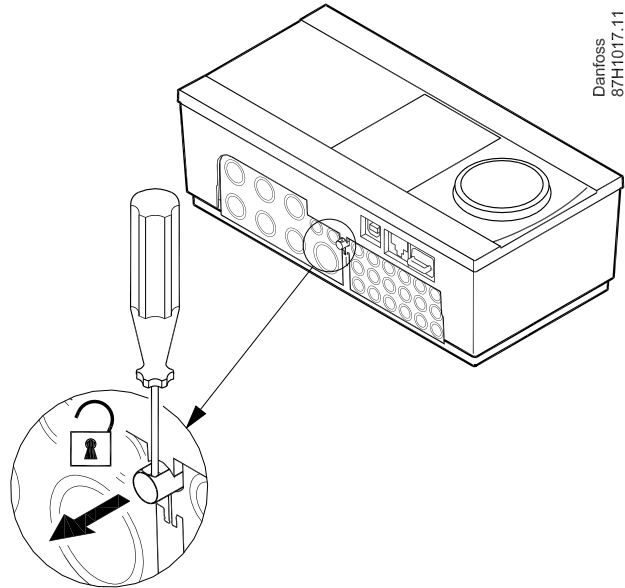

Danfoss
87H1073.11

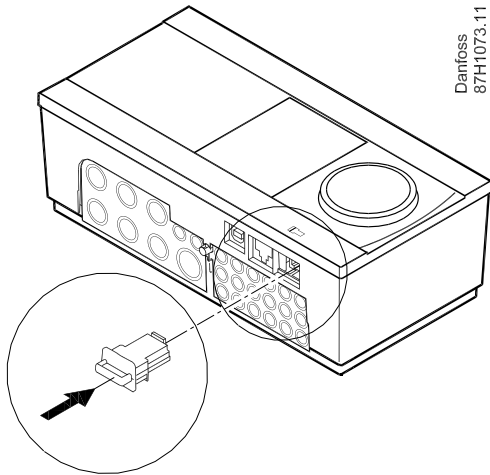

Danfoss
87H1074.11

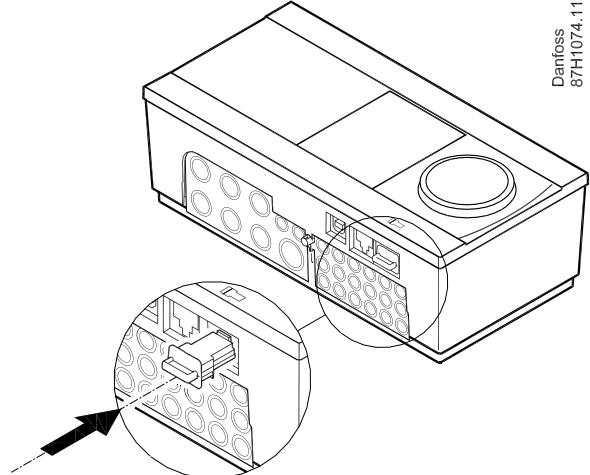

?  **ECL Comfort 310, A361: www.heating.danfoss.com**

