


SHARKY 775 Ultrasonic Compact Energy Meter

Installation and User Guide

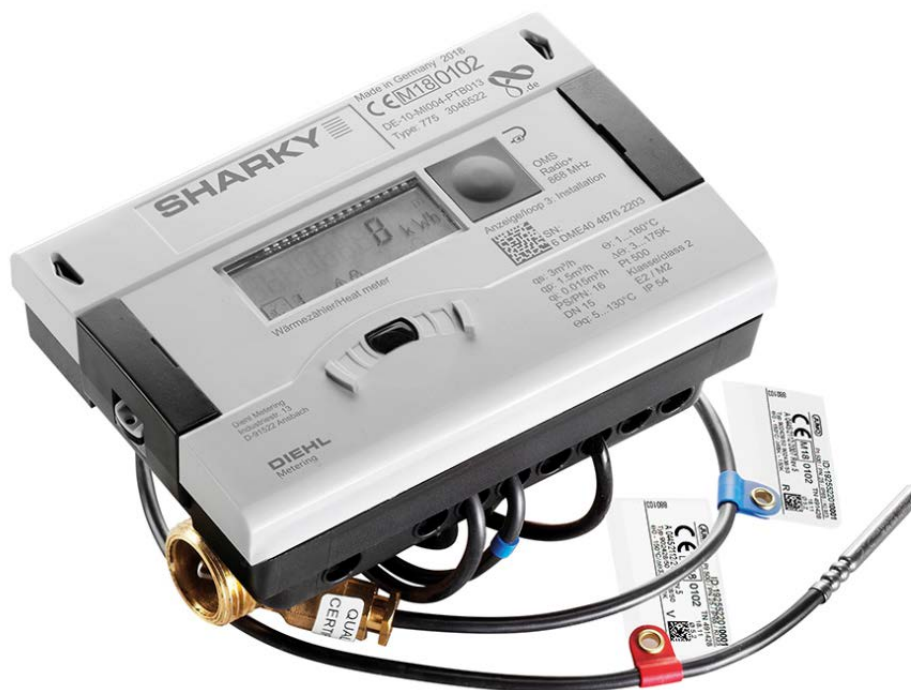

for software version F03-003

Diehl Metering GmbH
Industriestraße 13 · 91522 Ansbach · Germany · Phone +49 981 18 06-0 · Fax +49 981 18 06-615
Am Weimarer Berg 3 · 99510 Apolda · Germany · Phone +49 3644 84 33-0 · Fax +49 3644 84 33-411
info-dmde@diehl.com · www.diehl.com/metering

Subjects to technical alterations 23.04.2019 - EvS

Contents

1	General	5
1.1	About this Installation and User Guide	5
1.1.1	Target groups	5
1.1.2	Subject to change, validity	5
1.1.3	Completeness	5
1.1.4	Storage location	5
1.1.5	Warning signs in this manual	5
1.1.6	Symbols	6
1.2	Marking	6
1.2.1	CE marking	6
1.2.2	EU declaration of conformity	6
1.3	Copyright	6
2	Safety	7
2.1	Intended use	7
2.1.1	Misuse	7
2.2	Basic safety instructions	7
2.2.1	Product safety	7
2.2.2	Obligations of operator	7
2.2.3	Obligations of trained personnel/user	8
2.3	Specific hazards	8
3	Product description	9
3.1	Mechanical design	9
3.2	Scope of delivery	9
3.3	Labelling	10
3.4	Functional description	10
3.5	Power supply	11
3.5.1	Battery	11
3.5.2	Overview of the measuring rates	12
3.5.3	Mains unit	12
3.6	Calculator interfaces	13
3.6.1	Communication modules	15
	M-Bus module	15
	Communication via radio	15

RS-232 module.....	15
RS-485 module.....	15
L-Bus module.....	15
Modbus RTU.....	15
LonWorks.....	15
3.6.2 Function modules Pulse output module.....	16
Pulse input module.....	16
Module IN-OUT.....	16
Analogue module.....	16
3.7 Tariff function.....	17
4 Technical data.....	20
4.1 Dimensions / weight.....	20
4.2 General data.....	23
4.3 Power supply External power supply.....	23
4.4 Calculator interfaces.....	23
4.4.1 Communication modules.....	25
M-Bus.....	25
Communication via integrated radio.....	24
RS-232.....	24
RS-485.....	24
L-Bus.....	25
Modbus RTU.....	25
LonWorks.....	26
4.4.2 Function modules Pulse input module.....	26
Pulse output module.....	29
Module IN-OUT (Pulse-in and -output).....	30
Analogue output module.....	31
4.4.3 Test output.....	32
5 Transport, storage.....	33
5.1 Unpacking the energy meter.....	33
5.2 Transporting the energy meter.....	33
5.3 Storage of energy meter.....	33
6 Installation.....	34
6.1 Installing the energy meter.....	35
6.1.1 Installing the flow sensor.....	36
6.1.2 Flow/return setting (optional ex works).....	37
6.1.3 Installing the calculator.....	39
6.1.4 Connecting temperature sensor.....	41

6.1.5	Installation of the temperature sensors.....	43
6.2	Installing extension modules	45
	Overview of the possible combinations for the modules for slot 1 and 2	46
6.2.1	Display of the slot configuration	48
6.3	Connecting modules	49
6.3.1	Connecting communication modules	49
	RS-232 module.....	49
	RS-485 module.....	49
	L-Bus module	50
	Modbus RTU	50
	LonWorks	50
6.3.2	Connecting function modules Pulse input module.....	51
	Pulse output module	51
	Combined pulse input and output module	51
	Analogue output module	52
6.4	Connecting the mains voltage 230 V / 24 V	52
6.5	Programming the energy meter NOTE	52
7	Taking into operation.....	53
8	Operation.....	54
8.1	Display.....	54
8.2	Operation of meter	54
8.3	Display indications (default settings)	56
9	Maintenance and repair.....	65
10	Testing.....	65
11	Removal.....	65
11.1	Disposal of energy meter	65
12	Error analysis	66
13	Declaration of conformity	67

1 General

1.1 About this Installation and User Guide

This Installation and User Guide refers exclusively to the SHARKY 775 ultrasonic energy meter and is part of the product. It describes how to use this product safely for the intended purpose throughout the product life cycle.

1.1.1 Target groups

Operators

The operator must ensure that personnel using the energy meter read and observe the instructions given in this guide and all necessary associated documents, particularly the safety instructions and warning signs.

Trained personnel/users

Trained personnel must read, observe and follow the instructions given in this guide and the necessary associated documents, particularly the safety instructions and warning signs.

1.1.2 Subject to change, validity

The information contained in this Installation and User Guide is valid at the time of release of this version. The version number and release date of this Installation and User Guide are shown on the back of the document. Changes to this guide are possible at any time.

1.1.3 Completeness

This Installation and User Guide is only complete in conjunction with the relevant associated documents for the respective application.

1.1.4 Storage location

This Installation and User Guide and all relevant associated documents for the respective application must be readily available and accessible at all times in the vicinity of the meter or the overriding system.






1.1.5 Warning signs in this manual

The warning levels indicated by the warning signs are explained below.

Signal word	Level of danger	Consequences of non-compliance
DANGER	Direct threat of danger	Death or serious injury
WARNING	Possible threat of danger	Death or serious injury
CAUTION	Possible dangerous situation	Slight injuries

1.1.6 Symbols

The symbols used in this Installation and User Guide are explained below.

Symbol	Meaning
	This symbol is the safety sign. All measures marked with the safety sign must be observed. It is used on warning signs.
	This symbol is a safety sign indicating that the ESD (electrostatic discharge) regulations must be observed. It is used on warning signs. Do not touch electronic component on PCB or modules. Do not touch connectors or connected wires, which are connected to the meter.
	This symbol draws attention to information.
	This symbol indicates a requirement that must be fulfilled before taking action.
1. , 2. , ...	These numbers indicate the steps in a sequence of numbered actions.
	This symbol shows the instructions for avoiding danger in a warning instruction or an individual step.

1.2 Marking

1.2.1 CE marking

This product bears the CE marking, the metrology marking and the identification number of the notified body. See Section 3.

1.2.2 EU declaration of conformity

The ultrasonic energy meter complies with the directives and standards for MID-approved meters as stated in the EC declaration of conformity. The EC declaration of conformity contains the number of the EC type examination certificate. A copy of the EC declaration of conformity can be found at the end of this document.

1.3 Copyright

© 2015 Diehl Metering GmbH
All rights reserved.

No part of this Installation and User Guide may be reproduced in any form whatsoever (printing, photocopying or other process) or processed, reproduced or distributed by means of electronic systems without our written consent. Claims for damages will be asserted in the event of contravention.

Subject to change.

2 Safety



NOTE

Observe the following requirements before carrying out work of any kind.

2.1 Intended use

The ultrasonic energy meter is used for recording all billing data for local and district heating and cooling.

2.1.1 Misuse

Operation of the meter outside the specified operating and environmental conditions is not permitted.

2.2 Basic safety instructions

2.2.1 Product safety

The ultrasonic energy meter is produced to the latest state of the art and the recognized safety standards, but the possibility of danger to the user, adverse effects on the meter itself or on other property cannot be ruled out.

- ① Use the meter only for the intended purpose in a fault-free condition with due regard for safety and hazards and in compliance with this guide.
- ① Keep this guide and all associated documents in a complete and legible state and accessible to personnel at all times.
- ① Avoid any kind of work that endangers personnel, persons not involved or third parties.
- ① In addition to the complete documentation, observe all legal or other safety and accident prevention regulations and the applicable standards and directives in the respective country of operation.

2.2.2 Obligations of operator

Safe working

The operator of the system is responsible for ensuring that the energy meter is used only for the intended purpose with due regard for safety and hazards and in compliance with this Installation and User Guide.

He must ensure and monitor compliance with the following:

- ① that the meter is used for the intended purpose
- ① legal and other safety and accident prevention regulations
- ① applicable standards and directives of the country of operation

He must provide safety equipment.

Personnel qualifications

The operator must ensure that personnel working on the energy meter have read and understood this Installation and User Guide and all associated documents, particularly safety and repair instructions, before commencing work.

All work must be performed only by technically trained personnel:

- ① installation and repair work
- ① work on the electronic circuits

Safety equipment

Safety equipment must be provided if required.

- ① E.g. install stop valves before and after the meter to simplify removal and installation.

Warranty

- ① Obtain the manufacturer's approval before carrying out modifications, repair work or changes during the warranty period.
- ① Use only genuine parts or parts approved by the manufacturer.

2.2.3 Obligations of trained personnel/user

- ① Observe all instructions in the Installation and User Guide and on the meter that are relevant to handling the meter.
- ① Use safety equipment if necessary.
- ① Always disconnect the energy meter from the electrical supply before carrying out repair work.

2.3 Specific hazards



DANGER

Do not touch live parts during installation work.

Risk of serious injuries or death!

- ⇒ The meter installation is only to be performed by an installation and/or electrical contractor.
 - ⇒ Personnel must be trained in the installation of medium-voltage electrical Equipment (up to 1000V).
-



WARNING

Electrostatic discharge.

Risk of damage to energy meter and particularly electronic components, for which no liability is accepted!

- ⇒ Observe the relevant ESD (electrostatic discharge) regulations.
-



CAUTION

Electric and magnetic fields.

Risk of interference with electronic components in the energy meter!

- ⇒ Do not install the meter or the input/output cables near heavy electrical loads or their cables.
 - ⇒ Maintain the exact separation. This depends on the magnitude of the voltage and current of these loads.
 - ⇒ Consult a suitable expert in the event of doubt.
-

3 Product description

3.1 Mechanical design

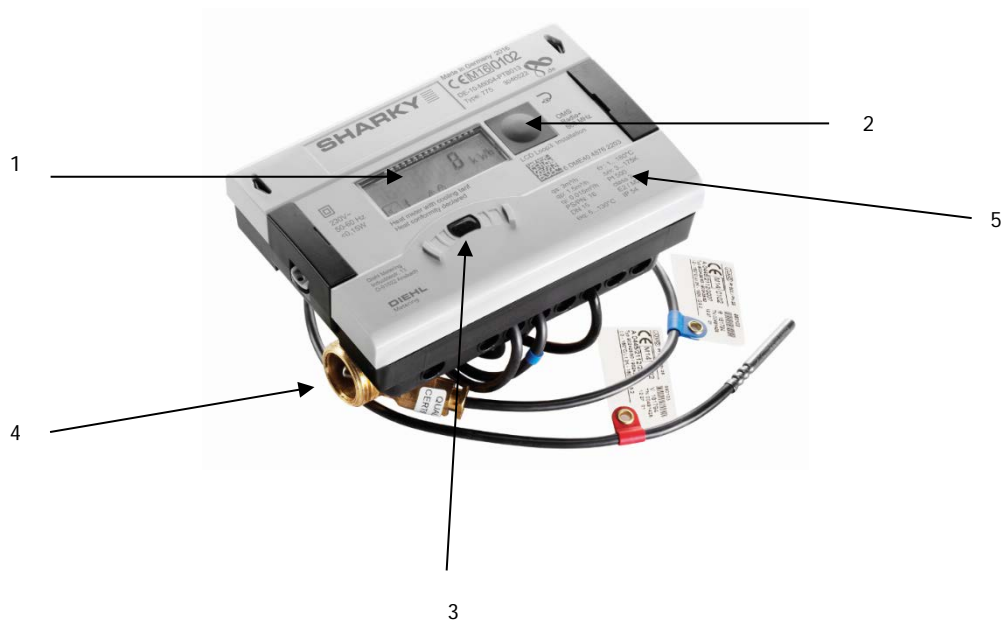


Fig. A Design of ultrasonic energy meter

- 1 LC display
- 2 Pushbutton
- 3 Optical ZVEI interface
- 4 Flow sensor
- 5 Laser labelling

3.2 Scope of delivery

The scope of delivery for the standard version includes the following:

- ① Ultrasonic energy meter
- ① Wall mounting set incl. fixing material
- ① Installation Guide
- ① Installation kit for temperature sensors

3.3 Labelling

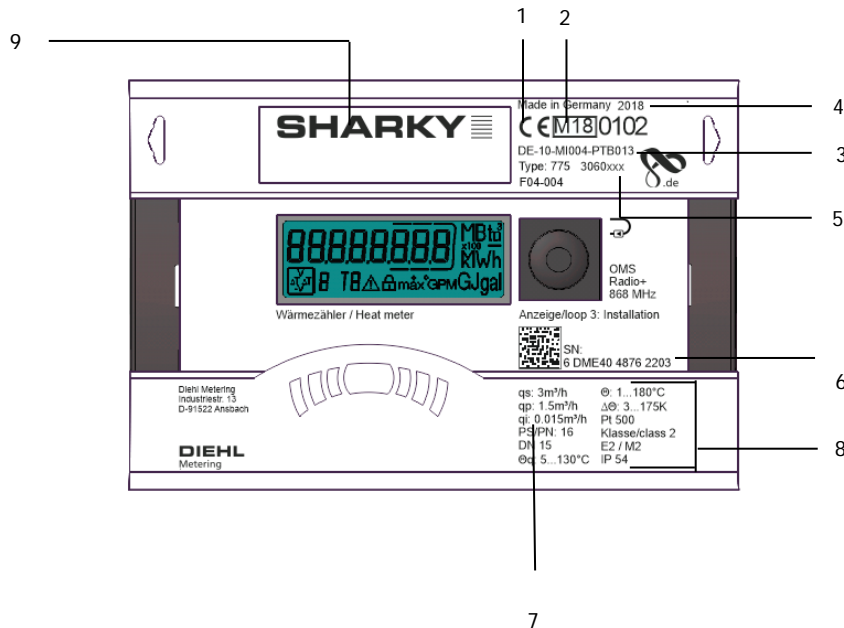


Fig. B Labelling (example)

The meter is labelled using a laser.

- 1 Conformity mark
- 2 Year of declaration of conformity
- 3 EU type examination certificate number
- 4 Year of manufacture
- 5 Meter article number
- 6 Meter serial number
- 7 Flow sensor data
- 8 Calculator data
- 9 Product name

3.4 Functional description

The ultrasonic energy meter is a static compact meter and a fully electronic measuring instrument based on the ultrasonic metering principle. It is equipped with a data memory that enables comparison of the previous months' readings with the current readings. The data read by the calculator are shown in the display. The display is provided with various windows as loop functions that can be called up in succession to display the system information assigned to each window (e.g. energy amounts, water amounts, current temperatures, maximum values).

The energy meter has 6 display loops: main loop, accounting date loop, info loop, pulse input loop, tariff loop and monthly value loop. The individual loops are described in Section 8 "Operation". Some windows in a loop and whole display loops can be deactivated separately to make the window structure clearer.

Various display windows comprise up to seven displays that change at intervals of 2 – 4 s. The loops in the display are numbered from 1 to 6 to help the user find his way around quickly. The main loop is programmed with the current data as default setting, e.g. for energy, volume, flow rate and other parameters. It is not possible to change the order of the available data.

3.5 Power supply

Possible power supplies:

- ① A cell, 3.6 V DC lithium battery, with a lifetime of 11 years (standard version, with radio)
- ① D cell, 3.6 V DC lithium battery, with a lifetime of 16 years
- ① Mains unit 24 V AC
- ① Mains unit 230 V AC

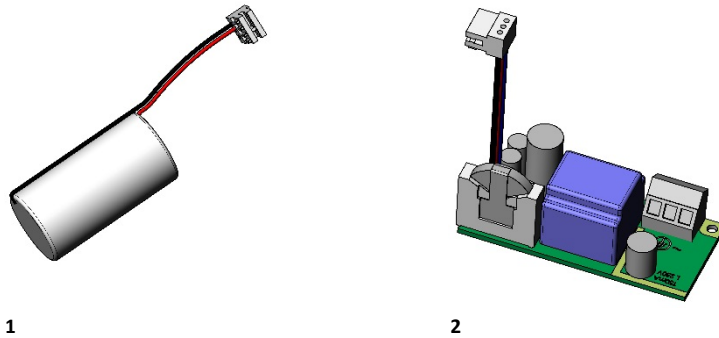


Fig. C. Power supplies

- 1 A or D cell, 3.6 V DC lithium battery
- 2 Mains unit 24 V AC / 230 V AC

The various power supplies can be changed in the field.



NOTE

The meter switches automatically to power save mode if the button is not pressed for approx. 4 minutes. The display is also switched off in this case, but can be switched on again by pressing the button. Communication is maintained, e.g. over the M-Bus or the optical interface. The meter does not switch to power save mode if an error exists. The error is shown in the display as an error code.

Never connect between two phases if a mains unit is used, as this would destroy the mains unit. The protective safety cover must be installed at all times. The cable is to be fused at max. 6 A and protected against manipulation.

Used batteries must be disposed of at suitable collection points.

3.5.1 Battery

A 3.6 V DC lithium battery is fitted in the standard version. The battery is not to be charged or short-circuited. Ambient temperatures below 40 °C extend the life of the battery.



DANGER

⇒ There is a risk of explosion if the battery is replaced with the wrong type of battery.

3.5.2 Overview of the measuring rates

The following table shows the lifetime of the batteries depending on the standard measuring rates. Customer versions can differ from the standard measuring rates in the measuring rate and battery lifetime.

DM Standard (av. Amb.Temp.: 22°C)	Battery-Lifetime [anno]	radio Interval [s]	measuring rate (independent from radio) [s]	
	A-Cell up to		flow	Temperature
no radio/ no Module	12	-	1	16
868MHz	11	180		
434MHz	11	180		
Quick mode	6,5	12		
	D-Cell up to			
no radio/ no Module	16	-	1	4
868MHz	16	12		
434MHz	16	12		
	mains			
no radio/ no Module	no limit	-	8Hz.	2
868MHz	no limit	12		
434MHz	no limit	12		

¹: for "moderate" ambient temperature. Temperature above 35°C reduces the lifetime. The temperature at storage of the meter in a warehouse shall be less than 35°C.

The calculation of flow and volume is will be done every 2 seconds
After that the display is updated every 2 seconds.

To save energy the meter tries to do all its operations like metering, calculation and updating the display at the same time.

3.5.3 Mains unit

The mains unit indicates to the meter if mains voltage is present. If the mains unit fails, the back-up battery (CR2032) in the mains unit provides the power supply for up to 1 year. This back-up battery can be replaced if necessary. The LCD readings (on pressing button) and the date and time are still updated, but none of the measuring functions work, incl. the flow rate measurement. Communication still functions over the optional M-Bus, RS485 and RS232 modules or the optical interface, but this reduces the life of the back-up battery. The integrated radio function is switched off in the event of mains failure.

3.6 Calculator interfaces

The meter is equipped as standard with a ZVEI optical interface. This is located on the calculator below the display (Fig. D). This interface can be used for communication with the meter (using the IZAR@mobile software) and for checking the meter.

Communication uses the M-Bus protocol, for which the Bluetooth IZAR OH BT opto head is suitable.

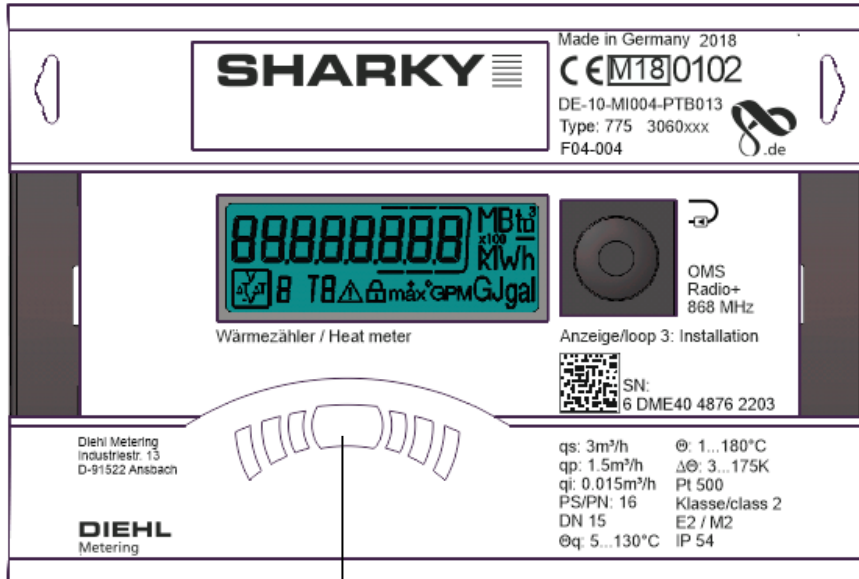


Fig. D Front of calculator
1 Optical ZVEI interface

1

The energy meter has two slots for extension modules, slot 1 and slot 2 (Fig. E). In addition, the meter can be equipped with an integrated radio.

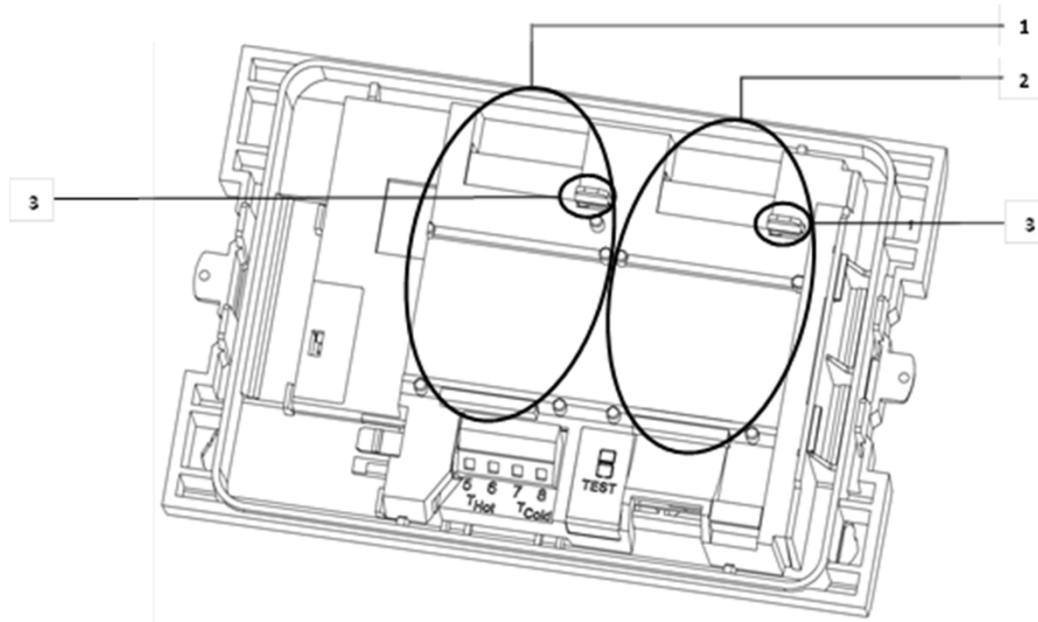


Fig. E Slots

- 1 Slot 1
- 2 Slot 2
- 3 Fixing clip



NOTE

The meter recognizes automatically which module is inserted. This is shown in the display loop 3 based on a module code. See also point 6.2.1.



NOTE

If other external devices are connected to the meter, these must be of the safety extra-low voltage (SELV) type and comply with EN 60950-1.

3.6.1 Communication modules

The meter supports three communication channels over the same or different interfaces. If the meter has an integrated radio, it is possible to use additional the two slots for modules. The protocol is different for each of the two modules and is present ex works, but can be programmed to customer-specific requirements using the IZAR@Mobile2 software. The content of the radio protocol is the same as the content from slot 2. Each module has its own primary address. Both modules have one secondary address, which is set to the serial number ex works. The meter is equipped with automatic baud rate detection.

M-Bus module

The M-Bus communication module is a serial interface for communication with external devices (M-Bus repeater), e.g. IZAR CENTER. It is possible to connect more meters to one M-Bus master.

Communication via radio

The integrated radio function is an interface for communication of predefined protocols with Diehl Metering radio receivers. The communication protocol is preset, but can be defined to a customer-specific protocol using the IZAR@Mobile2 software. By default, the internal radio is disabled. When the meter detects a flow, the integrated radio is enabled. If the meter detects a flow without an interruption at least 3 hours, the radio stays on, otherwise it is switched off again.

RS-232 module

The RS-232 communication module is a serial interface for communication with external devices, e.g. a PC. The transmission speed is 300 or 2400 baud. A special data cable is required for connecting this module to the PC. (Order no.: 087H0121)

RS-485 module

The RS-485 communication module is a serial interface for communication with external devices, e.g. a PC. It can only communicate at a transmission speed of 2400 baud.

L-Bus module

The L-Bus communication module is a serial interface for communication with an external radio module, in which the M-Bus protocol is transmitted. It can be used for example if the radio range of the internal radio is not enough.

Modbus RTU

The Modbus RTU module ensures a simple integration from SHARKY heat meters in to the Modbus network systems using EIA-485 channel.

LonWorks

The LonWorks module is designed for SHARKY heat meters for data transmission in the LonWorks network using the TP / FT-10 physical channel.

3.6.2 Function modules Pulse output module

This module contains connections for two pulse outputs, which can be programmed as desired using the IZAR@Mobile2 software. The energy pulse output is marked as "01 - 1" on the module and "Out1" in the display. The volume output is marked as "02 - 1" on the module and "Out2" in the display.

Pulse input module

This module has 2 pulse inputs for connecting 2 additional pulse meters, such as water meters, gas meters or electricity meters. The possibility of programming the pulse value using the IZAR@Mobile2 software enables volume or energy values to be displayed and transmitted remotely over a suitable communication module. Initial meter counts can also be parametrized for these two pulse inputs.

Module IN-OUT

The Module IN-OUT is equipped with two pulse inputs and a pulse output, which can be programmed as desired using the IZAR@Mobile2 software. Pulse input 1 is marked "I1 - 1" on the module and "IN1" in the display, pulse input 2 "I2 - 1" on the module and "IN2" in the display. The pulse output is marked "O1 - 1" on the module and "Out1" in the display. The pulse output on this module is not galvanic isolated.

Analogue module

The analogue module has the size of 2 standard modules and has two 4-20 mA outputs. If an analogue module is mounted in the meter, no other module can be installed. The internal radio is still working. The connection cable between the main pcb board and the module has to be installed on port 1 (left slot). By default, the two analogue outputs are not programmed, the values can be programmed with the IZAR@Mobile2 software (standard version).

3.7 Tariff function

The meter has five flexible tariff function.

A tariff is a cumulating register, which starts accumulation after its defined function is valid.

The following tariff unit are selectable:


- Energy
- Volume
- time

Different thresholds are definable for each tariff independently:

Tariff counter 1

Type	gate	LCD text
ΔT	$\Delta T < \text{Threshold}$	tz000y
ΔT	$\Delta T \geq \text{Threshold}$	tz010y
T_R	$T_R < \text{Threshold}$	tz001y
T_R	$T_R \geq \text{Threshold}$	tz011y
T_F	$T_F < \text{Threshold}$	tz002y
T_F	$T_F \geq \text{Threshold}$	tz012y
	fix enable	tz003y
P	Power < Threshold	tz004y
P	Power \geq Threshold	tz014y
F	Flow rate < Threshold	tz005y
F	Flow rate \geq Threshold	tz015y
C	Based on time	tz006y
E	External controlled	tz007y

Example: $\Delta t \geq 30K$ (tz010y) – accumulate power

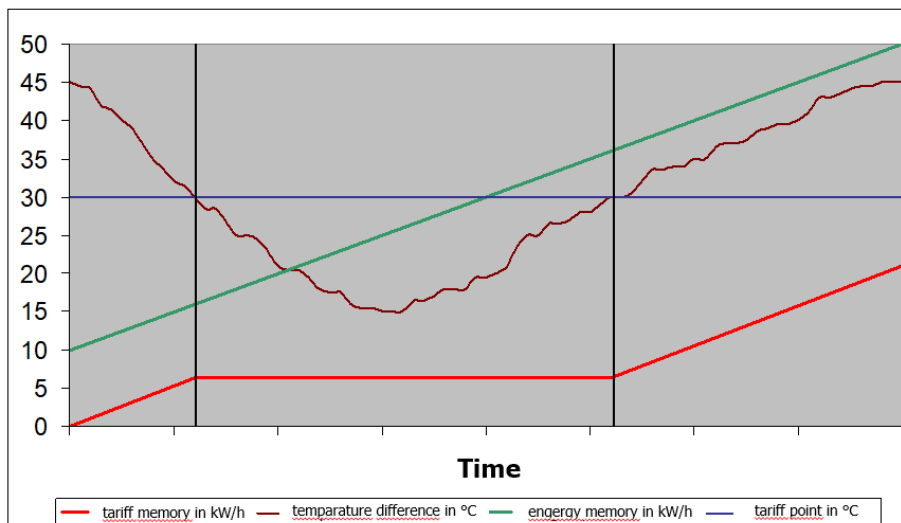

The meter accumulate the power to the defined tariff register when the function is active

Tariff counter 2..4

Type	Gate	LCD text
ΔT	$\Delta T < \text{Threshold}$	tz000y
ΔT	$\Delta T \geq \text{Threshold}$	tz010y
T_R	$T_R < \text{Threshold}$	tz001y
T_R	$T_R \geq \text{Threshold}$	tz011y
T_F	$T_F < \text{Threshold}$	tz002y
T_F	$T_F \geq \text{Threshold}$	tz012y
	fix enable	tz003y
P	Power < Threshold	tz004y
P	Power \geq Threshold	tz014y
F	Flow rate < Threshold	tz005y
F	Flow rate \geq Threshold	tz015y
C	Based on time	tz006y
E	External controlled	tz007y
ΔT	$\Delta T < \text{Threshold AND NOT Tariff x-1 enable}$	tz100y
ΔT	$\Delta T \geq \text{Threshold AND NOT Tariff x-1 enable}$	tz110y
T_R	$T_R < \text{Threshold AND NOT Tariff x-1 enable}$	tz101y
T_R	$T_R \geq \text{Threshold AND NOT Tariff x-1 enable}$	tz111y
T_F	$T_F < \text{Threshold AND NOT Tariff x-1 enable}$	tz102y
T_F	$T_F \geq \text{Threshold AND NOT Tariff x-1 enable}$	tz112y
	fix enable AND NOT Tariff x-1 enable	tz103y
P	Power < Threshold AND NOT Tariff x-1 enable	tz104y
P	Power \geq Threshold AND NOT Tariff x-1 enable	tz114y
F	Flow rate < Threshold AND NOT Tariff x-1 enable	tz105y
F	Flow rate \geq Threshold AND NOT Tariff x-1 enable	tz115y
C	Based on time AND NOT Tariff x-1 enable	tz106y
E	External controlled AND NOT Tariff x-1 enable	tz107y

The meter is supporting different count modes.


This function helps to switch on/off the tariff count only, when the meter measuring results are in a certain quadrant:

Counting	dT	Flow rate
Energy quadrant 1	+	+
Energy quadrant 4	-	+
Energy quadrant 2	+	-
Energy quadrant 3	-	-
Forward energy quadrant 1	+	+
Forward energy quadrant 4	-	+
Return energy quadrant 1	+	+
Return energy quadrant 4	-	+
Time counting		
Volume counting +		+
Volume counting -		-

The meter supports three different function for Bonus/Malus.

Start tariff accumulation energy, volume or time (named part in the following)

Arrow	Explanation	accumulation
blue	Total amount (for energy or volue)	Total amount of Energy, volume
red	part between threshold and T-return	Tariff part of Energy, volume, time
green	part between T_return and threshold	Tariff part of Energy, volume, time
yellow	total amount when the T_return is below threshold	Tariff part of Energy, volume, time

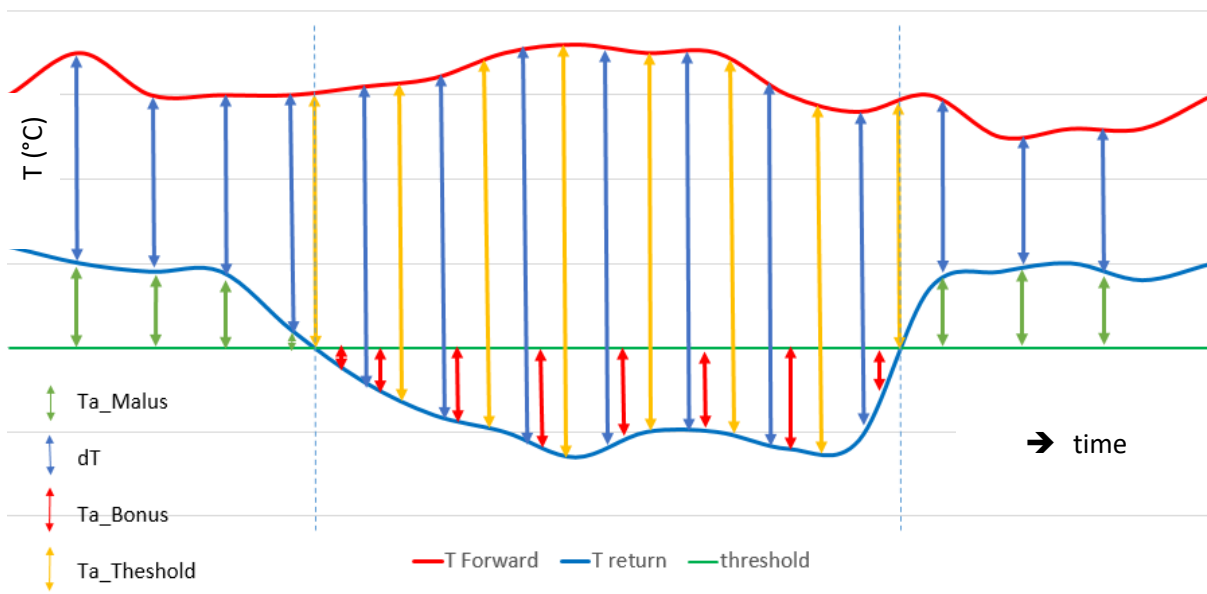

Formula for e.g. energy:

$$T_{total} = K' * m^3 * (T_f - T_r)$$

$$T_{a_Malus} = K' * m^3 * (T_r - T_{threshold})$$

$$T_{a_Bonus} = K' * m^3 * (T_{threshold} - T_r)$$

$$T_{a_threshold} = K' * m^3 * (T_f - T_r) \text{ when } T_r \text{ is lower than threshold}$$

K' - depends on the flow sensor installation - inlet or outlet

4 Technical data

4.1 Dimensions / weight

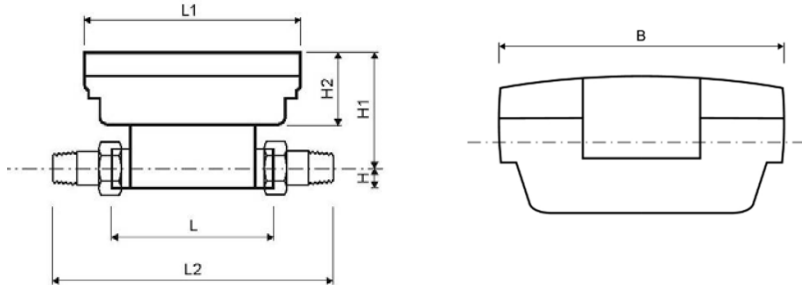


Fig. F

Nominal flow rate	q_v	m ³ /h	0.6	0.6	0.6	1.5	1.5	1.5	2.5
Nominal diameter	DN	mm	15	20	20	15	20	20	20
Overall length	L	mm	110	130	190	110	130	190	130
Overall length with coupling	L2	mm	190	230	290	190	230	290	230
Length of calculator	L1	mm	150	150	150	150	150	150	150
Height	H	mm	14.5	18	18	14.5	18	18	18
Height	H1	mm	82	84	84	82	84	84	84
Height of calculator	H2	mm	54	54	54	54	54	54	54
Width of calculator	B	mm	100	100	100	100	100	100	100
Connection thread on meter		Inch	G $\frac{3}{4}$ B	G1B	G1B	G $\frac{3}{4}$ B	G1B	G1B	G1B
Connection thread of coupling		Inch	R $\frac{1}{2}$	R $\frac{3}{4}$	R $\frac{3}{4}$	R $\frac{1}{2}$	R $\frac{3}{4}$	R $\frac{3}{4}$	R $\frac{3}{4}$
Weight ¹		kg	0.76	0.85	0.96	0.76	0.85	0.96	0.85
Nominal flow rate	q_v	m ³ /h	2.5	3.5	3.5	3.5	3.5	3.5	6
Nominal diameter	DN	mm	20	25	25	25	32	32	25
Overall length	L	mm	190	135	150	260	150	260	135
Overall length with coupling	L2	mm	290	255	270	380	270	380	255
Length of calculator	L1	mm	150	150	150	150	150	150	150
Height	H	mm	18	23	23	23	23	23	23
Height	H1	mm	84	88.5	88.5	88.5	88.5	88.5	88.5
Height of calculator	H2	mm	54	54	54	54	54	54	54
Width of calculator	B	mm	100	100	100	100	100	100	100
Connection thread on meter		Inch	G1B	G1 $\frac{1}{4}$ B	G1 $\frac{1}{4}$ B	G1 $\frac{1}{4}$ B	G1 $\frac{1}{2}$ B	G1 $\frac{1}{2}$ B	G1 $\frac{1}{4}$ B
Connection thread of coupling		Inch	R $\frac{3}{4}$	R1	R1	R1	R1 $\frac{1}{4}$	R1 $\frac{1}{4}$	R1
Weight ¹		kg	0.96	1.03	1.08	1.5	1.23	1.5	1.03
Nominal flow rate	q_v	m ³ /h	6	6	6	6	6	10	
Nominal diameter	DN	mm	25	25	32	32	40	40	
Overall length	L	mm	150	260	150	260	150	200	
Overall length with coupling	L2	mm	270	380	270	380	-	340	
Length of calculator	L1	mm	150	150	150	150	150	150	
Height	H	mm	23	23	23	23	23	33	
Height	H1	mm	88.5	88.5	88.5	88.5	88.5	94	
Height of calculator	H2	mm	54	54	54	54	54	54	
Width of calculator	B	mm	100	100	100	100	100	100	
Connection thread on meter		Inch	G1 $\frac{1}{4}$ B	G1 $\frac{1}{4}$ B	G1 $\frac{1}{2}$ B	G1 $\frac{1}{2}$ B	G2B	G2B	
Connection thread of coupling		Inch	R1	R1	R1 $\frac{1}{4}$	R1 $\frac{1}{4}$	R1 $\frac{1}{2}$	R1 $\frac{1}{2}$	
Weight ¹		kg	1.08	1.5	1.23	1.5	1.52	2.9	

Nominal flow rate	q _n	m ³ /h	10	15	25	40	60	100
Nominal diameter	DN	mm	40	50	65	80	100	100
Overall length	L	mm	300	270	300	300	360	360
Overall length with coupling	L2	mm	440	-	-	-	-	-
Length of calculator	L1	mm	150	-	-	-	-	-
Height	H	mm	33	-	-	-	-	-
Height	H1	mm	94	-	-	-	-	-
Height of calculator	H2	mm	54	-	-	-	-	-
Width of calculator	B	mm	100	-	-	-	-	-
Connection thread on meter		Inch	G2B	-	-	-	-	-
Connection thread of coupling		Inch	R1½	-	-	-	-	-
Weight ¹		kg	3.1	-	-	-	-	-

¹ Meter with A-cell, without modules, 1.4 m cable length, 1.9 m cable length of temperature sensor Ø 5.2 mm

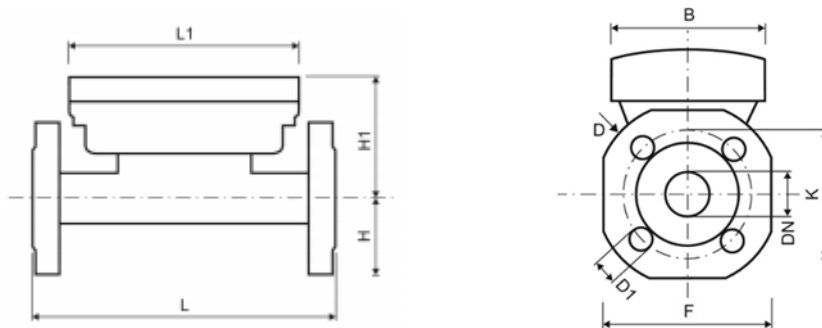


Fig. G

Nominal flow rate	q _n	m ³ /h	0.6	0.6	0.6	1.5	1.5	1.5	2.5
Nominal diameter	DN	mm	15	20	20	15	20	20	20
Overall length	L	mm	110	130	190	110	130	190	130
Length of calculator	L1	mm	-	-	150	-	-	150	-
Height	H	mm	-	-	47.5	-	-	47.5	-
Height	H1	mm	-	-	84	-	-	84	-
Height of calculator	H2	mm	-	-	54	-	-	54	-
Width of calculator	B	mm	-	-	100	-	-	100	-
Flange dimension	F	mm	-	-	95	-	-	95	-
Flange diameter	D	mm	-	-	105	-	-	105	-
Hole circle diameter	K	mm	-	-	75	-	-	75	-
Screw hole diameter	D1	mm	-	-	14	-	-	14	-
Number of screw holes		pcs	-	-	4	-	-	4	-
Weight brass body ²		kg	-	-	2.75	-	-	2.75	-
Weight spheroidal cast iron body ²		kg	-	-	-	-	-	-	-
Nominal flow rate	q _n	m ³ /h	2.5	3.5	3.5	3.5	3.5	3.5	6
Nominal diameter	DN	mm	20	25	25	25	32	32	25
Overall length	L	mm	190	135	150	260	150	260	135
Length of calculator	L1	mm	150	-	-	150	-	150	-
Height	H	mm	47.5	-	-	50	-	62.5	-
Height	H1	mm	84	-	-	88.5	-	88.5	-
Height of calculator	H2	mm	54	-	-	54	-	54	-
Width of calculator	B	mm	100	-	-	100	-	100	-
Flange dimension	F	mm	95	-	-	100	-	125	-
Flange diameter	D	mm	105	-	-	114	-	139	-
Hole circle diameter	K	mm	75	-	-	85	-	100	-
Screw hole diameter	D1	mm	14	-	-	14	-	18	-
Number of screw holes		pcs	4	-	-	4	-	4	-
Weight brass body ²		kg	2.75	-	-	3.5	-	4.8	-
Weight spheroidal cast iron body ²		kg	-	-	-	-	-	-	-

DIEHL

Meterina

Nominal flow rate	q _v	m ³ /h	6	6	6	6	6	10
Nominal diameter	DN	mm	25	25	32	32	40	40
Overall length	L	mm	150	260	150	260	150	200
Length of calculator	L1	mm	-	150	-	150	-	-
Height	H	mm	-	50	-	62.5	-	-
Height	H1	mm	-	88.5	-	88.5	-	-
Height of calculator	H2	mm	-	54	-	54	-	-
Width of calculator	B	mm	-	100	-	100	-	-
Flange dimension	F	mm	-	100	-	125	-	-
Flange diameter	D	mm	-	114	-	139	-	-
Hole circle diameter	K	mm	-	85	-	100	-	-
Screw hole diameter	D1	mm	-	14	-	18	-	-
Number of screw holes		pcs	-	4	-	4	-	-
Weight brass body ²		kg	-	3.5	-	4.8	-	-
Weight spheroidal cast iron body ²		kg	-	-	-	-	-	-
Nominal flow rate	q _v	m ³ /h	10	15	25	40	60	100
Nominal diameter	DN	mm	40	50	65	80	100	100
Overall length	L	mm	300	270	300	300	360	360
Length of calculator	L1	mm	150	150	150	150	150	150
Height	H	mm	69	73.5	85	92.5	108	108
Height	H1	mm	94	99	106.5	114	119	119
Height of calculator	H2	mm	54	54	54	54	54	54
Width of calculator	B	mm	100	100	100	100	100	100
Flange dimension	F	mm	138	147	170	185	216	216
Flange diameter	D	mm	148	163	184	200	235	235
Hole circle diameter	K	mm	110	125	145	160	180 ¹ /190	180 ¹ /190
Screw hole diameter	D1	mm	18	18	18	19	19 ¹ /22	19 ¹ /22
Number of screw holes		pcs	4	4	8	8	8	8
Weight brass body ²		kg	6.4	7.0	8.9	10.9	16.4	16.4
Weight spheroidal cast iron body ²		kg	-	5.9	7.7	9.6	15.2	15.2

¹ Value for PN 16 housing

² Meter with A-cell, without modules, 1.4 m cable length, 1.9 m cable length of temperature sensor Ø 5.2 mm

4.2 General data

- ⊖ Nominal size q_p : 0.6 – 100 m³/h
- ⊖ Ambient temperature: 5 ... 55 °C
- ⊖ Medium temperature: 5 ... 130 °C (150 °C), depending on variant and nominal size

4.3 Power supply External power supply

230 V AC module / 24 V AC module (Fig. C, item 2, page 11)

- ⊖ Terminals suitable for wires up to 2.5 mm²
- ⊖ Electrical isolation
- ⊖ Frequency 50 Hz
- ⊖ Power consumption 0.12 VA ±10 %
- ⊖ Soldered fuse (50mA)
- ⊖ The cable is to be fused at max. 6A and protected against manipulation.

4.4 Calculator interfaces

4.4.1 Communication modules

M-Bus

- ⊖ M-Bus module to EN 1434-3 standard
- ⊖ 2 wire terminal with marking "24" and "25"
- ⊖ Terminals suitable for a cable with 2 wires of 2.5 mm²
- ⊖ Electrical isolation
- ⊖ Polarity reversal protection
- ⊖ Maximum voltage: 50 V DC
- ⊖ Current drawn: one M-Bus load
- ⊖ Primary or secondary addressing
- ⊖ Baud rate 300 or 2400 baud (automatic baud rate detection)
- ⊖ Protocol: M-Bus
- ⊖ max. reading interval

at battery supply A-Cell:	every 3 minutes*
at battery supply D-Cell:	each minutes*
at mains supply:	unlimited

* If the master reads more, then the meter recognizes and doesn't allow it. The display will show then the error code E - 5. In addition, this error code will be shown in the header of the M- Bus telegram (to frequent reading via M-Bus).

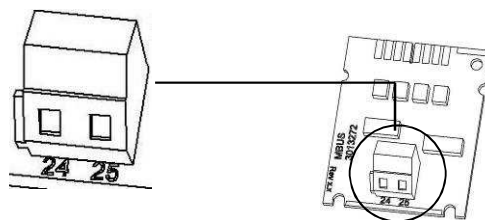


Fig. H M-Bus module

Communication via integrated radio

The integrated radio communication has the following specification:

- ① Unidirectional transmission
- ① The module sends every 8 ... 256 s (variable, depending on protocol length)
- ① typical radio transmitting power 10 dBm \pm 10 mW
- ① Data actuality: online – no time delay between recording readings and data transfer
- ① The integrated radio module always accesses the current meter counts
- ① Transmission frequency: 868 MHz or 434 MHz
- ① Various Diehl Metering receivers are available for receiving the protocol (e.g. Bluetooth, GPRS, LAN, ...)
- ① Encrypted protocol: Real Data Radio or Open Metering Standard (OMS)
- ① Reading modes: Walk-By, Drive-By, Fixed Network
- ① For difficult radio installations (shielding) and to short distance to the radio receiver also the module set external radio can be used.

RS-232

- ① Terminals suitable for a cable with 3 wires of 2.5 mm²
- ① Protocol: M-Bus
- ① Transmission speed: 300 or 2400 baud

The module contains a 3 wire terminal with marking 62 (Dat), 63 (Req) and 64 (GND). A special adapter cable (code no. 087H0121) is required. The coloured wires are to be connected as shown:

62 = brown
63 = white
64 = green

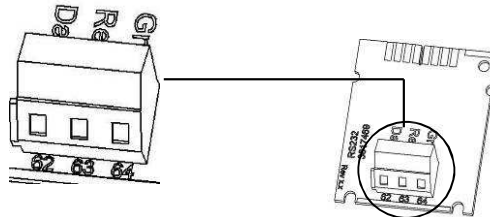


Fig. I RS-232 module

RS-485

- ① Terminals suitable for a cable with 4 wires of 2.5 mm²
- ① Protocol: M-Bus
- ① Transmission speed: 2400 baud

The module contains a 4 wire terminal with marking "D+", "D-", "+12V" and "-12V". The module requires an external power supply of 12 V DC \pm 5 V.

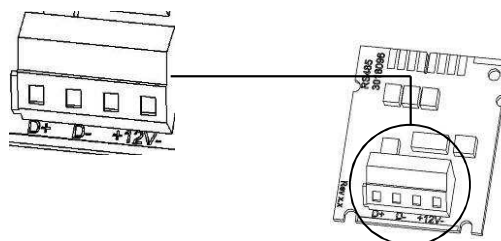


Fig. J RS-485 module

L-Bus

- ① 2 wire terminal with marking "Dat" and "⊥"
- ① Terminals suitable for a cable with 2 wires of 2.5 mm²
- ① Maximum voltage: 50 V DC
- ① Primary or secondary addressing
- ① Baud rate 300 or 2400 baud (automatic baud rate detection)
- ① Protocol: M-Bus
- ① in combination with the external radio module IZAR RADIO EXTERN L-Bus RS232 the meter sends the data every 3 minutes via the L-Bus module to the radio module
- ① once the module is connected the meter recognizes that and disables the integrated radio permanent! (as long as the L-Bus module is mounted)
- ① the L-Bus module should be mounted on slot 2, to make sure that the same protocol will be transferred as it is done via the integrated radio.

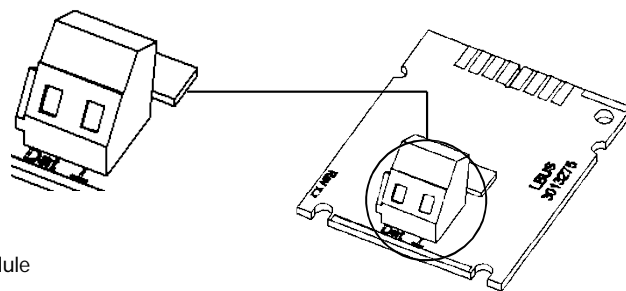


Fig. K L-Bus module

Modbus RTU

- ① Polarity independent: Connections 60 and 61
- ① External power supply: 12-24 V AC/DC
- ① Energy consumption: max. 150 mW
- ① Connection 90 (not inverted, +)
- ① Connection 91 (inverted, +)
- ① Communications protocol: Modbus RTU
- ① Channel EIA-485 (electrically isolated)
- ① Flexible data format: Standard 9600 bits/s, 8N1, Modbus Slave ID-1

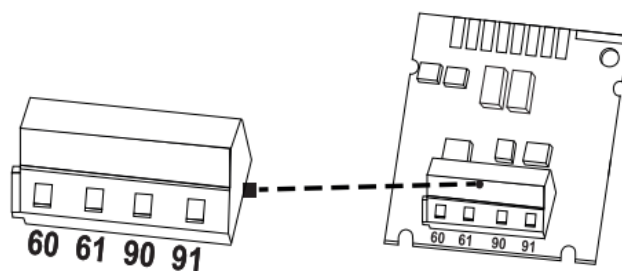


Fig. L Modbus RTU Modul

LonWorks

- ① Polarity independent: Connections 60 and 61
- ① External power supply: 12-24 V AC/DC
- ① Energy consumption: max. 150 mW
- ① Polarity independent: Connections 96 (A) and 97 (B)
- ① Channel TP/FT-10
- ① Baud rate: 78: kbit/s
- ① Data format: Differential Manchester encoding

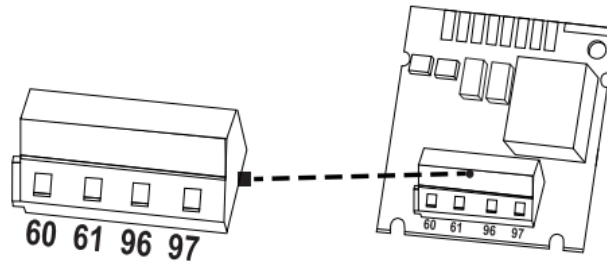


Fig. M LonWorks module

4.4.2 Function modules Pulse input module

- ① The two pulse inputs can be programmed independently of each other with values of 1, 2.5, 10, 25, 100, 250, 1000 or 2500 litres per pulse.
- ① Possible units are all the energy units available in the meter, such as kWh/pulse and GJ/pulse, but also volume units like l/pulse, m³/pulse or no units.
- ① The input frequency is in the range 0 – 8 Hz, min. pulse duration 10 ms
- ① Input resistance 2.2 MΩ
- ① Terminal voltage 3 V DC
- ① Cable length ≤ 10 m

Pulse input 1 is marked "I1 - 1" on the module and "IN1" in the display, pulse input 2 "I2 - 1" on the module and "IN2" in the display.

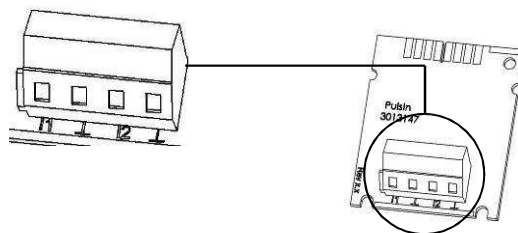


Fig. N Pulse input module

Pulse output module

- ① External power supply necessary $V_{cc} = 3 - 30 \text{ V DC}$
- ① Output current $\leq 20 \text{ mA}$ with a residual voltage of $\leq 0.5 \text{ V}$
- ① Open collector (drain)
- ① The module consists of 2 programmable pulse outputs
- ① Output 1:
 - ① Frequency: $\leq 4 \text{ Hz}$
 - ① Pulse duration: $125 \text{ ms} \pm 10 \%$
 - ① Pulse break: $\geq 125 \text{ ms} - 10 \%$
- ① Output 2:
 - ① Frequency $\leq 100 \text{ Hz}$
 - ① Pulse duration/pulse break: $\sim 1:1$
- ① As a standard the output 1 will give an energy pulse, the output 2 will give a volume pulse (at heat meter or cooling meter)
- ① At a heat meter with cooling tariff the output 1 will give an heating energy impulse and the output 2 a cooling energy impulse (standard)
- ① The pulse value depends on the digits after the comma of the corresponding display unit. As a standard the value is always the last digit of the display.
- ① The volume pulse value is freely programmable
- ① Floating contact (electrically isolated)
- ① The lifetime of the battery which is mounted on the module is 12 years.

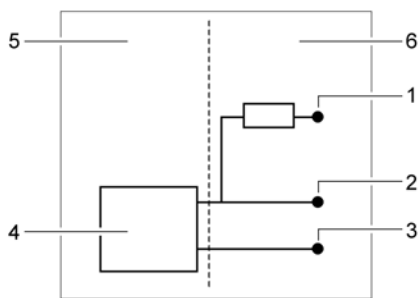


Fig. O Connection diagram for one pulse output

- 1 connection of the external power supply V_{cc}
- 2 Pulse output
- 3 GND
- 4 Pulse output module
- 5 Energy meter
- 6 External connection

To use the pulse output module an external power supply is necessary. Via a resistor the current has to be limited to max. 20mA. At point 2 in the diagram the pulse will be given. The outputs are marked "01 - \perp " and "02 - \perp " on the terminal and "Out1" and "Out2" in the display.

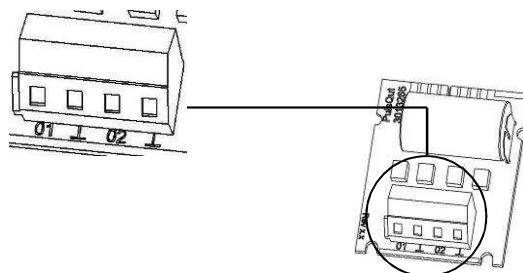


Fig. P Pulse output module

Module IN-OUT (Pulse-in and -output)

The module IN-OUT is equipped with 2 pulse inputs and 1 pulse output.

The pulse inputs have the following specification:

- ① The two pulse inputs can be programmed independently of each other with values of 1, 2.5, 10, 25, 100, 250, 1000 or 2500 litres per pulse.
- ① Possible units are all the energy units available in the meter, such as kWh/pulse and GJ/pulse, but also volume units like l/pulse, m³/pulse, or no units.
- ① The input frequency is in the range 0 – 8 Hz, min. pulse duration 10 ms
- ① Input resistance 2.2 M Ω
- ① Terminal voltage 3 V DC
- ① Cable length < 10 m

The pulse output has the following specification:

- ① External power supply Vcc = 3 – 30 V DC
- ① Output current \leq 20 mA with a residual voltage of \leq 0.5 V
- ① Open collector (drain)
- ① Output frequency \leq 4 Hz
- ① Pulse duration: 125 ms \pm 10 %
- ① Pulse break: \geq 125 ms -10 %
- ① Volume pulse value is programmable as desired (default: last digit in display)
- ① No floating contact (not galvanic isolated)

Pulse input 1 is marked "I1 - \perp " on the module and "IN1" in the display, pulse input 2 "I2 - \perp " on the module and "IN2" in the display (Fig. Q, item 1).

The pulse output is marked "O1 - \perp " on the terminal and "Out1" in the display (Fig. Q, item 2).

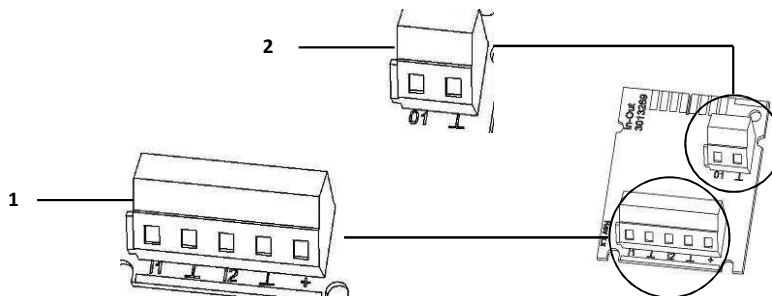


Fig. Q Module IN-OUT

- 1 Terminals for pulse inputs
- 2 Terminals for pulse output

Analogue output module

- ① 2 passive outputs
- ① External power supply: 10 ... 30 V DC
- ① Current loop 4 ... 20 mA
where 4 mA = 0 value; 20 mA = programmed max. value
- ① Overload up to 20.5 mA, then fault current
- ① Errors are generated at 3.5 mA or 22.6 mA (programmable)
- ① Output values: power, flow rate, forward temperature, return temperature, difference temperature
- ① Maximal cable length 10 m (acc. to EN 1434)

To use the analogue output module an external power supply is necessary.
The outputs are marked "1" and "2" on the terminal with the respective polarity "+" and "-".


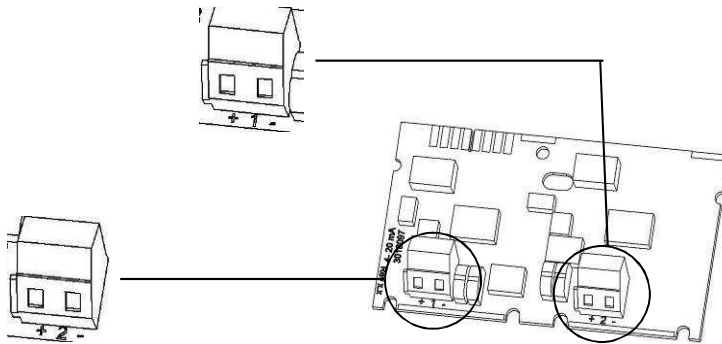


Fig. R Analogue module

Connection diagram:

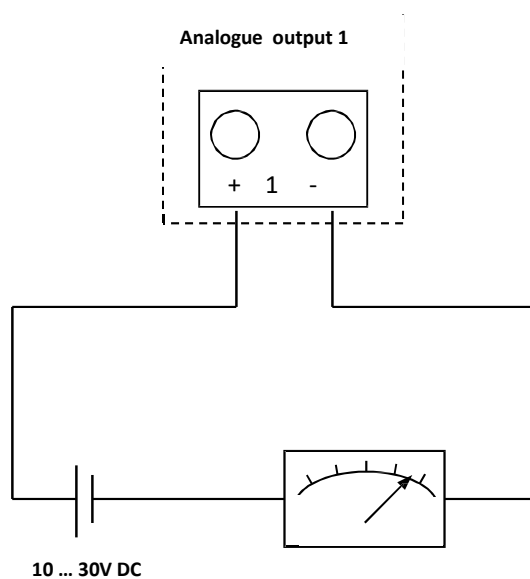

4.4.3 Test output

The test output located on the side of the main electronics assembly is for use by test centres (Fig. S).

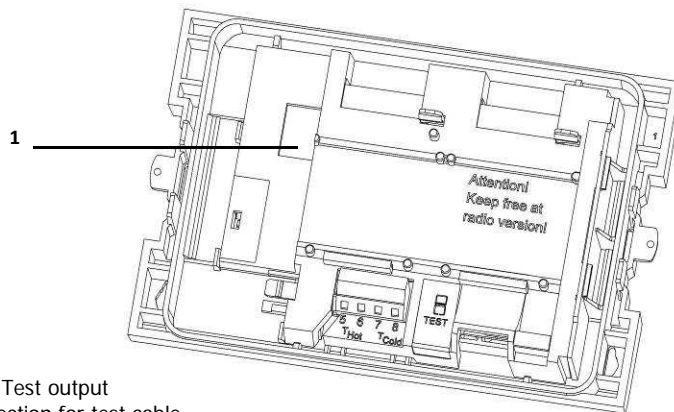


Fig. S Test output
1 Connection for test cable

Two special cables are required for testing:

1. Test cable for volume test pulses (Order. Nr 3024794)
2. Test cable for energy test pulses (Order. Nr 3024799)

Other specifications (pulse value, pulse duration/break, pulse frequency) can be obtained from the Inspection and Test Instruction.

5 Transport, storage

5.1 Unpacking the energy meter

Heat meters and cooling meters are measuring instruments and must be handled carefully. To protect against damage and soiling, they should not be removed from the packaging until shortly before installation.

5.2 Transporting the energy meter

The meter is only to be transported in its original packaging.

5.3 Storage of energy meter

- ① The meter must be stored in a dry place.
- ① Storage temperature -25 °C ... +60 °C
- ① Relative ambient humidity < 93 %

6 Installation



NOTE

This installation guide is intended for trained personnel and does not contain any basic working steps.

The meter may only be installed in dry and frost-free areas in buildings.

Avoid sharp edges (thread, flange, measuring tube). Only install and remove the meter when the system is not under pressure.

Important! The seal on the meter (Fig. T, page 35) must not be damaged! A damaged seal immediately invalidates the factory warranty and the verification or declaration of conformity. The cables supplied with the meter must not be shortened or changed in any other way.

Live parts may be exposed when opening covers or removing parts. Connection points may also be live.

The regulations covering the use of energy meters and electrical installations must be observed!

All instructions listed in the installation guide for the meter must be observed. A cold leakage test by hydraulic pressure is to be carried out after installation.

The specified medium temperature is 5 ... 130 °C (150 °C). The temperature range depends on variant and nominal size. The encapsulated variant is to be used if condensation is expected (cooling and heat meter with cooling tariff).

Only water without additives may be used as medium, according to AGFW leaflet FW510 (**Exception:** Specifically programmed meter for medium Tyfocor LS). The calculator has to be removed from the flow sensor at a medium temperature above 90 °C or if the water temperature is lower than the ambient temperature.

The IZAR@Mobile2 software is used for reading/parametrization and can be downloaded

from the webpage at www.diehl.com/metering/de/diehl-metering



DANGER

Do not touch live parts during installation work.

Risk of serious injuries or death!

- ⇒ The meter installation is only to be performed by an installation and/or electrical contractor.
- ⇒ Personnel must be trained in the installation of medium-voltage electrical equipment (up to 1000 V).



Frost on the counter must be avoided at all times.

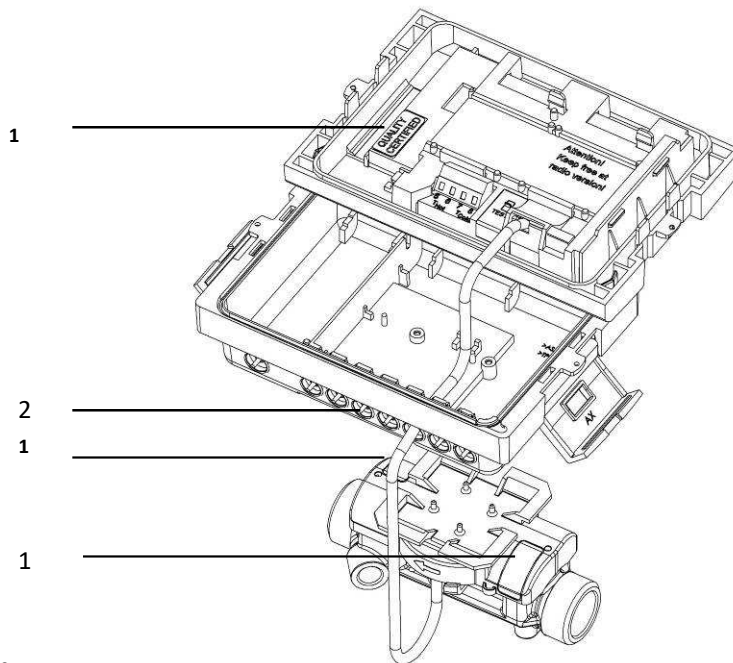


Fig. T Seals
 1 Seal
 2 Cable bushings

6.1 Installing the energy meter



CAUTION

If medium temperature is lower than ambient temperature!

Risk of damage to calculator due to condensation.

⇒ Use the sealed variant of the ultrasonic energy meter.

⇒ Remove calculator from the flow sensor (Fig. X, page 40) and install remotely.



NOTE

Install the meter in an accessible position for service and operating personnel.

It is recommended that stop valves be fitted before and after the meter to simplify removing the meter.

The following tasks are necessary for installing the energy meter:

1. Install the flow sensor, see Section 6.1.1
2. Install the calculator, see Section 6.1.2
3. Connect the temperature sensor, see Section 6.1.3
4. Install the temperature sensor, see Section 6.1.4

6.1.1 Installing the flow sensor



NOTE

Thoroughly flush out the system before installing the flow sensor. It is recommended that a strainer be fitted before the flow sensor or at another suitable position in the heating or cooling circuit. The straight calming length of inlet pipe to the flow sensor and the straight calming length of outlet pipe at the output of the meter may be 0 DN, but an inlet pipe length of 3-10 DN is recommended before the meter for heating systems without temperature mixing or with temperature stratification.

The meter can be installed in either horizontal (Fig. U, item 2) or vertical pipes (Fig. U, item 1).

We also urgently recommend installing the flow sensor in a tilted position (45°) in order to remove possible air bubbles from the circuit.

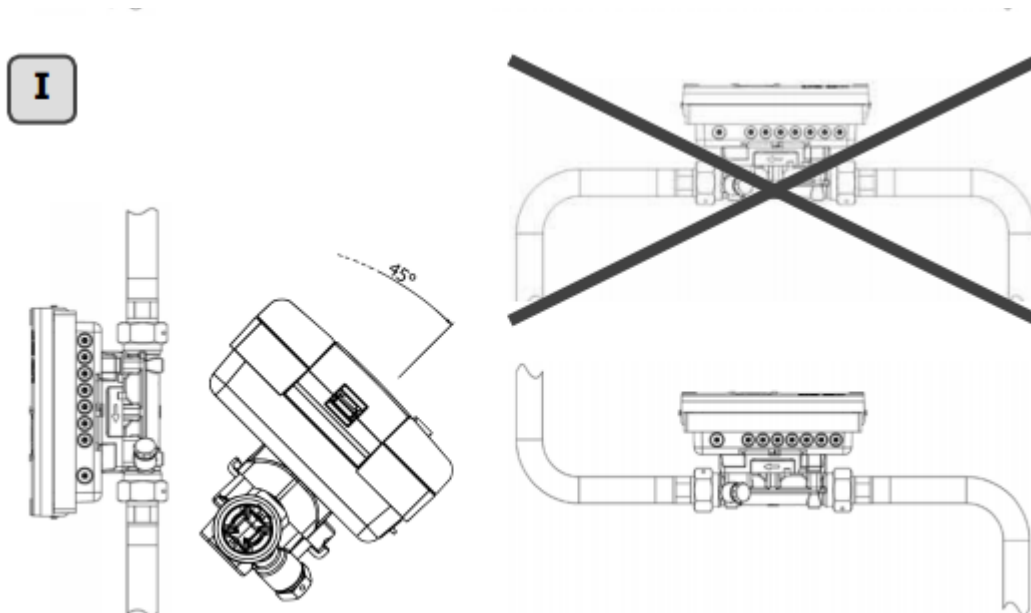




Fig. U Installation positions

- 1 Vertical installation
- 2 Horizontal installation
- 3 Installation in this position is not allowed or not approved

 Select the installation position to suit the design of the meter. Check the information in the display loop 3 to determine whether the meter is intended for installation in the hot or cold line of the system.

 Select the installation position to avoid air bubbles collecting in the meter (Fig. U, item 1 and 2).

1. Install the flow sensor so that the direction of the arrow on the sensor corresponds to the direction of flow (Fig. V).

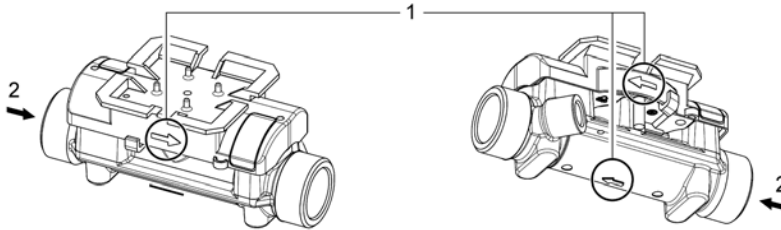


Fig. V Direction of flow
 1 Arrow indicating direction
 2 Direction of flow

2. Ensure that the flow sensor is always filled with water. The meter only measures the energy if the pipes are completely filled, otherwise a corresponding error message is shown in the display.

6.1.2 Flow/return setting (optional ex works)


Optionally, the installation position of the meter can be set in loop 3 ("3.5" page 58). Therefore the installation in the inlet (flow) or outlet (return) is possible.



NOTE

This setting must be made before start operation of the meter (fill in water)

As supplied, the outlet (return) is preset and is shown as follows in the display. Setting and number of possible changes.

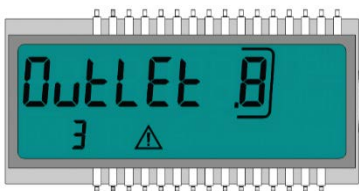

To changeover, switch to the "Outlet" window in loop 3 (see 9. Operation). Pressing and holding the button for > 6 s changes the display/setting to "Inlet". This setting can be changed a total of 8 times by pressing the button.




NOTE
The display changes during the 6 s.
This does not influence functioning.

Sequence during changing



If the button is pressed and held for > 6 s, the meter performs the command shown in the display.

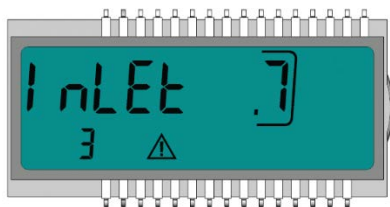


In each change, the framed number in the display is reduced by 1

After 8 changes, it is no longer possible to change the installation position.




NOTE
The function ends with water detection or after 3 hours operation without error detection (defined by production).

The following indication appears in the display (example):

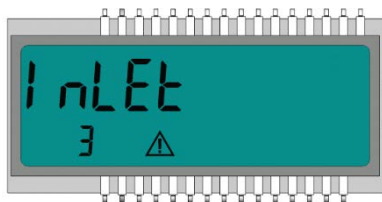

The changes indication disappears.

6.1.3 Installing the calculator

-  Make sure the calculator is sufficiently far away from possible sources of electromagnetic interference (switches, electric motors, fluorescent lamps, etc.).
- ⇒ Installation at medium temperature $< 90\text{ °C}$ or at $T_{\text{Water}} > T_{\text{Ambient}}$: Install the calculator on the flow sensor (Fig. W).

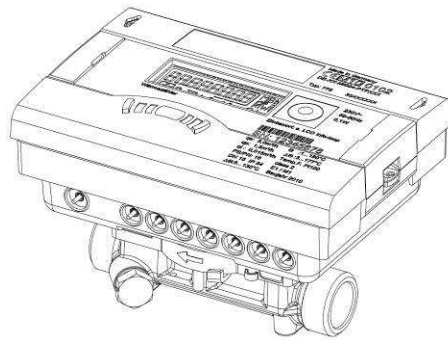


Fig. W Calculator installed on the flow sensor

- ⇒ Installation at medium temperature $> 90\text{ °C}$ or at $T_{\text{Water}} < T_{\text{Ambient}}$ (application as cooling meter or heat meter with cooling tariff). Install the calculator remotely at a sufficient distance away from heat sources (Fig. X, page 40), e.g. on the wall (Fig. Y, page 40). A wall mounting adapter (Fig. Y, item 1, page 40, supplied with meter) or a spacer holder (Fig. Z, page 40, optional) is available for this purpose.

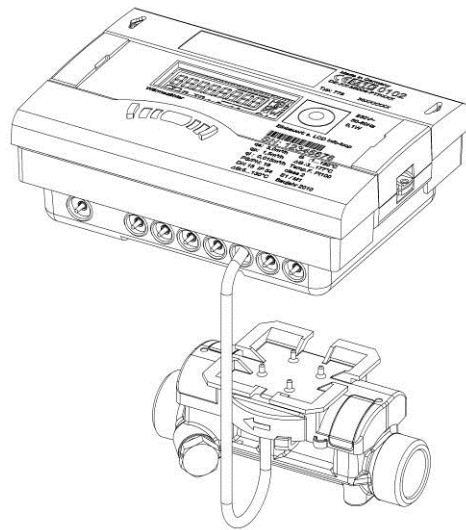


Fig. X Remote calculator

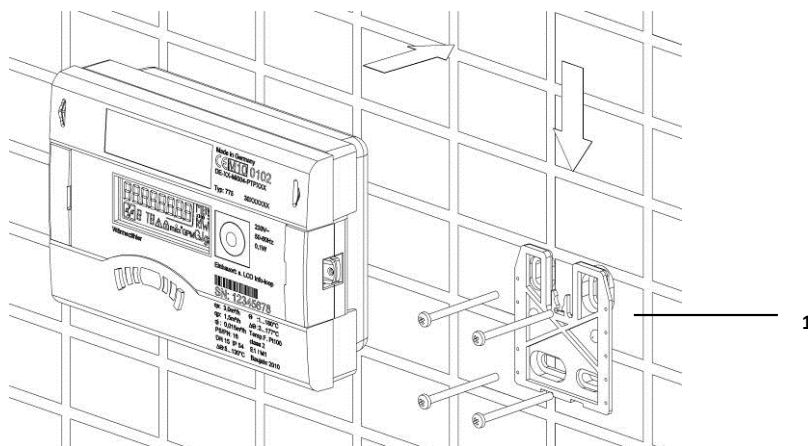


Fig. Y Wall mounting
1 Wall mounting adapter (supplied with meter)

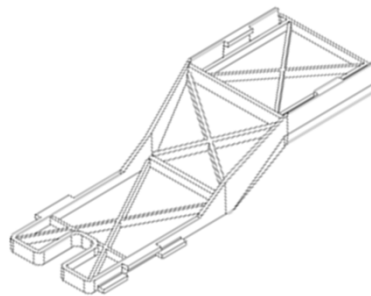


Fig. Z Spacer holder (not supplied with meter)

6.1.4 Connecting temperature sensor



NOTE

The meter is operated with separately approved pair of Pt 100 or Pt 500 temperature sensors. The type of sensor to be used is printed at the front of the calculator. Ensure that the approved temperature range of the temperature sensors is the same as the temperature range of the calculator! A temperature sensor is normally installed in the flow sensor for nominal sizes from q_p 0.6 m³/h to 2.5 m³/h. Both temperature sensors are installed free for nominal sizes $\geq q_p$ 3.5 m³/h.

- ① Handle the temperature sensors carefully!
- ① The sensor cables are fitted with coloured type labels:
 - Red: sensor in hot line
 - Blue: sensor in cold line

1. Feed the sensor cables through the cable entries (Fig. AA).

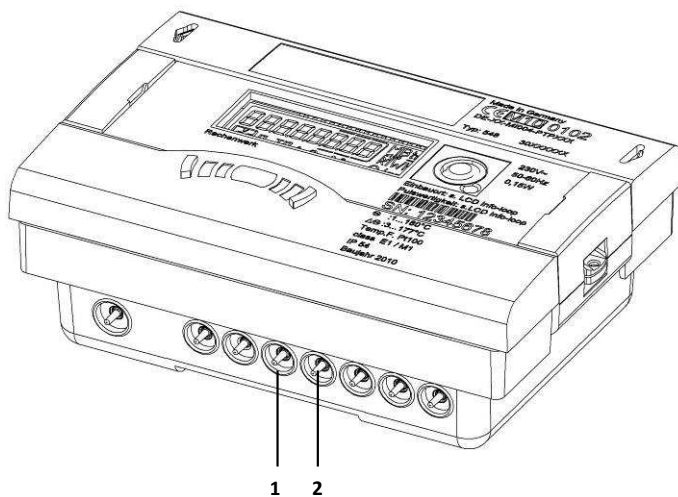


Fig. AA Cable entries

- 1 Cable entry for connecting T_{Hot} (5, 6)
- 2 Cable entry for connecting T_{Cold} (7, 8)

2. Connect the sensor cables to terminals 5-6 / 7-8 (Fig. BB, page 42) as shown in the following table.

Meter type	Sensor marking	Terminal	Installation position
Energy meter in cold pipe	Red	5 T _{Hot} 6	In the hot pipe
	Blue	7 T _{Cold} 8	In the meter
Energy meter in hot pipe	Red	5 T _{Hot} 6	In the meter
	Blue	7 T _{Cold} 8	In the cold pipe
Cooling meter in hot pipe	Blue	7 T _{Cold} 8	In the cold pipe
	Red	5 T _{Hot} 6	In the meter
Cooling meter in cold pipe	Blue	7 T _{Cold} 8	In the meter
	Red	5 T _{Hot} 6	In the hot pipe
Heat Meter with cooling tariff in cold pipe	Red	5 T _{Hot} 6	In the hot pipe
	Blue	7 T _{Cold} 8	In the meter
Heat Meter with cooling tariff in hot pipe	Red	5 T _{Hot} 6	In the meter
	Blue	7 T _{Cold} 8	In the cold pipe

The programmed installation position is shown in the information loop (loop 3, "hot pipe" or "cold pipe").

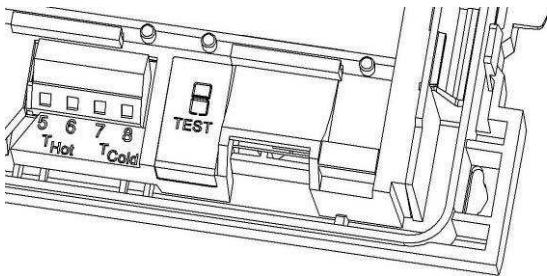


Fig. BB Terminals for temperature sensors

3. Press the sensor cables into the strain relief.
4. Close the top part with the bottom part.

6.1.5 Installation of the temperature sensors



NOTE

The temperature sensors are to be installed symmetrically in the forward and return line and preferably direct. The free temperature sensor can be installed in a ball valve or in a pocket conforming to the requirements for this type of sensor. The forward and return sensors must be inserted as far as the bottom of the pocket and then fixed in position. For installation in a ball valve, a 5-piece coupling set is enclosed with the meter in a separate bag. Bores in the flow sensor can be used for symmetrical installation of the temperature sensors. In Germany, sensors up to nominal pipe diameters of 25 mm are to be installed directly immersed.

If the temperature sensors are connected permanently, the cables must not be shortened or lengthened. If replaceable conformity-marked temperature sensors are used, the connecting cables must have the same length for the forward and return line and not exceed 10 m; the cross-sections of the cables must comply with EN 1434-2. They are connected to the marked Pt 100 or Pt 500 terminals in line with the electrical compatibility of the integrator and finally sealed. The connecting cables of the temperature sensors must be as short as possible. These cables are not to be laid together with mains supply cables in cable ducts or cable racks. The minimum separation of 50 mm for low-voltage cables must be maintained in accordance with EN1434-6.

Installation possibilities:

- ⊕ Installation in a ball valve with adapter (5-piece coupling set in separate bag)
- ⊕ Installation in a pocket

Installation in a ball valve with adapter

Use ball valves suitable for temperature sensor installation with M10 x 1.

- Close the ball valve.
- Unscrew the plug screw from the ball valve.

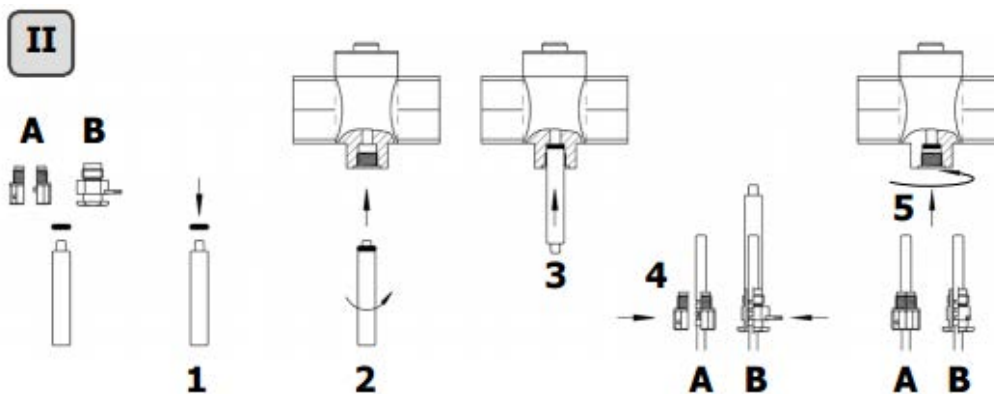


Fig. CC Installing the temperature sensor

Installation (see Fig. II)

- Place the O-ring on the mounting pin from the enclosed screw set (type A or B).
- Insert the O-ring with the mounting pin into the ball valve hole (turning the pin).
- Fix the hole end position the O-ring with the other end of the mounting pin.

fixing screw

- Insert type A (plastic) – put the screw on the temperature sensor.
- Type B (brass) put screw on the temperature sensor and fix it with the fixation pin. Press the fixation pin completely in. Remove the mounting pin from the temperature sensor.
- Insert the temperature sensor with the adapter screw into the ball valve and tighten the fastening screw in a hand-tight manner (2-3 Nm).

Installation in a pocket

The pockets are best installed in T-pieces with a 45 ° or 90 ° angle. The tip of the pocket must point in the opposite direction to the direction of flow and must be located in the middle of the pipe (Fig. DD, item 1-5). The temperature sensors must be sealed after installation in the pockets.

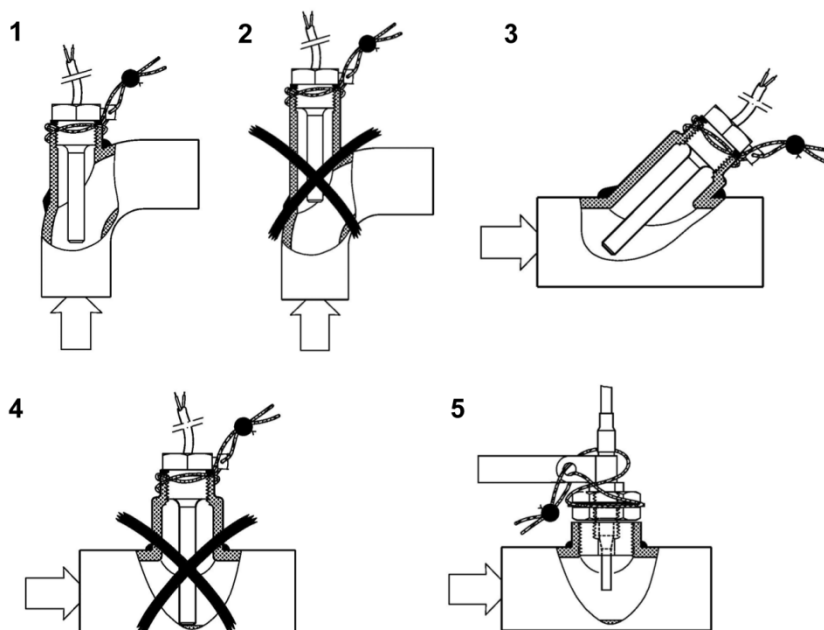


Fig. DD Example for mounting and sealing

6.2 Installing extension modules

The energy meter has two slots for extension modules.



CAUTION

Do not insert modules in the wrong slots.

Risk of damage to calculator!

⇒ Install modules in the correct slots.



NOTE

These modules have no effect on consumption recording and can be fitted retrospectively without damaging the verification mark.

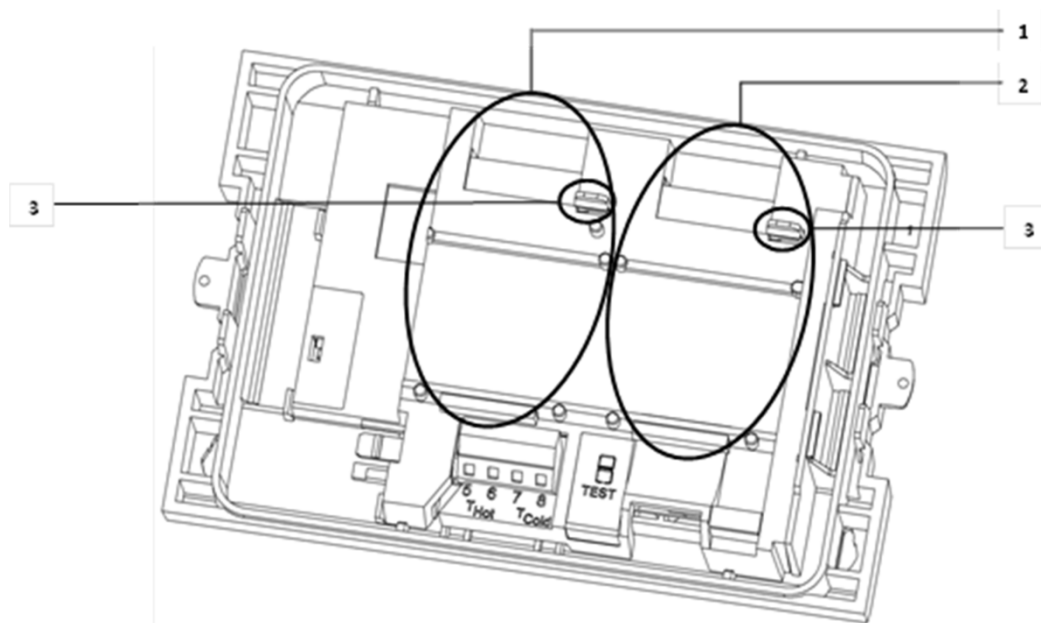


Fig. EE Slots

1 Slot 1

2 Slot 2

3 Fixing clips

Overview of the possible combinations for the modules for slot 1 and 2

Overview Module combinations

Combinations ●: techn. possible (●): techn. possible but not as variant existing		Module Port 2								
		no module	M-Bus	RS232	RS485	Impulse-IN	L-Bus (for external radio)	MOD-Bus	LON-Works	LoRa WAN
Module Port 1	no module	●	(●)	●	(●)	(●)	(●)	(●)	(●)	●
	M-Bus	●	●	●	●	(●)	●	(●)	(●)	-
	RS485	●	(●)	●	-	(●)	(●)	(●)	(●)	-
	Impulse-IN	●	●	●	●	-	●	(●)	(●)	-
	Impulse-OUT	●	●	●	●	●	●	(●)	(●)	-
	Impulse-IN/-OUT	●	●	●	●	-	●	(●)	(●)	-
	Analoge Output 4...20 mA	●	-	-	-	-	-	-	-	-
	L-Bus (for external radio)	●	(●)	●	●	(●)	-	(●)	(●)	-
	MOD-Bus	●	●	●	●	●	●	(●)	(●)	-
	LON-Works	●	●	●	●	●	●	(●)	(●)	-

- Combination is allowed
- Combination is not allowed

The modules can be used and combined as shown in the above table. The analogue module needs both slots. These modules have no effect on consumption recording and can be fitted retrospectively without damaging the verification mark.

WARNING



Electrostatic discharge.

Risk of damage to meter and particularly electronic components, for which no liability is accepted!

Observe the relevant ESD (electrostatic discharge) regulations. No liability is accepted for damage (especially to electronic components) resulting from failure to comply with the ESD regulations.

1. Remove the seal from the calculator housing and open the calculator by releasing the side catches.
2. Take the top part of the calculator and turn it so that the inside of the calculator is facing you. You can simplify installing the modules by using the two openings in the top part to place this on the bottom part (Fig. FF, item 1).

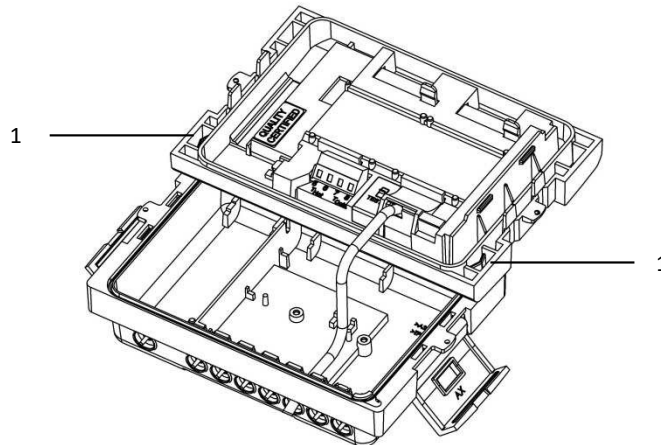


Fig. FF Installation position of top part


1 Openings in the top part for placing on the bottom part

3. Insert the module in the relevant slot (Fig. EE, page 45), secure with the fixing lugs and carefully connect the pre-formed ribbon cable at both ends.
4. Now remove the top part from the installation position, turn it and replace it in the correct position on the bottom part of the calculator.
5. Check the meter for correct operation before sealing the housing cover. The meter is equipped with automatic detection for detecting which module is inserted in which slot (port). The detection result is shown in loop 3 of the display in two different sequences (windows) for port 1 and port 2. This display automatically changes between "Port 1" and "Port 2" and the relevant module number (module code).


6.2.1 Display of the slot configuration

The SHARKY 775 is equipped with an automatic detection which module is mounted in which slot (port). This detection will be shown in the display in loop 3 in two different sequences for port 1 resp. port 2. The two sequences will be shown alternating.





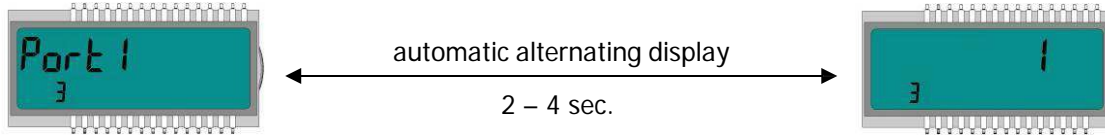


Example slot 1:

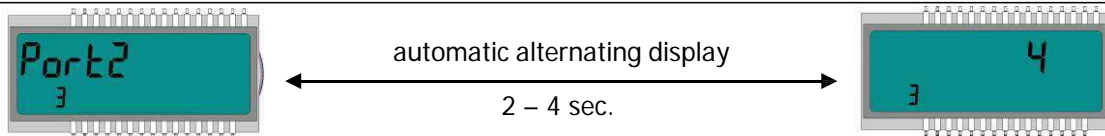





Example slot 2:



Module detection:

Module type	Module code in the display
No module	
M-Bus	
RS232	
RS485	
Pulse input	
Pulse output	
Analogue output	

Module type	Module code in the display
Combined Pulse in-/ output	
Test cable energy	
Test cable volume	
L-Bus (for external radio)	

6.3. Connecting modules

6.3.1 Connecting communication modules

M-Bus module



NOTE

The board contains a 2 wire terminal with marking 24, 25 (Fig. H, page 25).

⇒ Connect the M-Bus Master to the marked terminals.

RS-232 module



NOTE

The board contains a 3 wire terminal with marking 62 (TX), 63 (RX) and 64 (GND) (Fig. I, page 26).

A special adapter cable is required for connecting to a PC (order no. 087H0121).

⇒ Connect the coloured wires as follows: 62 = brown; 63 = white; 64 = green.

RS-485 module



NOTE

The board contains a 4 wire terminal with marking "D+", "D-", "+12V" and "-12V" (Fig. J, page 26). The module requires an external power supply of 12 V DC \pm 5 V.

⇒ Connect the cable to the marked terminals.

L-Bus module

**NOTE**

The board contains a 2 wire terminal with marking "Dat" and "⊥" (Fig. K, page 27).

⇒ Connect the cable of the external radio module with the marked terminals.

Modbus RTU

**NOTE**

The board contains a 4 wire terminal with marking 60, 61, 90 (not inverted, +) and 91 (inverted, -) (Fig. N, page 27). The module requires an external power supply of 12-24 V AC/DC.

⇒ Connect the cable to the marked terminals.

LonWorks

**NOTE**

The board contains a 4 wire terminal with marking 60, 61, 96 (A) and 97 (B) (Fig. O, page 28). The module requires an external power supply of 12-24 V AC/DC.
Polarity independent: Connections 60 and 61 / Connections 96 (A) and 97 (B)

⇒ Connect the cable to the marked terminals.

6.3.2. Connecting function modules Pulse input module

**NOTE**

The board contains a 4 wire terminal with marking "I1 - ⊥" and "I2 - ⊥" (Fig. N, page 28).

⇒ Connect the cable for pulse input 1 to terminals "I1 - ⊥" and the cable for pulse input 2 to terminals "I2 - ⊥".

Pulse output module

**NOTE**

The board contains a 4 wire terminal with marking "O1 - ⊥" and "O2 - ⊥" (Fig. P, page 29).

⇒ Connect the cable for pulse output 1 to terminals "O1" and "⊥" and for pulse output 2 to terminals "O2" and "⊥".

Combined pulse input and output module

**NOTE**

The board contains a 5 wire terminal for the two pulse inputs with marking "I1 - ⊥" and "I2 - ⊥". A 3 V DC voltage is connected to the "+" terminal and can be used as the supply for a flow sensor. A 2 wire terminal is also provided for the pulse output with marking "O1 - ⊥" (Fig. Q, page 30).

⇒ Connect the cable for pulse input 1 to terminals "I1 - ⊥" and the cable for pulse input 2 to terminals "I2 - ⊥".

⇒ Connect the cable for the pulse output to terminals "O1" and "⊥".

Analogue output module



NOTE

The board contains two 2 wire terminals for the two analogue outputs; output 1 is marked "+ 1 -" and output 2 "+ 2 -" (Fig. R, page 31).

- ⇒ Connect the cable for analogue output 1 to the terminals marked "+" and "-" of terminal 1.
Connect the cable for the second analogue output to the terminals marked "+" and "-" on terminal 2. Observe the correct polarity.

6.4 Connecting the mains voltage 230 V / 24 V



DANGER

Before you connect the mains cable, be sure that no mains voltage is existing.

Risk of serious injuries or death!

Please take care that the mains voltage corresponds to the mounted mains unit.

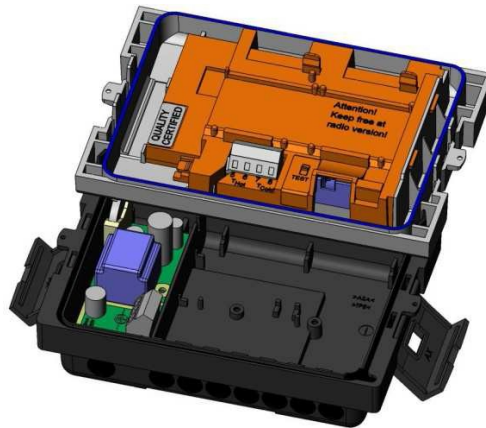


Fig. GG Meter with mains unit

1. Remove the top part of the calculator
 2. Dismount the terminal cover of the mains unit
 3. Install the mains cable via the wire protecting sleeve into the bottom part of the calculator
 4. Connect the cable according the labelling of the terminal
 5. Reinstall the terminal cover
 6. Mount the top part of the calculator back
 7. Turn on the mains voltage again
- ⇒ Error E - 8 disappears automatically from the display when the mains voltage is available.
8. The calculator has the be protected against manipulation (sealing)

6.4 Programming the energy meter NOTE



A number of settings can be programmed in the meter using the IZAR@Mobile2 software. More information is available at <http://www.diehl.com/metering/de/diehl-metering/support-center/downloads>

7 Taking into operation

The meter can be taken into operation once it has been installed.
Proceed as follows:

- Open the stop valves.
- Check the system for leaks.
- Carefully bleed the system.
- The message "E – 7" disappears from the display after a short time.
- Check the flow rate and temperature displays for plausibility.
- Bleed the system until the flow rate display is steady. Regulate the system using the flow rate display.
- Seal the sensors.
- Attach the seals to the calorimeter and temperature sensors.
- Read the meter counts for energy, volume and operating hours.

Error messages for wrong installation:

Error display	Meaning
E - 3	Temperature sensors reversed during installation or connection.
E - 6	Meter has not been installed in the intended direction of flow.




NOTE

If the system is idle, these error messages can appear even though the installation has been carried out correctly.

8 Operation

8.4 Display

The meter readings are displayed with units and symbols on an 8-digit LCD.

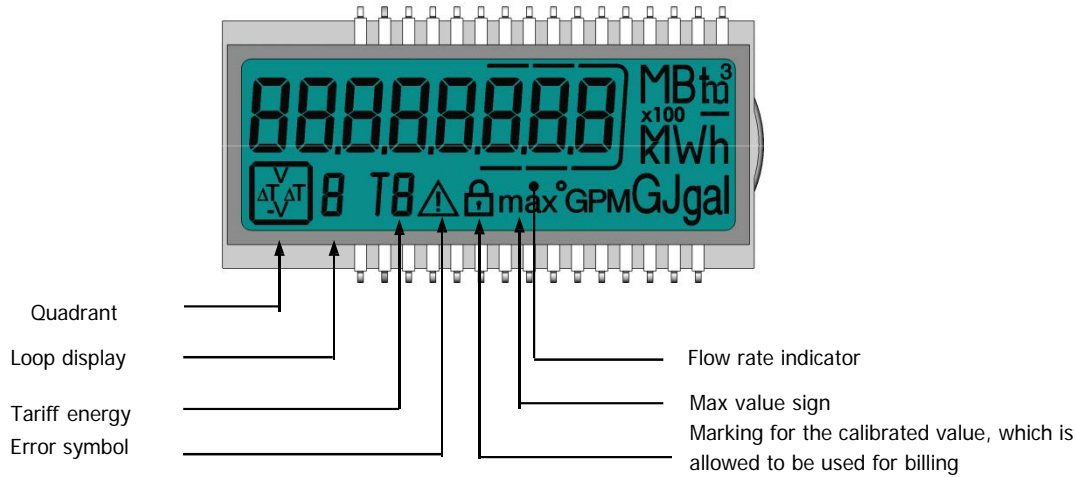

8.5 Operation of meter

A pushbutton mounted on the front of the meter is used to switch to the various displays. To show the data read out by the calculator in the display, various windows have been created as loop functions that can be called up in succession to display the system information assigned to each window (e.g. amount of energy, operating hours, volume of water, current temperatures, ...). The meter has 6 different display loops: main loop, accounting date loop, info loop, impulse loop, tariff loop and monthly value loop.

The tariff loop (5) in a heating or cooling meter is switched off in the default setting. This loop is only switched on in a heat meter with cooling tariff.

The window content of each loop is programmed with the standard information ex works. Various display windows comprise up to seven displays that change at intervals of 2 – 4 s. The loops in the display are numbered from 1 to 6 to help the user find his way around quickly (Fig. GG). The main loop (1) is programmed with the current data as default setting, e.g. for energy, volume, flow rate.

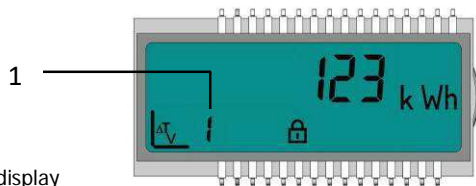


Fig. HH LC display
1 Loop display (for loop 1)

The basic display shows the “Energy” window in the main loop when the meter is attached to the pipe, the pipe is completely filled with water and there is no error (sequence 1.1). If there is an error it is shown permanently in the basic display. The meter doesn't switch to the power save mode. Is the cause of error removed the error disappears from the display. See Section 8.3 Display indications (default settings).

The loop settings can be programmed to suit customer-specific requirements using the IZAR@Mobile2 software.

The pushbutton is used to switch through the various displays. The button can be pressed for a short or long time.

The following table shows the possible uses of the button:

Action	Result
Short press => ▼ (< 3 seconds)	Switches to the next display within a loop
Long press (> 3 seconds)	Switches to the next display loop
Button not pressed for 4 minutes	Meter switches off the display automatically (to save power, but only if no error exists)
Button pressed again	Meter shows the basic display


8.6 Display indications (default settings)

Main loop (1)

Sequence


Window 1

1.1

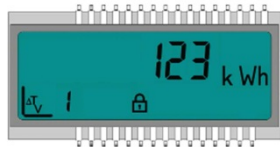


Accumulated energy

1.2

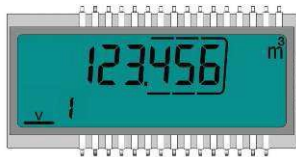

Volume


1.3

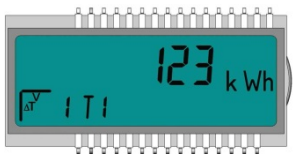

Accumulated energy (cooling)


(Sequence only in a heat meter with cooling tariff)

1.4

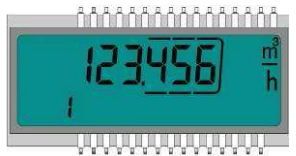


Flow rate

1.5

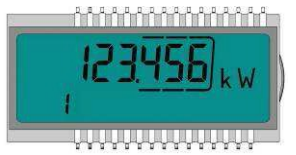


Power


Sequence Window 1

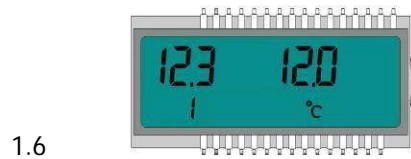

Forward/- Return temperature

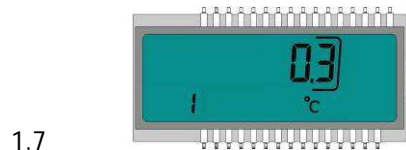


Temperature difference

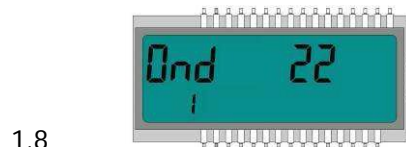


Operating days




2s

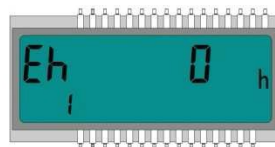

error hours

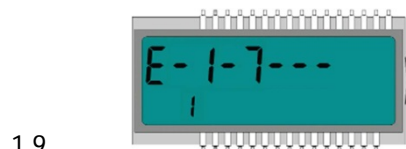

Error code

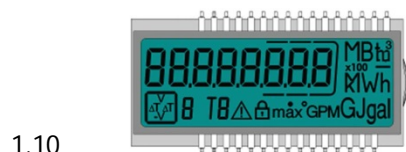



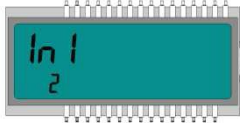










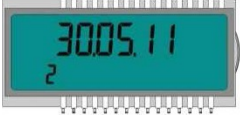
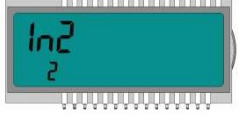
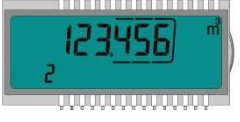


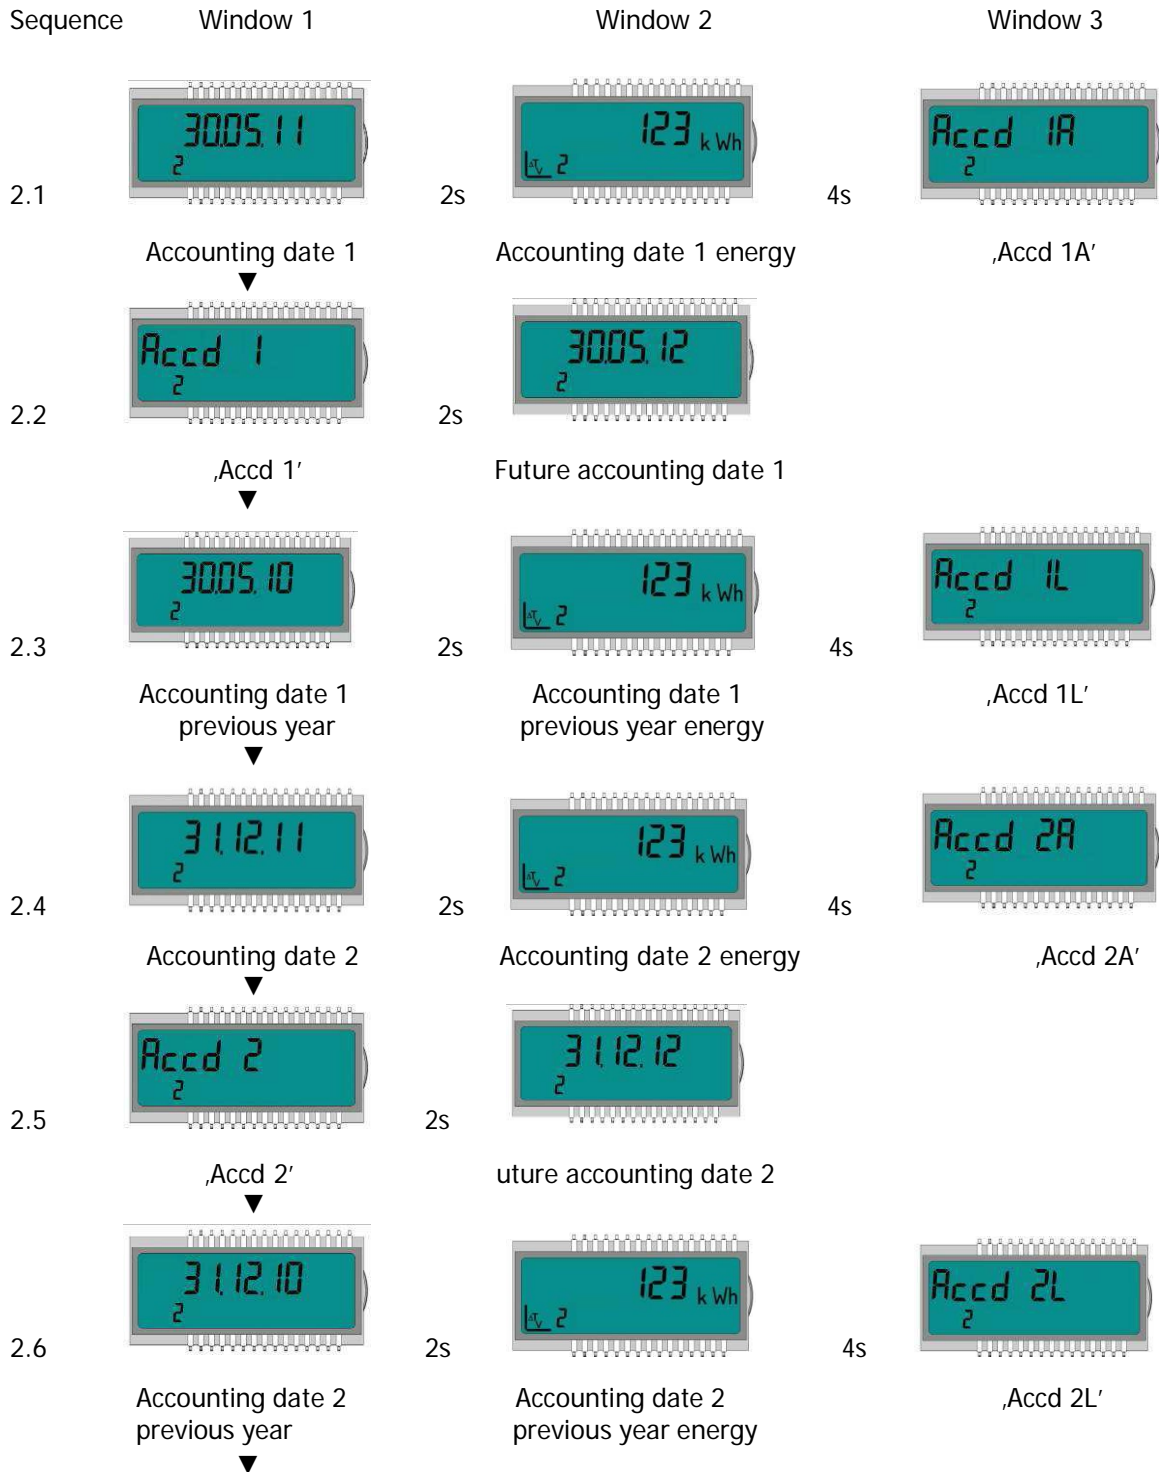
Display test

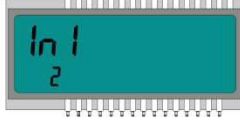


Sequence 1.1

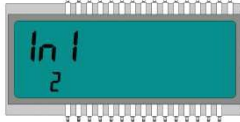
Accounting date loop (2)

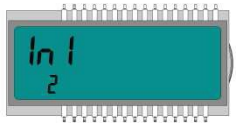


Sequence	Window 1	Window 2	Window 3
2.7	 Accounting date 1 ▼	 Pulse input 1	 Pulse input volume 1
2.8	 Accounting date 1 previous year ▼	 Pulse input 1	 Pulse input volume 1
2.9	 Accounting date 2 ▼	 Pulse input 1	 Pulse input volume 1
2.10	 Accounting date 2 previous year ▼	 Pulse input 1	 Pulse input volume 1
2.11	 Accounting date 1 ▼	 Pulse input 2	 Pulse input volume 2
2.12	 Accounting date 1 previous year ▼	 Pulse input 2	 Pulse input volume 2

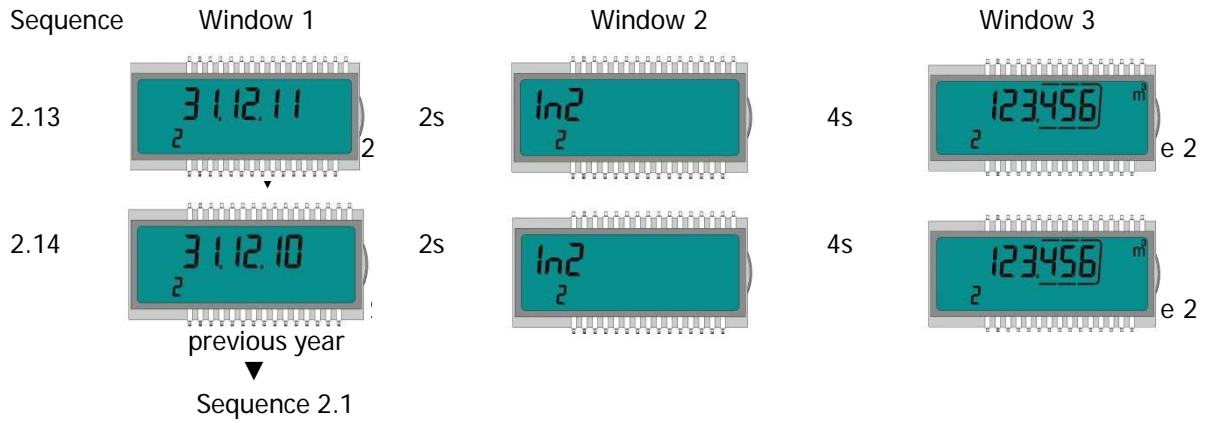

Info loop (3)

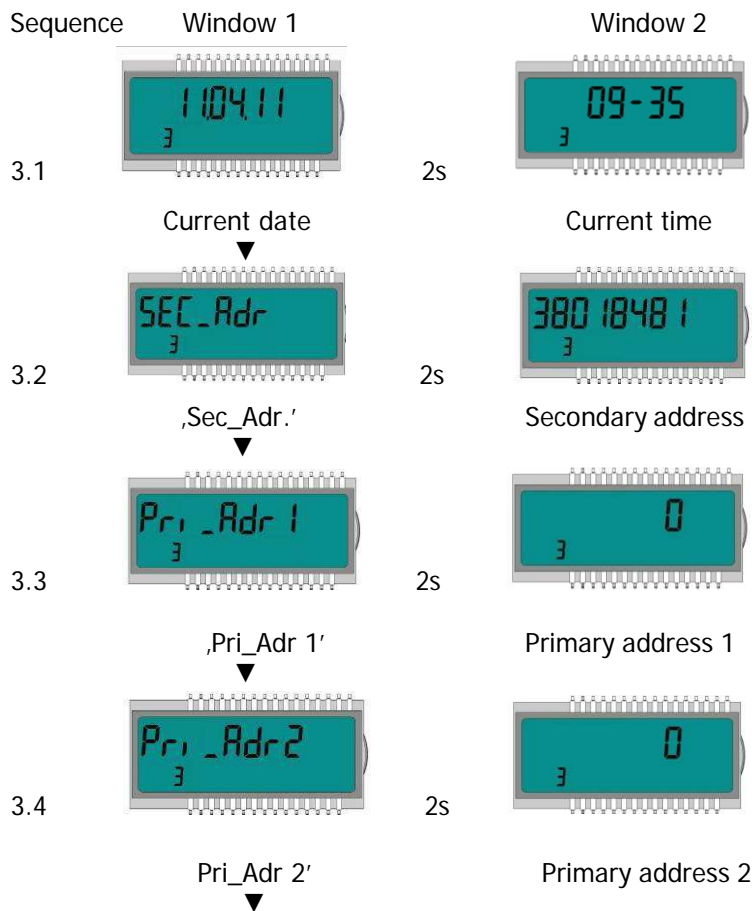


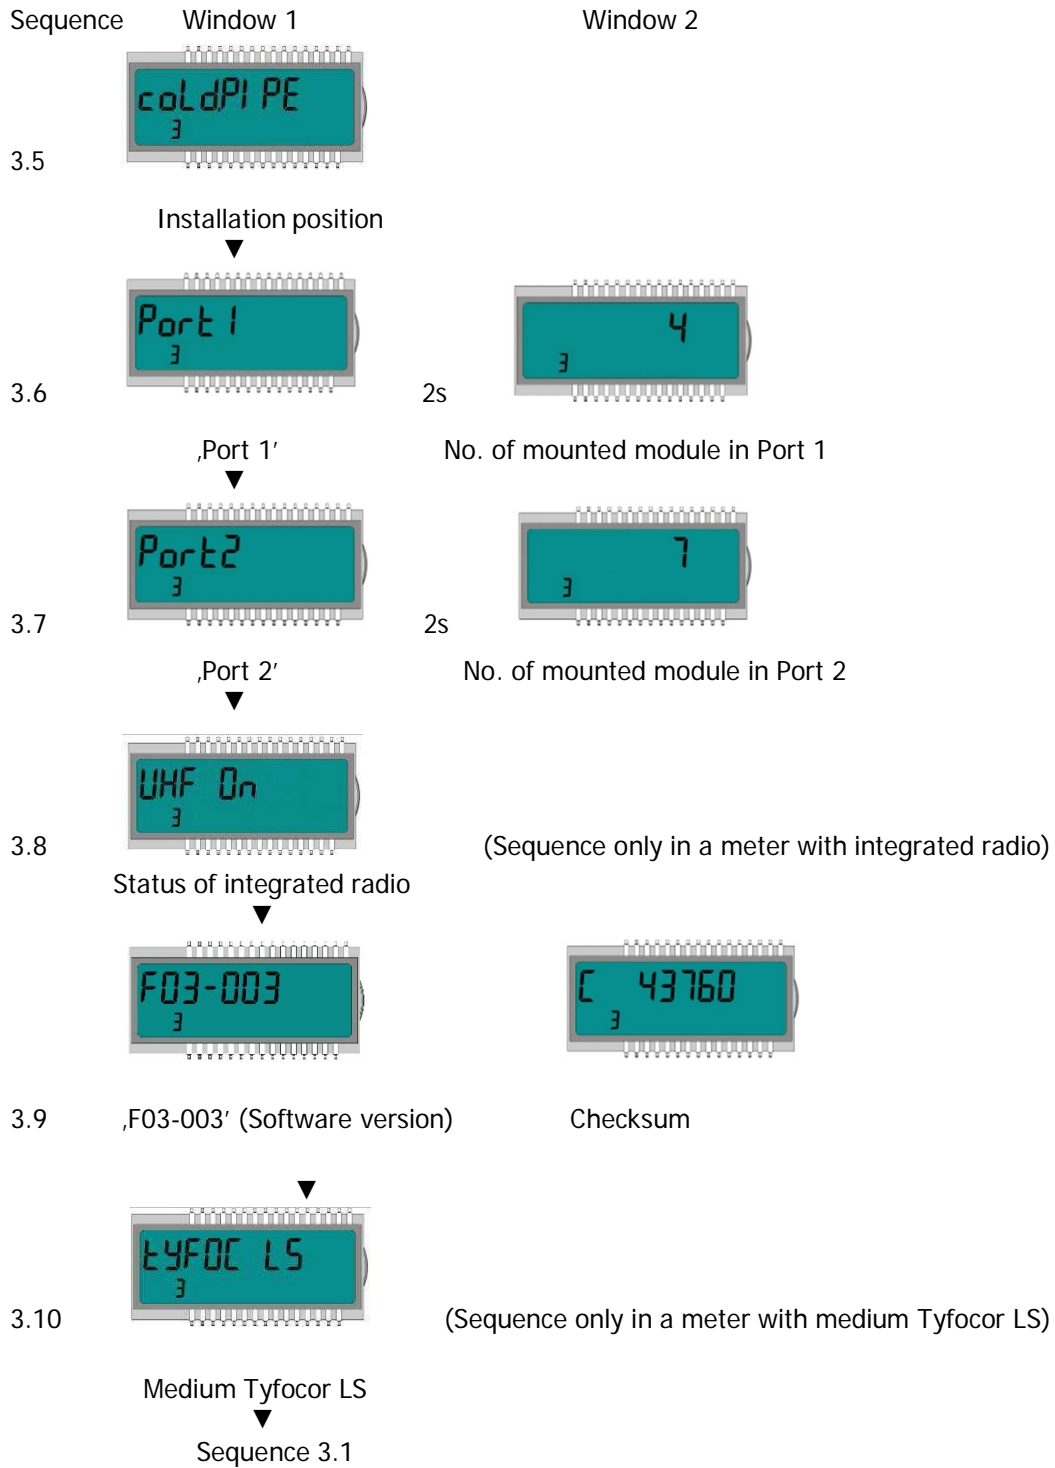


Impulse loop (4)


Sequence	Window 1	Window 2	Window 3
4.1	<p>Pulse input 1 ▼</p>	2s <p>Accumulated value pulse input 1</p>	4s <p>Pulse value 1 [L/P] (pulse per increment, depends on the decimal place of the accumulated value, here 1L/pulse)</p>
4.2	<p>Pulse input 2 ▼</p>	2s <p>Accumulated value pulse input 2</p>	4s <p>Pulse value 2 [L/P] (pulse per increment, depends on the decimal place of the accumulated value, here 1L/pulse)</p>
4.3	<p>Pulse output 1 ▼</p>	2s <p>Value of pulse output 1</p>	
4.4	<p>Pulse output 2 ▼</p>	2s <p>Value of pulse output 2</p>	(Sequence only in a heat - or cooling meter)
4.4	<p>Pulse output 2 ▼ Sequence 4.1</p>	2s <p>Value of pulse output 2</p>	(Sequence only in a heat meter with cooling tariff)

Tariff loop (5) (Only in a heat meter with cooling tariff)

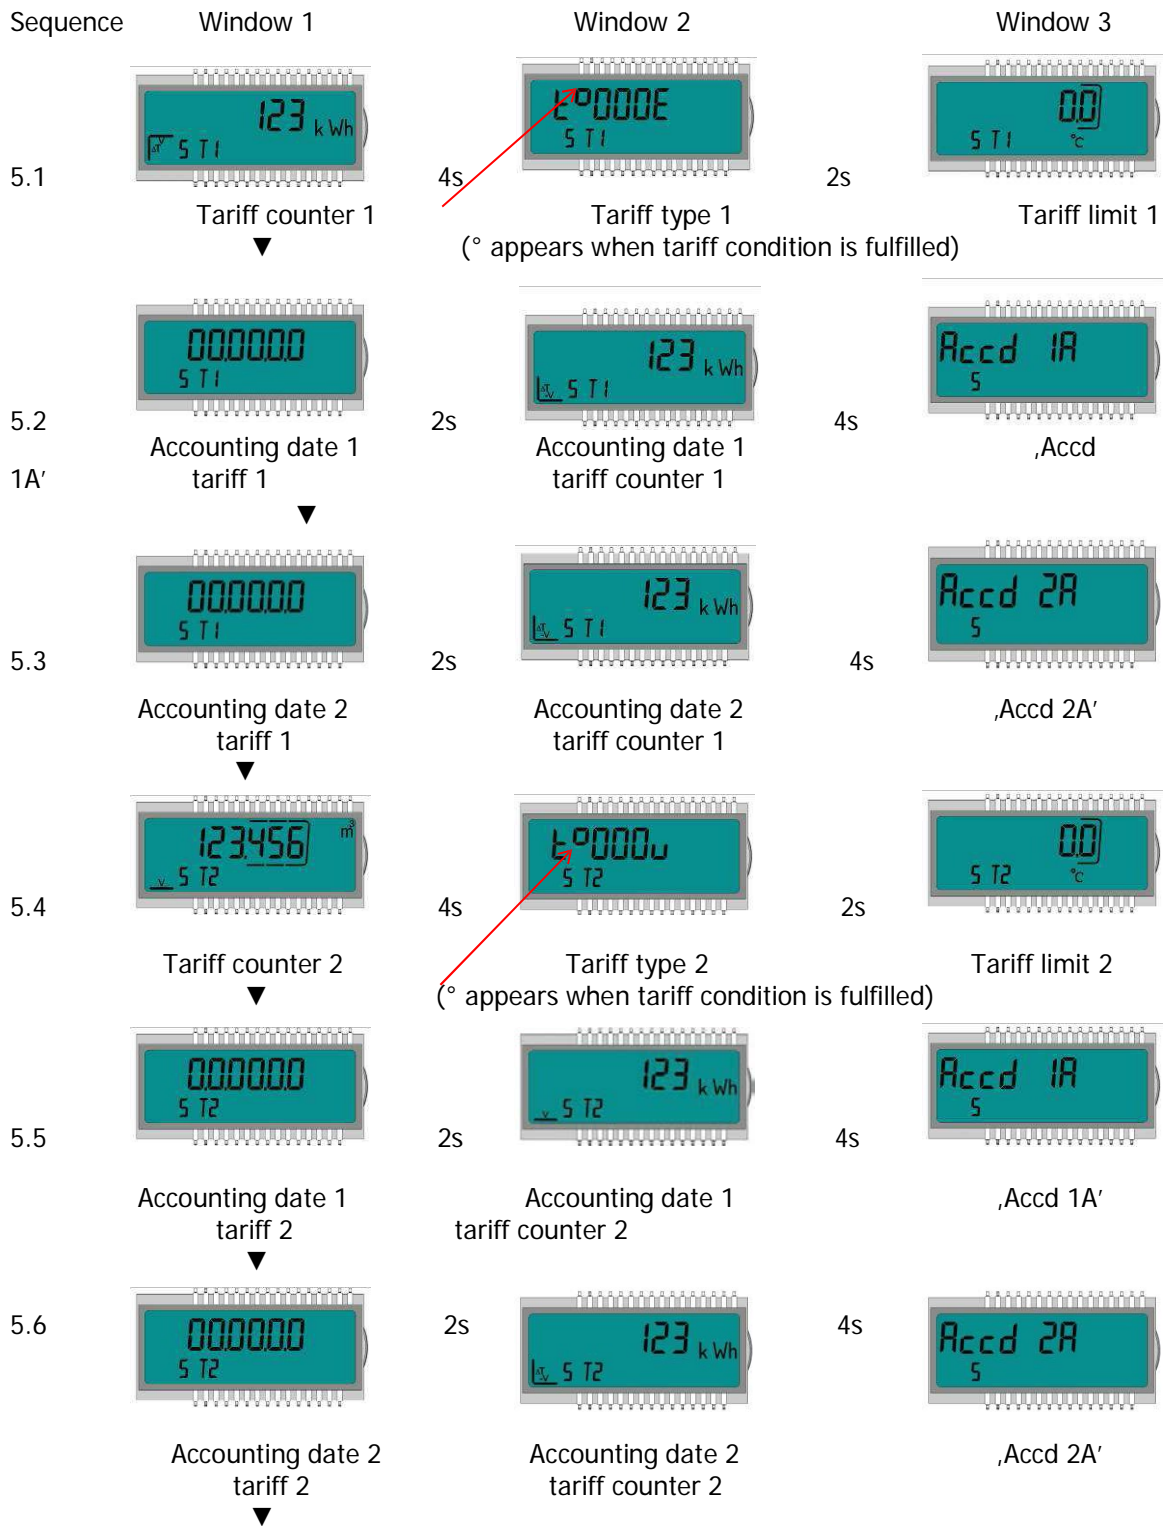


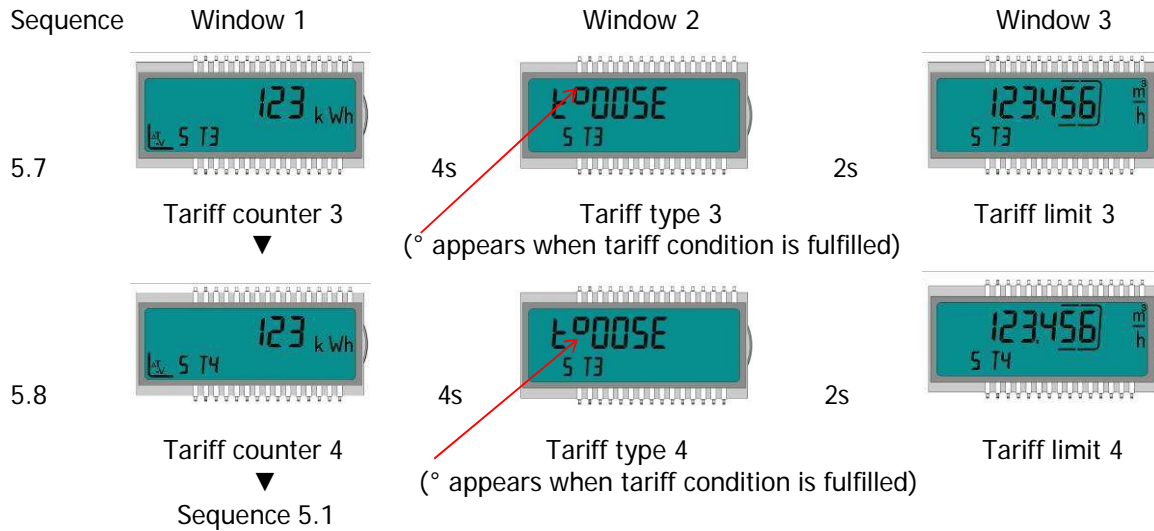

Monthly value loop (6) (Heat - or cooling meter)

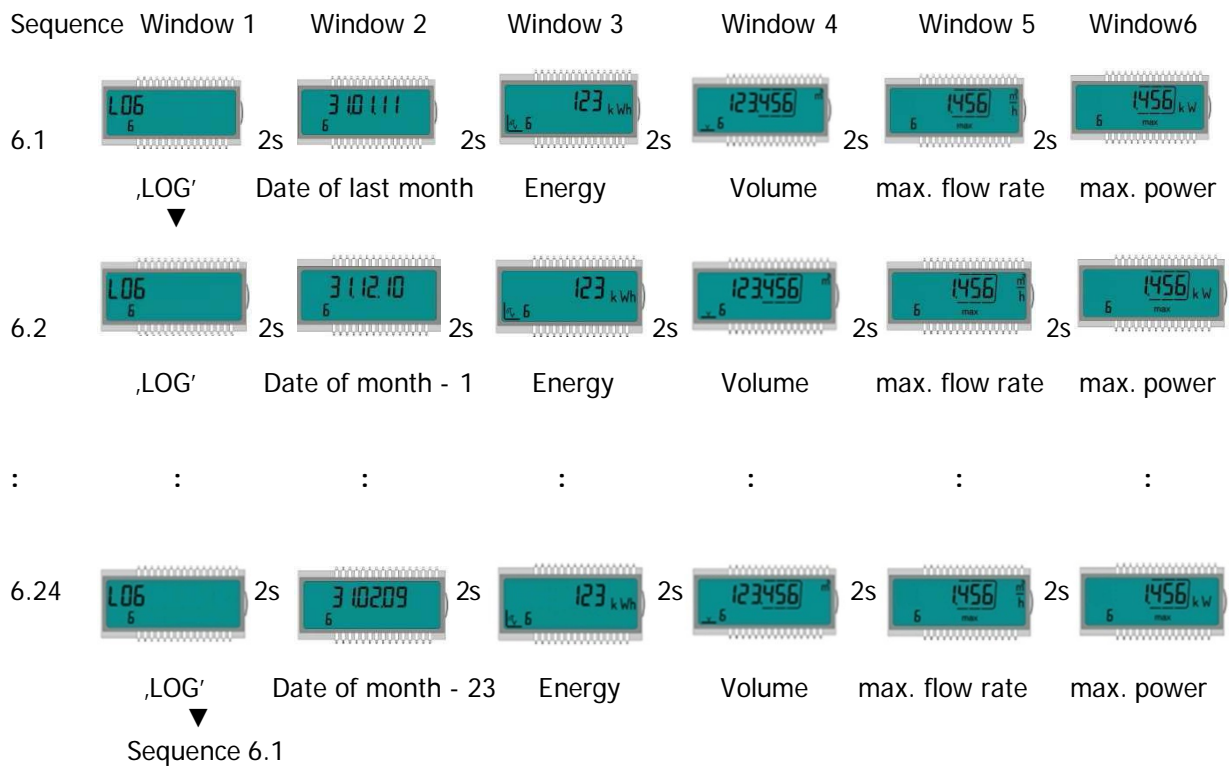

Monthly value loop (6) (heat meter with cooling tariff)

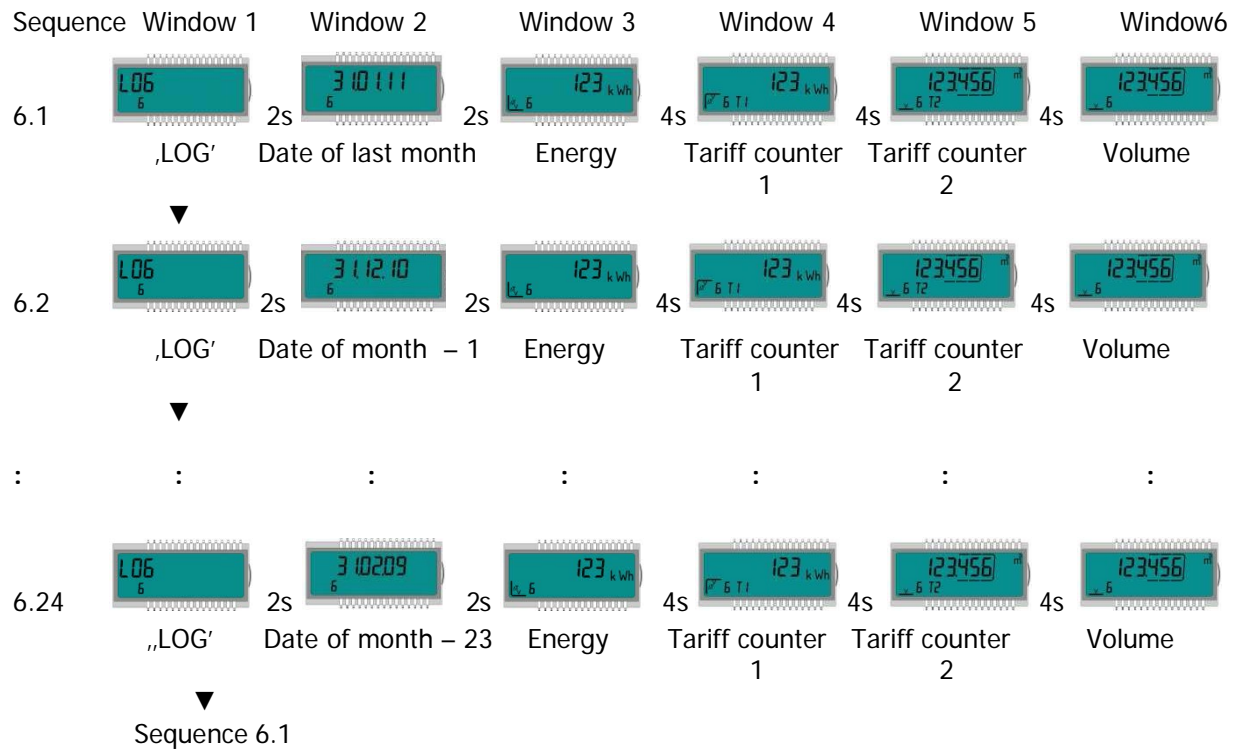

9 Maintenance and repair



NOTE

Information concerning repair and maintenance can be obtained from the Repair Concept.

10 Testing



NOTE

Information concerning testing can be obtained from the relevant Inspection and Test Instruction.

Test information can also be found in the EC type examination certificate of the meter under 5.1 (Test documentation) and in EN 1434-5. The number of the type examination certificate is printed on the calculator of the meter.

11 Removal



CAUTION

Danger due to escape of heat medium.

Risk of burns!

⇒ Close the stop valves before removing the meter.

⇒ Remove the energy meter.

11.1 Disposal of energy meter



NOTE

The meter contains a lithium battery. This must not be opened by force, come into contact with water, be short-circuited or exposed to temperatures above 85 °C.

Used batteries and electronic equipment or components no longer required are to be handled as special waste.

⇒ Dismantle energy meter.

⇒ Dispose of the individual parts of the meter at a suitable waste collection point.

12 Error analysis

The meter continuously monitors its own operation and displays various error messages. The error code is displayed in the main loop if an error occurs. The permanent display shown corresponds to the "normal" display (e.g. a temperature sensor error is not shown in the flow rate display). In the basic display mode, the display changes between error codes 1, 4 and 7 and the basic display (exception: error display "C - 1" is shown permanently). All the other windows can still be selected by pressing the button.

The error display disappears automatically as soon as the cause of the error has been cleared. All errors present longer than 6 minutes are saved in the error log.

The following table shows the error codes indicated in the display with their respective meaning:

Error display	Meaning
C - 1	Basic parameter error in flash or RAM
E - 1	Temperature measurement error - Temperature range exceeded [-9.9 °C ... 190 °C] - Sensor short-circuit - Sensor break
E - 3**	Temperature sensors reversed in hot and cold lines
E - 4	Hardware error in ultrasonic measurement - Ultrasonic transducer defective - Short-circuit in ultrasonic transducer
E - 5	Reading too frequently - M-Bus communication not possible for short time
E - 6**	Wrong direction of flow Flow sensor incorrectly installed
E - 7	No meaningful ultrasonic receive signal - Air in the measuring path
E - 8	No primary voltage (only if mains unit used) - Powered by back-up battery
E - 9	Warning: battery nearly exhausted
E - A*	Leakage: pipe break detected
E - b*	Leakage: leakage detected in energy meter
E - C*	Leakage: leakage pulse input 1
E - d*	Leakage: leakage pulse input 2


* optional

** depends on application

13 Declaration of conformity

DIEHL
Metering

DMDE-CE 144/8



<DE> <BG> <ES> <CS> <DA> <ET> <EL> <EN> <FR> <HR> <IT> <LV> <LT> <HU> <MT> <NL> <PL> <PT> <RO> <SK> <SL> <FI> <SV>

<DE> **EU-KONFORMITÄTSEKHLÄRUNG** <BG> **ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ** <ES> **DECLARACIÓN UE DE CONFORMIDAD**
<CS> **EU PROHLÁŠENÍ O SHODĚ** <DA> **EU-OVERENSSTEMMELSESEKHLÄRING** <ET> **ELI VASTAVUSDEKLARATSIOON**
<EL> **ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ** <EN> **EU DECLARATION OF CONFORMITY** <FR> **DÉCLARATION UE DE CONFORMITÉ**
<HR> **IZJAVA EU-a O SUKLADNOSTI** <IT> **DICHIARAZIONE DI CONFORMITÀ UE** <LV> **ES ATBILSTĪBAS DEKLARĀCIJA**
<LT> **ES ATITIKTIES DEKLARACIJA** <HU> **EU-MEGFELELŐSÉGI NYILATKOZAT** <MT> **DIKJARAZZJONI TAL-KONFORMITÀ TAL-UE**
<NL> **EU-CONFORMITEITSVERKLARING** <PL> **DEKLARACJA ZGODNOŚCI UE** <PT> **DECLARAÇÃO UE DE CONFORMIDADE**
<RO> **DECLARAȚIE UE DE CONFORMITATE** <SK> **EÚ VYHLÁSENIE O ZHODE** <SL> **IZJAVA EU O SKLADNOSTI**
<FI> **EU-VAATIMUSTENMUKAISUUSVAKUUTUS** <SV> **EU-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE**

1., 4. <DE> Gerätetyp / Produkt, Gegenstand der Erklärung - <BG> Тип на устройството / продукт, предмет на декларацията - <ES> Tipo de dispositivo / producto, objeto de dicha declaración - <CS> Typ zařízení / produkt, předmět prohlášení - <DA> Enhedstype / produkt, Erklæringsgenstand - <ET> Seadme tüüp / toote, Deklareeritav toode - <EL> Τύπος συσκευής / προϊόν, Στόχος της δήλωσης - <EN> Device Type / Product, object of the declaration - <FR> Type d'appareil / produit, objet de la déclaration - <HR> Tip uređaja / proizvoda, Predmet izjave - <IT> Tipo di apparecchio / prodotto, oggetto della dichiarazione - <LV> Ierīces tips / produkta, Deklarācijas priekšmets - <LT> Prietaisų tipas / gaminio, Deklaracijos objektas - <HU> Eszköz típusa/termék, a nyilatkozat tárgya - <MT> Tip ta 'apparat / prodoit, għan tad-dikjarazzjoni - <NL> Type apparaat / product, Voorwerp van de verklaring - <PL> Rodzaj urządzenia / produktu, przedmiot deklaracji - <PT> Tipo do aparelho/produto, objeto da declaração - <RO> Dispozitiv tip / produs, obiectul declarației - <SK> Typ prístroja/výrobku, predmet vyhlásenia - <SL> Vrsta aparata/proizvod, predmet izjave - <FI> Laiteen tyyppi / tuote, vakuutuksen kohde - <SV> Enhetstyp / produkt, föremål för försäkran:

Type 775

SHARKY

2. <DE> Name und Anschrift des Herstellers - <BG> Наименование и адрес на производителя - <ES> Nombre y dirección del fabricante - <CS> Jméno/název a adresa výrobce - <DA> Navn og adresse på fabrikanten - <ET> Tootja nimi ja aadress - <EL> Όνομα και διεύθυνση του κατασκευαστή - <EN> Name and address of the manufacturer - <FR> Nom et adresse du fabricant - <HR> Naziv i adresa proizvođača - <IT> Nome e indirizzo del fabbricante - <LV> Ražotāja nosaukums un adrese - <LT> Pavadinimas ir adresas gamintojo - <HU> A gyártó neve és címe - <MT> Isem u indirizz tal-manifattur - <NL> Naam en adres van de fabrikant - <PL> Nazwa i adres producenta - <PT> Nome e endereço do fabricante - <RO> Numele și adresa producătorului - <SK> Meno a adresa výrobcu - <SL> Ime in naslov proizvajalca - <FI> Nimi ja osoite valmistajan - <SV> Namn och adress på tillverkaren:

Diehl Metering GmbH, Industriestrasse 13, D-91522 Ansbach

3. <DE> Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller - <BG> Настоящата декларация за съответствие е издадена на отговорността на производителя - <ES> La presente declaración de conformidad se expide bajo la exclusiva responsabilidad del fabricante - <CS> Toto prohlášení o shodě se vydává na výhradní odpovědnost výrobce - <DA> Denne overensstemmelseserklæring udstedes på fabrikantens ansvar - <ET> Käesolev vastavusdeklaratsioon on välja antud tootja ainuvastutusel - <EL> Η παρούσα δήλωση συμμόρφωσης εκδίδεται με αποκλειστική ευθύνη του κατασκευαστή - <EN> This declaration of conformity is issued under the sole responsibility of the manufacturer - <FR> La présente déclaration de conformité est établie sous la seule responsabilité du fabricant - <HR> Za izdavanje ove izjave EU-a o sukladnosti odgovoran je samo proizvođač - <IT> La presente dichiarazione di conformità è rilasciata sotto la responsabilità esclusiva del fabbricante - <LV> Šī atbilstības deklarācija ir izdota vienīgi uz ražotāja atbildību - <LT> Ši atitikties deklaracija išduota gamintojui prisimant visą atsakomybę - <HU> Ezt a megfelelőségi nyilatkozatot a gyártó kizárólagos felelőssége mellett adják ki - <MT> Din id-dikjarazzjoni tal-konformità tinhareg taht ir-responsabbiltà unika tal-manifattur - <NL> Deze conformiteitsverklaring wordt verstrekt onder volledige verantwoordelijkheid van de fabrikant - <PL> Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta - <PT> A presente declaração de conformidade é emitida sob a exclusiva responsabilidade do fabricante - <RO> Prezenta declarație de conformitate este emisă pe răspunderea exclusivă a producătorului - <SK> Toto vyhlásenie o zhode sa vydáva na výhradnú zodpovednosť výrobcu - <SL> Za izdajo te izjave o skladnosti je odgovoren izključno proizvajalec - <FI> Tämä vaatimustenmukaisuusvakuutus on annettu valmistajan yksinomaisella vastuulla - <SV> Denna försäkran om överensstämmelse utfärdas på tillverkarens eget ansvar.

5. <DE> Der oben beschriebene Gegenstand der Erklärung erfüllt die einschlägigen Harmonisierungsrechtsvorschriften der Union, soweit diese Anwendung finden: - <BG> Предметът на декларацията, описан по-горе, отговаря на съответното законодателство на Съюза за хармонизация, доколкото те се прилагат: - <ES> El objeto de la declaración descrita anteriormente es conforme con la legislación de armonización pertinente de la Unión, en la medida aplicable: - <CS> Výše popsaný předmět prohlášení je ve shodě s příslušnými harmonizačními právními předpisy Unie, pokud se vztahují: - <DA> Genstanden for erklæringen, som beskrevet ovenfor, er i overensstemmelse med den relevante EU-harmoniseringslovgivning, omfang de finder anvendelse: - <ET> Eelkirjeldataud deklareeritav toode on kooskõlas asjaomaste liidu ühtlustatud õigusaktidega, niivõrd kui neid kohaldatakse: - <EL> Ο στόχος της δήλωσης που περιγράφεται παραπάνω είναι σύμφωνος με τη σχετική ενωσιακή νομοθεσία εναρμόνισης, βαθμό που εφαρμόζονται: - <EN> The object of the declaration described above is in conformity with the relevant Union harmonisation legislation, insofar as it is applied: - <FR> L'objet de la déclaration décrit ci-dessus est conforme à la législation d'harmonisation de l'Union applicable: - <HR> Predmet gore opisane izjave u skladu je s mjerodavnim zakonodavstvom Unije o uskladjivanju, onaj mjeri u kojoj se primjenjuju - <IT> L'oggetto della dichiarazione di cui sopra è conforme alla pertinente normativa di armonizzazione dell'Unione, purché valgano - <LV> Iepriekš aprakstītais deklarācijas priekšmets atbilst attiecīgajam Savienības saskaņošanas tiesību aktam, ciktāl tas tie ir piemērojami: - <LT> Pirmiau aprašytas deklaracijos objektas atitinka susijusius derinamuosius Sąjungos teisės aktus, tiek, kiek jos taikomos - <HU> A fent ismertetett nyilatkozat tárgya megfelel a vonatkozó uniós harmonizációs jogszabálynak, amennyiben azok alkalmazhatóak - <MT> L-għan tad-dikjarazzjoni deskritta hawn fuq huwa konformi mal-legiżlazzjoni ta' armonizzazzjoni rilevanti tal-Unjoni, safejn dawn applikati: - <NL> Het hierboven beschreven voorwerp is in overeenstemming de desbetreffende harmonisatiewetgeving van de Unie, voor zover van toepassing: - <PL> Opisany powyżej przedmiot niniejszej deklaracji jest zgodny z odpowiednimi wymaganiami unijnego prawodawstwa harmonizacyjnego, jeśli mające zastosowanie - <PT> O objeto da declaração acima descrito está em conformidade com a legislação de harmonização da União aplicável: - <RO> Obiectul declarației descris mai sus este în conformitate cu legislația relevantă de armonizare a Uniunii, dacă aplicabil: - <SK> Uvedený predmet vyhlásenia je v zhode s príslušnými harmonizačnými právnymi predpismi Unie, čo je použiteľný: - <SL> Predmet navedene izjave je v skladu z ustrezno zakonodajo Unije o harmonizaciji, kot uporablja: - <FI> Edellä kuvattu vakuutuksen kohde on asiaa koskevan EUn yhdenmukaistamislainsäädännön vaatimusten mukainen, soveltuvin osin: - <SV> Föremålet för försäkran ovan överensstämmer med den relevanta harmoniserade unionslagstiftningen, i den mån tillämplig:

2014/30/EU (OJ L 96, 29.3.2014)
2014/53/EU (OJ L 153, 22.5.2014)

2014/32/EU (OJ L 96, 29.3.2014)

2014/35/EU (OJ L 96, 29.3.2014)

6. <DE> Angabe der einschlägigen harmonisierten Normen oder normativen Dokumente, die zugrunde gelegt wurden, oder Angabe der anderen normativen Dokumente oder anderen technischen Spezifikationen, für die die Konformität erklärt wird: - <BG> Позоваване на използваните хармонизирани стандарти или нормативни документи или позоваване на други технически спецификации, по отношение на които се декларира съответствие: - <ES> Referencias a las normas armonizadas o documentos normativos pertinentes utilizados, o referencias a las otras especificaciones técnicas respecto a las cuales se declara la conformidad: - <CS> Odkazy na příslušné harmonizované normy nebo normativní dokumenty, které byly použity, nebo na jiné technické specifikace, ve vztahu k nimž se shoda prohlašuje: - <DA> Referencer til de relevante harmoniserede standarder eller anvendte normative dokumenter eller referencer til de andre tekniske specifikationer, som der erklæres overensstemmelse med: - <ET> Viited kasutatud harmoneeritud standarditele või normdokumentidele või viited muudele tehnilistele spetsifikatsioonidele, millele vastavust deklareeritakse: - <EL> Μνεία των σχετικών εναρμονισμένων προτύπων ή κανονιστικών εγγράφων που χρησιμοποιήθηκαν ή μνεία των λοιπών τεχνικών προδιαγραφών σε σχέση με τις οποίες δηλώνεται η συμμόρφωση: - <EN> References to the relevant harmonised standards or normative documents used or references to the other technical specifications in relation to which conformity is declared: - <FR> Références des normes harmonisées ou des documents normatifs pertinents appliqués ou références aux autres spécifications techniques par rapport auxquels la conformité est déclarée: - <HR> Upućivanja na relevantne primijenjene usklađene norme ili normativne dokumente ili upućivanja na druge tehničke specifikacije u vezi s kojima se izjavljuje skladnost: - <IT> Riferimento alle pertinenti norme armonizzate o ai documenti normativi utilizzati o riferimenti alle altre specifiche tecniche in relazione alle quali è dichiarata la conformità. - <LV> Atsauces uz attiecīgajiem izmantojamiem saskaņotajiem standartiem vai normatīvajiem dokumentiem vai atsaucis uz citām tehniskajām specifikācijām, attiecībā uz ko tiek deklarēta atbilstība: - <LT> Nuorodos į atitinkamus darnuosius standartus ar naudotus norminius dokumentus arba nuorodos į kitas technines specifikacijas, pagal kurias deklaruota atitiktis: - <HU> Az alkalmazott harmonizált szabványokra hivatkozás, illetve a normatív dokumentumokra vagy azokra az egyéb műszaki leírásokra való hivatkozás, amelyekkel kapcsolatban megfeleléségi nyilatkozatot tettek: - <MT> Ir-referenzi għall-istandards armonizzati rilevanti jew dokumenti normattivi li ntużaw jew għall-ispeċifikazzjonijiet tekniċi l-oħra li fir-rigward tagħhom qed tiġi dkljarata l-konformità: - <NL> Vermelding van de toegepaste relevante geharmoniseerde normen of normatieve documenten of vermelding van de overige technische specificaties waaron de conformiteitsverklaring betrekking heeft: - <PL> Odniesienia do odpowiednich norm zharmonizowanych lub odpowiednich dokumentów normatywnych, które zastosowano, lub do innych specyfikacji technicznych, w stosunku do których deklarowana jest zgodność: - <PT> Referências às normas harmonizadas aplicáveis ou aos documentos normativos utilizados ou às outras especificações técnicas em relação às quais é declarada a conformidade: - <RO> Trimiteri la standarde armonizate sau documente normative relevante utilizate sau trimiteri la la alte specificatii tehnice relevante in legatura cu care se declara conformitatea: - <SK> Odkazy na príslušné použité harmonizované normy alebo normatívne dokumenty alebo iné technické špecifikácie, v súvislosti s ktorými sa zhoda vyhlasuje: - <SL> Sklicevanja na zadevne harmonizirane standarde ali uporabljene normative dokumente ali sklicevanja na druge tehnične specifikacije v zvezi s skladnostjo, ki je navedena v izjavi: - <FI> Viittaukset niihin asiaankuuluihin yhdenmukaistettuihin standardeihin tai ohjeellisiin asiakirjoihin, joita on käytytty, tai viittaus muihin teknisin eritelmiin, joiden perusteella vaatimustenmukaisuusvakuutus on annettu: - <SV> Hänvisningar till de relevanta harmoniserade standarder eller normerande dokument som använts eller hänvisningar till de andra numerande dokument eller andra tekniska specifikationer enligt vilka överensstämmelsen försäkras.


EN 55022:2010	EN 1434:2015	OIML R75:2006
EN 61010-1:2010	EN 60529:1991/A2:2013	EN 301 489-1 v1.9.2
EN 301 489-3 v1.6.1	EN 300 220-2 v3.1.1	EN 60950-1:2006/A2:2013
WELMEC 7.2		

<DE> Beteiligung notified Stellen - <BG> Участие на нотифицираните органи - <ES> Participación de los organismos notificados - <CS> Participace oznámené subjekty - <DA> Deltagelse de bemyndigede organer - <ET> Osalemine teavitatud asutuste - <EL> Συμμετοχή των κοινοποιημένων οργαניσμών - <EN> Participation of notified bodies - <FR> Participation des organismes notifiés - <HR> Sudjelovanje prijavljena tijela - <IT> Il coinvolgimento degli organismi notificati - <LV> Iesaistīšana pilnvaroto iestāžu - <LT> Dalyvavimas notifikuotosios įstaigos - <HU> Részvétel a bejelentett szervezetek - <MT> Involvement ta 'korpi notifikati - <NL> Deelneming aangemelde instanties - <PL> Uczestniczące jednostki notyfikowane - <PT> Envolvimento dos organismos notificados - <RO> Participante organismelor notificate - <SK> Účastnícke notifikované orgány - <SL> Udeležba priglašeni organi - <FI> Todistuksiin osallistuneet laitokset: - <SV> Deltagande anmälda organ:

PTB Braunschweig und Berlin (NB 0102)	Modul B (2014/32/EU) No. DE-10-MI004-PTB013
	Modul D (2004/22/EG) No. DE-M-AQ-PTB004 (→ 29.10.2018)
	Modul D (2014/32/EU) No. DE-M-AQ-PTB004 (30.10.2018 →)

<DE> Unterzeichnet für und im Namen von - <BG> Подписано за и от името на: - <ES> Firmado por y en nombre de: - <CS> Podepsáno za a jménem: - <DA> Underskrevet for og på vegne af: - <ET> Alla kirjutatud eest ja nimel: - <EL> Υπογραφή για λογαριασμό και εξ ονόματος: - <EN> Signed for and on behalf of: - <FR> Signé par et au nom de: - <HR> Potpisano za i u ime: - <IT> Firmato a nome e per conto di: - <LV> Parakšīts šādas personas vārdā: - <LT> Už ką ir kieno vardu pasirašyta: - <HU> A nyilatkozatot a ... nevében és megbízásából írták alá: - <MT> Iffirmat għal u f'isem: - <NL> Ondertekend voor en namens: - <PL> Podpisano w imieniu: - <PT> Assinado por e em nome de: - <RO> Semnat pentru și în numele: - <SK> Podpísané za a v mene: - <SL> Podpisano za in v imenu: - <FI> ... puolesta allekirjoittanut - <SV> Underteknat för:

Diehl Metering GmbH
Ansbach,
28.03.2018



L.V. Matthias Wirsching
<DE> Leiter Produktion - <BG> ръководител на производство
<ES> Jefe de producción - <CS> vedoucí výroby
<DA> leder af produktion - <ET> Head tootmise
<EL> Επικεφαλής της παραγωγής - <EN> Head of Production
<FR> chef de production - <HR> voditelj proizvodnje
<IT> capo della produzione - <LV> Vadītājs ražošanas
<LT> vadovas gamybos - <HU> Vezetője termelés
<MT> Kap tal-produzzjoni - <NL> hoofd van de productie
<PL> Szef produkcji - <PT> Chefe de produção
<RO> Șef de producție - <SK> vedúci výroby
<SL> Vodja proizvodnje - <FI> Johtaja tuotannon
<SV> Chef för produktion



ppa: Philippe Vorburger
<DE> Leiter Entwicklung - <BG> ръководител на развитие
<ES> Jefe de desarrollo - <CS> vedoucí vývoje
<DA> leder af udvikling - <ET> Head areng
<EL> Επικεφαλής της ανάπτυξης - <EN> Head of R&D
<FR> Responsable du développement - <HR> voditelj razvoja
<IT> capo dello sviluppo - <LV> Vadītājs attīstības
<LT> vadovas plėtrai - <HU> Fejlesztési vezető
<MT> Kap ta 'żvilupp - <NL> hoofd van de ontwikkeling
<PL> Szef rozwoju - <PT> Chefe de desenvolvimento
<RO> Șeful de dezvoltare - <SK> vedúci vývoja
<SL> Vodja razvoja - <FI> Johtaja kehitys
<SV> Chef för utveckling

DMDE_CE144_B.docx - 2 -

<DE> <BG> <ES> <CS> <DA> <ET> <EL> <EN> <FR> <HR> <IT> <LV> <LT> <HU> <MT> <NL> <PL> <PT> <RO> <SK> <SL> <FI> <SV>

<DE> **EU-KONFORMITÄTSERKLÄRUNG** <BG> **ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ** <ES> **DECLARACIÓN UE DE CONFORMIDAD**
 <CS> **EU PROHLÁŠENÍ O SHODĚ** <DA> **EU-OVERENSSTEMMELSEERKLÆRING** <ET> **ELI VASTAVUSDEKLARATSIOON**
 <EL> **ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ** <EN> **EU DECLARATION OF CONFORMITY** <FR> **DÉCLARATION UE DE CONFORMITÉ**
 <HR> **IZJAVA EU-a O SKLADNOSTI** <IT> **DICHIARAZIONE DI CONFORMITÀ UE** <LV> **ES ATBILSTĪBAS DEKLARĀCIJA**
 <LT> **ES ATITIKTIKTES DEKLARACIJA** <HU> **EU-MEGFELELŐSÉGI NYILATKOZAT** <MT> **DIKJARAZZJONI TAL-KONFORMITÀ TAL-UE**
 <NL> **EU-KONFORMITEITSVERKLARING** <PL> **DEKLARACJA ZGODNOŚCI UE** <PT> **DECLARAÇÃO UE DE CONFORMIDADE**
 <RO> **DECLARAȚIE UE DE CONFORMITATE** <SK> **EÚ VYHLÁSENIE O ZHODE** <SL> **IZJAVA EU O SKLADNOSTI**
 <FI> **EU-VAATIMUSTENMUKAISUUSVAKUUTUS** <SV> **EU-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE**

1., 4. <DE> Gerätetyp / Produkt, Gegenstand der Erklärung - <BG> Тип на устройството / продукт, предмет на декларацията - <ES> Tipo de dispositivo / producto, objeto de dicha declaración - <CS> Typ zařízení / produkt, předmět prohlášení - <DA> Enhedstype / produkt, Erklæringsgens genstand - <ET> Seadme tüüp / toote, Deklareeritav toode - <EL> Τύπος συσκευής / προϊόν, Στόχος της δήλωσης - <EN> Device Type / Product, object of the declaration - <FR> Type d'appareil / produit, objet de la déclaration - <HR> Tip uređaja / proizvoda, Predmet izjave - <IT> Tipo di apparecchio / prodotto, oggetto della dichiarazione - <LV> Ierīces tips / produkta, Deklarācijas priekšmets - <LT> Prietaisų tipas / gaminio, Deklaracijos objektas - <HU> Eszköz típusa/termék, a nyilatkozat tárgya - <MT> Tip ta 'apparat / prodott, għan tad-dikjarazzjoni - <NL> Type apparaat / product, Voorwerp van de verklaring - <PL> Rodzaj urządzenia / produktu, przedmiot deklaracji - <PT> Tipo do aparelho/produto, objeto da declaração - <RO> Dispozitiv tip / produs, obiectul declarației - <SK> Typ prístroja/výrobku, predmet vyhlásenia - <SL> Vrsta aparata/proizvod, predmet izjave - <FI> Laitteen tyyppi / tuote, vakuutuksen kohde - <SV> Enhetstyp / produkt, föremål för försäkran:

Type 775

SHARKY, SHARKY SOLAR

2. <DE> Name und Anschrift des Herstellers - <BG> Наименование и адрес на производителя - <ES> Nombre y dirección del fabricante - <CS> Jméno/název a adresa výrobce - <DA> Navn og adresse på fabrikanten - <ET> Tootja nimi ja aadress - <EL> Όνομα και διεύθυνση του κατασκευαστή - <EN> Name and address of the manufacturer - <FR> Nom et adresse du fabricant - <HR> Naziv i adresa proizvođača - <IT> Nome e indirizzo del fabbricante - <LV> Ražotāja nosaukums un adrese - <LT> Pavadinimas ir adresas gamintojo - <HU> A gyártó neve és címe - <MT> Isem u indirizz tal-manifattur - <NL> Naam en adres van de fabrikant - <PL> Nazwa i adres producenta - <PT> Nome e endereço do fabricante - <RO> Numele și adresa producătorului - <SK> Meno a adresa výrobcu - <SL> Ime in naslov proizvajalca - <FI> Nimi ja osoite valmistajan - <SV> Namn och adress på tillverkaren:

Diehl Metering GmbH, Industriestrasse 13, D-91522 Ansbach

3. <DE> Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller - <BG> Настоящата декларация за съответствие е издадена на отговорността на производителя - <ES> La presente declaración de conformidad se expide bajo la exclusiva responsabilidad del fabricante - <CS> Toto prohlášení o shodě se vydává na výhradní odpovědnost výrobce - <DA> Denne overensstemmelseerklæring udstedes på fabrikantens ansvar - <ET> Käesolev vastavusdeklaratsioon on välja antud tootja ainuvastutusel - <EL> Η παρούσα δήλωση συμμόρφωσης εκδίδεται με αποκλειστική ευθύνη του κατασκευαστή - <EN> This declaration of conformity is issued under the sole responsibility of the manufacturer - <FR> La présente déclaration de conformité est établie sous la seule responsabilité du fabricant - <HR> Za izdavanje ove izjave EU-a o skladnosti odgovoran je samo proizvođač - <IT> La presente dichiarazione di conformità è rilasciata sotto la responsabilità esclusiva del fabbricante - <LV> Šī atbilstības deklarācija ir izdota vienīgi uz ražotāja atbildību - <LT> Ši atitikties deklaracija išduota gamintojui prisimant visą atsakomybę - <HU> Ezt a megfelelőségi nyilatkozatot a gyártó kizárólagos felelőssége mellett adják ki - <MT> Din id-dikjarazzjoni tal-konformità tinhareg taht ir-responsabbiltà unika tal-manifattur - <NL> Deze conformiteitsverklaring wordt verstrekt onder volledige verantwoordelijkheid van de fabrikant - <PL> Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta - <PT> A presente declaração de conformidade é emitida sob a exclusiva responsabilidade do fabricante - <RO> Prezenta declarație de conformitate este emisă pe răspunderea exclusivă a producătorului - <SK> Toto vyhlásenie o zhode sa vydáva na výhradnú zodpovednosť výrobcu - <SL> Za izdajo te izjave o skladnosti je odgovoren izključno proizvajalec - <FI> Tämä vaatimustenmukaisuusvakuutus on annettu valmistajan yksinomaisella vastuulla - <SV> Denna försäkran om överensstämmelse utfärdas på tillverkarens eget ansvar.

5. <DE> Der oben beschriebene Gegenstand der Erklärung erfüllt die einschlägigen Harmonisierungsrechtschriften der Union, soweit diese Anwendung finden: - <BG> Предметът на декларацията, описан по-горе, отговаря на съответното законодателство на Съюза за хармонизация, доколкото те се прилагат: - <ES> El objeto de la declaración descrita anteriormente es conforme con la legislación de armonización pertinente de la Unión, en la medida aplicable: - <CS> Výše popsany předmět prohlášení je ve shodě s příslušnými harmonizačními právními předpisy Unie, pokud se vztahují: - <DA> Genstanden for erklæringen, som beskrevet ovenfor, er i overensstemmelse med den relevante EU-harmoniseringslovgivning, omfang de finder anvendelse: - <ET> Eelkirjeldataud deklareeritav toode on kooskõlas asjaomaste liidu ühtlustatud õigusaktidega, niivõrd kui neid kohaldatakse: - <EL> Ο στόχος της δήλωσης που περιγράφεται παραπάνω είναι σύμφωνος με τη σχετική ενωσιακή νομοθεσία εναρμόνισης, βεβαίω που εφαρμόζονται: - <EN> The object of the declaration described above is in conformity with the relevant Union harmonisation legislation, insofar as it is applied: - <FR> L'objet de la déclaration décrit ci-dessus est conforme à la législation d'harmonisation de l'Union applicable: - <HR> Predmet gore opisane izjave u skladu je s mjerodavnim zakonodavstvom Unije o usklađivanju, onaj mjeri u kojoj se primjenjuju - <IT> L'oggetto della dichiarazione di cui sopra è conforme alla pertinente normativa di armonizzazione dell'Unione, purché valgano - <LV> Iepriekš aprakstītais deklarācijas priekšmets atbilst attiecīgajam Savienības saskaņošanas tiesību aktam, ņemot vērā tos tie ir piemērojami - <LT> Pirmiau aprašytas deklaracijos objektas atitinka susijusius derinamuosius Sąjungos teisės aktus, tiek, kiek jos taikomos - <HU> A fent ismertetett nyilatkozat tárgya megfelel a vonatkozó uniós harmonizációs jogszabálynak, amennyiben azok alkalmazhatóak - <MT> L-għan tad-dikjarazzjoni deskritta hawn fuq huwa konformi mal-legiżlazzjoni ta' armonizzazzjoni rilevanti tal-Unjoni, safejn dawn applikati: - <NL> Het hierboven beschreven voorwerp is in overeenstemming de desbetreffende harmonisatiewetgeving van de Unie, voor zover van toepassing: - <PL> Opisany powyżej przedmiot niniejszej deklaracji jest zgodny z odnośnymi wymaganiami unijnego prawodawstwa harmonizacyjnego, jeśli mające zastosowanie - <PT> O objeto da declaração acima descrito está em conformidade com a legislação de harmonização da União aplicável: - <RO> Obiectul declarației descris mai sus este în conformitate cu legislația relevantă de armonizare a Uniunii, dacă aplicabil: - <SK> Uvedený predmet vyhlásenia je v zhode s príslušnými harmonizačnými právnymi predpismi Unie, čo je použiteľný: - <SL> Predmet navedene izjave je v skladu z ustreznimi zakonodajami Unije o harmonizaciji, kot uporabljajo: - <FI> Edellä kuvattu vakuutuksen kohde on asiaa koskevan EUn yhdenmukaistamislainsäädännön vaatimusten mukainen, soveltuvin osin: - <SV> Föremålet för försäkran ovan överensstämmer med den relevanta harmoniserade unionslagstiftningen, i den mån tillämplig:

2014/30/EU (OJ L 96, 29.3.2014) 2014/35/EU (OJ L 96, 29.3.2014) 2014/53/EU (OJ L 153, 22.5.2014)

6. <DE> Angabe der einschlägigen harmonisierten Normen oder normativen Dokumente, die zugrunde gelegt wurden, oder Angabe der anderen normativen Dokumente oder anderen technischen Spezifikationen, für die die Konformität erklärt wird: - <BG> Позоваване на използваните хармонизирани стандарти или нормативни документи или позоваване на други технически спецификации, по отношение на които се декларира съответствие: - <ES> Referencias a las normas armonizadas o documentos normativos pertinentes utilizados, o referencias a las obras especificaciones técnicas respecto a las cuales se declara la conformidad: - <CS> Odkazy na příslušné harmonizované normy nebo normativní dokumenty, které byly použity, nebo na jiné technické specifikace, ve vztahu k nimž se shoda prohlašuje: - <DA> Referencer til de relevante harmoniserede standarder eller anvendte normative dokumenter eller referencer til de andre tekniske specifikationer, som der erklæres overensstemmelse med: - <ET> Viited kasutatud harmoneeritud standarditele või normdokumentidele või viited muudele tehnilistele spetsifikatsioonidele, millele vastavust deklareeritakse: - <EL> Μνεία των σχετικών ενωμοποιημένων προτύπων ή κανονιστικών συγγράφων που χρησιμοποιήθηκαν ή μνεία των λοιπών τεχνικών προδιαγραφών σε σχέση με τις οποίες δηλώνεται η συμμόρφωση: - <EN> References to the relevant harmonised standards or normative documents used or references to the other technical specifications in relation to which conformity is declared: - <FR> Références des normes harmonisées ou des documents normatifs pertinents appliqués ou références aux autres spécifications techniques par rapport auxquels la conformité est déclarée: - <HR> Upućivanja na relevantne primjenjene usklađene norme ili normativne dokumente ili upućivanja na druge tehničke specifikacije u vezi s kojima se izjavljuje sukladnost: - <IT> Riferimento alle pertinenti norme armonizzate o ai documenti normativi utilizzati o riferimenti alle altre specifiche tecniche in relazione alle quali è dichiarata la conformità. - <LV> Atsauces uz attiecīgajiem izmantojamiem saskaņotajiem standartiem vai normatīvajiem dokumentiem vai atsauces uz citām tehniskajām specifikācijām, attiecībā uz ko tiek deklarēta atbilstība: - <LT> Nuorodos į atitinkamus darnuosius standartus ar naudotus norminius dokumentus arba nuorodos į kitas technines specifikacijas, pagal kurias deklaruota atitiktis: - <HU> Az alkalmazott harmonizált szabványokra hivatkozás, illetve a normatív dokumentumokra vagy azokra az egyéb műszaki leírásokra való hivatkozás, amelyekkel kapcsolatban megfeleléségi nyilatkozatot tettek: - <MT> Ir-referenzi għall-istandards armonizzati rilevanti jew dokumenti normattivi li ntuzaw jew għall-ispeċifikazzjonijiet teknici l-oħra li fir-rigward tagħhom qed bigi ddikjarata l-konformità: - <NL> Vermelding van de toegepaste relevante geharmoniseerde normen of normatieve documenten of vermelding van de overige technische specificaties waarop de conformiteitsverklaring betrekking heeft: - <PL> Odniesienia do odpowiednich norm zharmonizowanych lub odpowiednich dokumentów normatywnych, które zastosowano, lub do innych specyfikacji technicznych, w stosunku do których deklarowana jest zgodność: - <PT> Referências às normas harmonizadas aplicáveis ou aos documentos normativos utilizados ou às outras especificações técnicas em relação às quais é declarada a conformidade: - <RO> Trimiteri la standardele armonizate sau documentele normative relevante utilizate sau trimiteri la alte specificatii tehnice relevante in legatura cu care se declara conformitatea: - <SK> Odkazy na príslušné použité harmonizované normy alebo normatívne dokumenty alebo iné technické špecifikácie, v súvislosti s ktorými sa zhoda vyhlasuje: - <SL> Sklicevanja na zadevne harmonizirane standarde ali uporabljene normativne dokumente ali sklicevanja na druge tehnične specifikacije v zvezi s skladnostjo, ki je navedena v izjavi: - <FI> Viittaukset niihin asiaankuuluihin yhdenmukaistettuihin standardeihin tai ohjeellisiin asiakirjoihin, joita on käytetty, tai viittaus muihin teksteihin eritelmiin, joiden perusteella vaatimustenmukaisuusvakuutus on annettu: - <SV> Hänvisningar till de relevanta harmoniserade standarder eller numerande dokument som använts eller hänvisningar till de andra numerande dokument eller andra tekniska specifikationer enligt vilka överensstämelsen försäkras.

EN 55022:2010	EN 1434:2015	OIML R75:2006
EN 61010-1:2010	EN 60529:1991/A2:2013	EN 301 489-1 v1.9.2
EN 301 489-3 v1.6.1	EN 300 220-2 v3.1.1	EN 60950-1:2006/A2:2013
WELMEC 7.2		

<DE> Beteiligung notifizierter Stellen - <BG> Участие на нотифицираните органи - <ES> Participación de los organismos notificados - <CS> Participace oznámené subjekty - <DA> Deltagelse de bemyndigede organer - <ET> Osalemine teavitatud asutuste - <EL> Συμμετοχή των κοινοποιημένων οργαניσμών - <EN> Participation of notified bodies - <FR> Participation des organismes notifiés - <HR> Sudjelovanje prijavnjena tijela - <IT> Il coinvolgimento degli organismi notificati - <LV> Iesaistīšana pilnvaroto iestāžu - <LT> Dalyvavimas notifikuosios įstaigos - <HU> Részvétele a bejelentett szervezetek - <MT> Involvement ta 'korpi notifikati - <NL> Deelneming aangemelde instanties - <PL> Uczestniczące jednostki notyfikowane - <PT> Envolvimento dos organismos notificados - <RO> Participante organismelor notificate - <SK> Účastnícke notifikované orgány - <SL> Udeležba priglašeni organi - <FI> Todistuksiin osallistuneet laitokset - <SV> Deltagande anmälda organ;

✓

<DE> Unterzeichnet für und im Namen von - <BG> Подписано за и от името на: - <ES> Firmado por y en nombre de: - <CS> Podepsáno za a jménem: - <DA> Underskrevet for og på vegne af: - <ET> Alla kirjutatud eest ja nimel: - <EL> Υπογραφή για λογαριασμό και εξ ονόματος: - <EN> Signed for and on behalf of: - <FR> Signé par et au nom de: - <HR> Potpisano za i u ime: - <IT> Firmato a nome e per conto di: - <LV> Parakšīts šādas personas vārdā: - <LT> Už ką ir kieno vardu pasirašyta: - <HU> A nyilatkozatot a ... nevében és megbízásából írták alá: - <MT> Iffirmat għali u f'isem: - <NL> Ondertekend voor en namens: - <PL> Podpisano w imieniu: - <PT> Assinado por e em nome de: - <RO> Semnat pentru și în numele: - <SK> Podpísané za a v mene: - <SL> Podpisano za in v imenu: - <FI> ... puolesta allekirjoittanut - <SV> Undertecknat för;

Diehl Metering GmbH
Ansbach,
28.03.2018



I. V. Matthias Wirsching

<DE> Leiter Produktion - <BG> ръководител на производство
<ES> Jefe de producción - <CS> vedoucí výroby
<DA> leder af produktion - <ET> Head tootmise
<EL> Επισφαλής της παραγωγής - <EN> Head of Production
<FR> chef de production - <HR> voditelj proizvodnje
<IT> capo della produzione - <LV> Vadītājs ražošanas
<LT> vadovas gamybos - <HU> Vezetője termelés
<MT> Kap tal-produzzjoni - <NL> hoofd van de productie
<PL> Szef produkcji - <PT> Chefe de produção
<RO> Șef de producție - <SK> vedúci výroby
<SL> Vodja proizvodnje - <FI> Johtaja tuotannon
<SV> Chef för produktion



ppa. Philippe Vorburger

<DE> Leiter Entwicklung - <BG> ръководител на развитие
<ES> Jefe de desarrollo - <CS> vedoucí vývoje
<DA> leder af udvikling - <ET> Head areng
<EL> Επισφαλής της ανάπτυξης - <EN> Head of R&D
<FR> Responsable du développement - <HR> voditelj razvoja
<IT> capo dello sviluppo - <LV> Vadītājs attīstības
<LT> vadovas plėtos - <HU> Fejlesztési vezető
<MT> Kap ta 'żvilupp - <NL> hoofd van de ontwikkeling
<PL> Szef rozwoju - <PT> Chefe de desenvolvimento
<RO> Șeful de dezvoltare - <SK> vedúci vývoja
<SL> Vodja razvoja - <FI> Johtaja kehitys
<SV> Chef för utveckling

**Konformitätserklärung für Messgeräte,
die nicht europäischen Vorschriften unterliegen**

Diehl Metering GmbH
Industriestr. 13
91522 Ansbach
GERMANY

DMDE-NEV 418/2

Wir erklären hiermit, dass das Produkt

Bauart: Kältezähler Type 775

Handelsname: SHARKY

gemäß nationaler Baumusterprüfbescheinigung Nr.DE-16-M-PTB-0001 vom 22.05.2018,
ausgestellt von der PTB Braunschweig und Berlin, Kennnummer 0102


Typ entsprechend des Angebotes, der Auftragsbestätigung, der Gerätekenzeichnung,
(Details in Montage- und/oder Bedienungsanleitung) konform ist mit dem Mess- und
Eichgesetz (Bundesgesetzblatt Jahrgang 2013 Teil I Nr. 43 vom 31.07.2013) und den darauf
gestützten Rechtsverordnungen, soweit diese auf das Produkt Anwendung finden.


Das Produkt entspricht ferner den folgenden, angewendeten harmonisierten Normen bzw.
normativen Dokumenten, Regeln und Technischen Richtlinien (Stand wie angegeben):

EN 1434:2015	EN 60751:2008
OIML R75:2006	EN 13757-2:2004
WELMEC-Leitfaden 7.2	EN 13757-3:2013
EN 61010-1:2010	EN 60529:1991/A2:2013
Technische Richtlinie der PTB K7.2, Ausgabe November 2006	
Anforderungen der PTB A50.7, Ausgabe April 2002	
AGFW-Anforderungen FW 510 (2013)	

Die notifizierte Stelle PTB Braunschweig und Berlin, Kennnummer 0102, überwacht das
QS-System gemäß Modul D, MessEV/MID Zertifikat Nr.: DE-M-AQ-PTB004

Ansbach, 24.05.2018
Diehl Metering GmbH


.....
i.V. Matthias Wirsching
(Leiter Produktion)


.....
ppa. P. Verburger
(Leiter Entwicklung)