

# Laddpump CTC EcoAir 400

Monteringsanvisning - Inkoppling av laddpump CTC EcoAir 400

162 101 93-4 2017-05-23


SE

Vid inkoppling av CTC EcoAir 400 med CTC Converter skall laddpumpen kopplas i CTC EcoAir 400.

Om befintlig icke PWM-styrd laddpump skall användas, kan denna kopplas på reläplint C7 **(1)**, alternativt med konstant spänning.

Gör så här:

1. Bryt strömmen till produkten.
2. Montera säkringen i säkringsplint.
3. Montera plintarna enligt bild och märk upp dessa med medföljande märkning.
4. Koppla därefter in ledaren (svart kabel) **(2)** enligt elschema.
5. Koppla därefter in inkommande matarkabel och pwm-kabel från laddpump enligt elschema.

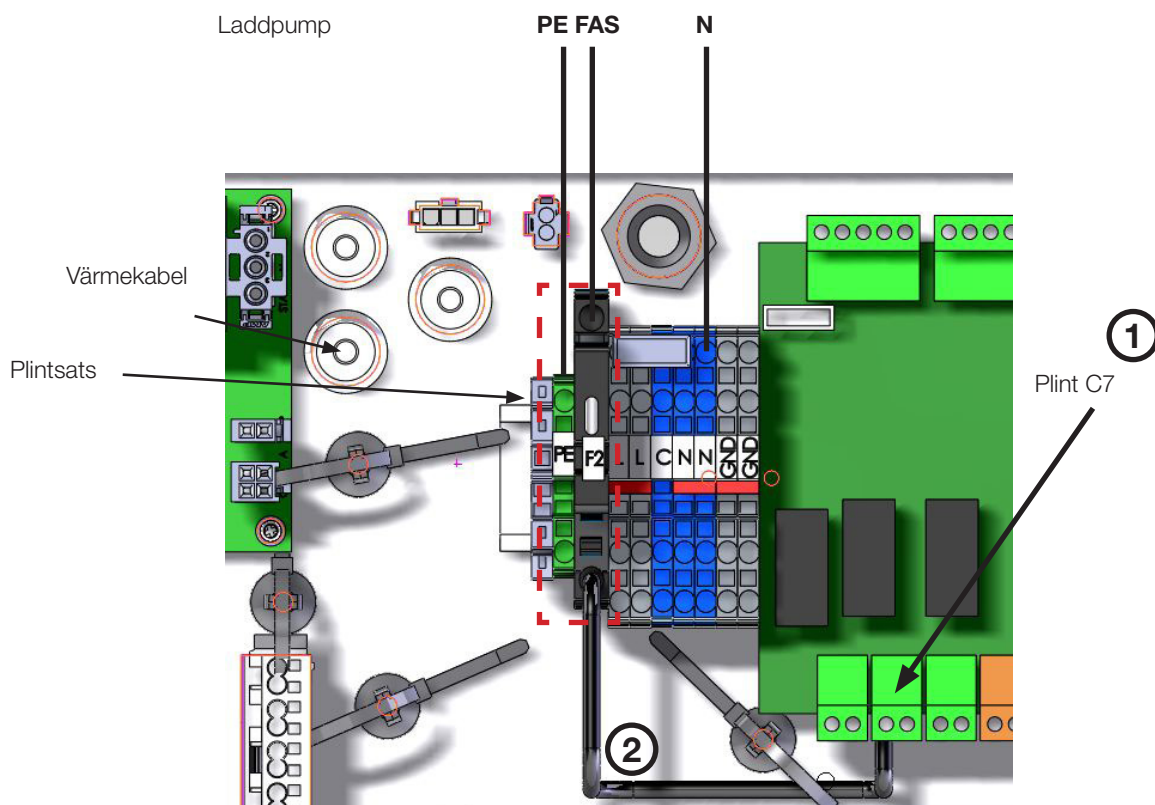

Inkoppling av laddpump måste utföras av behörig installatör.

# Charge pump CTC EcoAir 400

Assembly instructions - Connecting charge pump CTC EcoAir 400


162 101 93-4 2017-03-23

EN

When connecting CTC EcoAir 400 and CTC Converter the charge pump must be connected/controlled from the CTC EcoAir 400.

If existing non-PWM controlled charge pump must be used, this could be connected with constant voltage.

1. Turn off the power to the product
2. Install the fuse in the fuse terminal.
3. Install the terminals according to the picture and mark them with the supplied label.
4. Connect the conductor (black wire) according to the EcoAir wiring diagram.
5. Connect the incoming supply cable and the PWM-cable from the charge pump according to the wiring diagram.

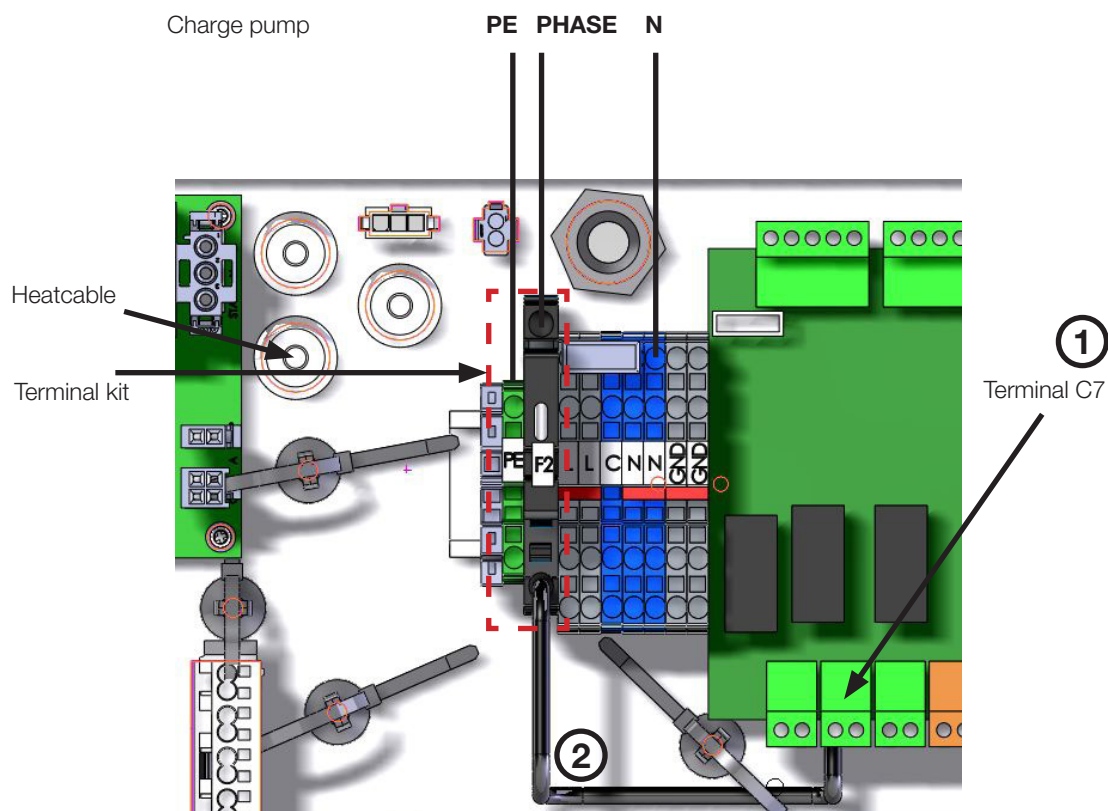

Installation of the charge pump must be performed by an authorised installation engineer.