


**NORO**<sup>®</sup>

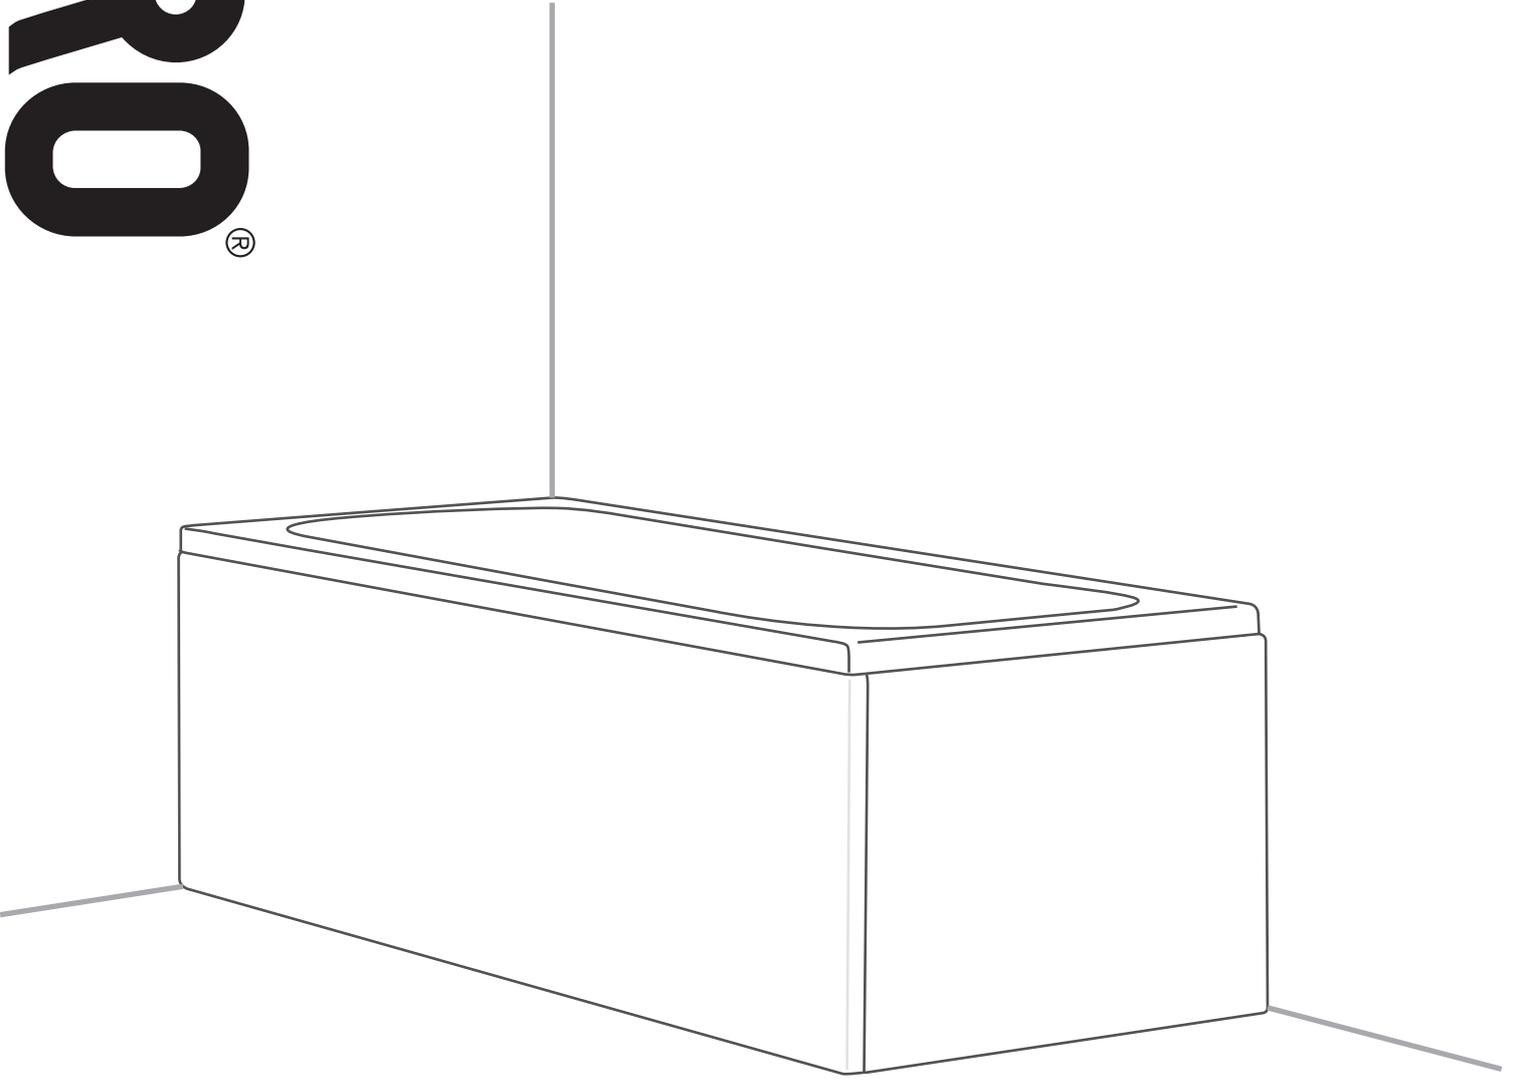


SINGLE

## Getting Start



Goggles are recommended to protect the eyes



Caution: Always Handle Glass With Care!  
Always protect the edges and corners of the glass when assembling.








2 people are recommended to assemble this shower enclosure



Gloves are recommended to prevent slippery on glass

## Tools Needed:

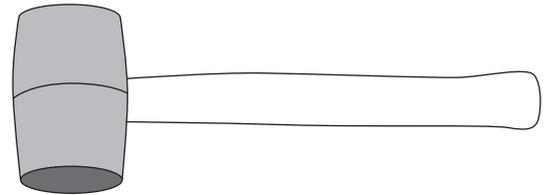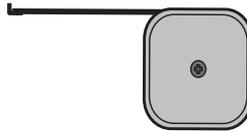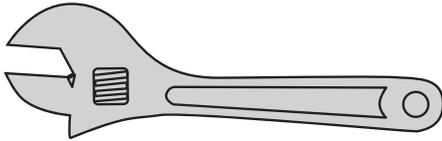


## Accessories Bags:

**a** x 7




M4




ST4x40mm


**b** x 6



ST4x15mm




**c** x 3





ST4x12mm






**d** x 5

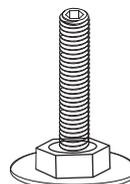

**e** x 4

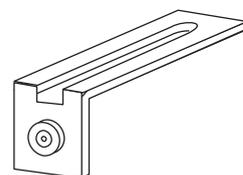


# Measurement


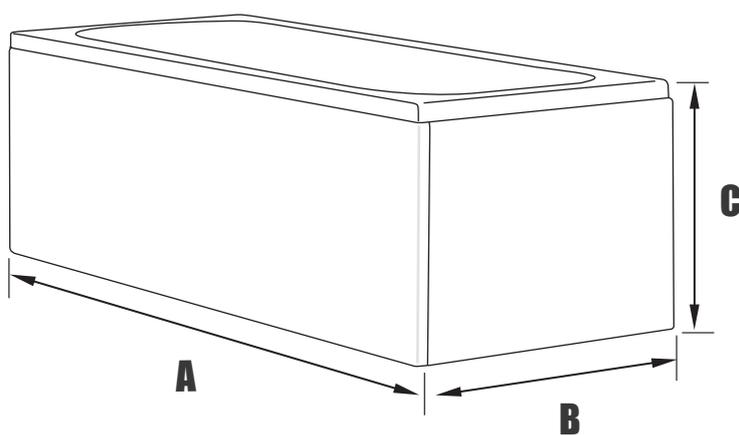
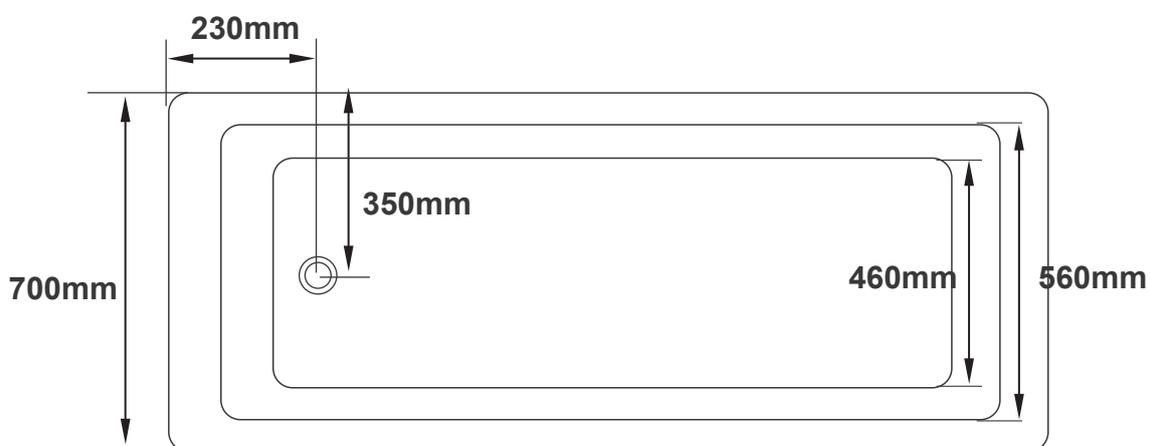
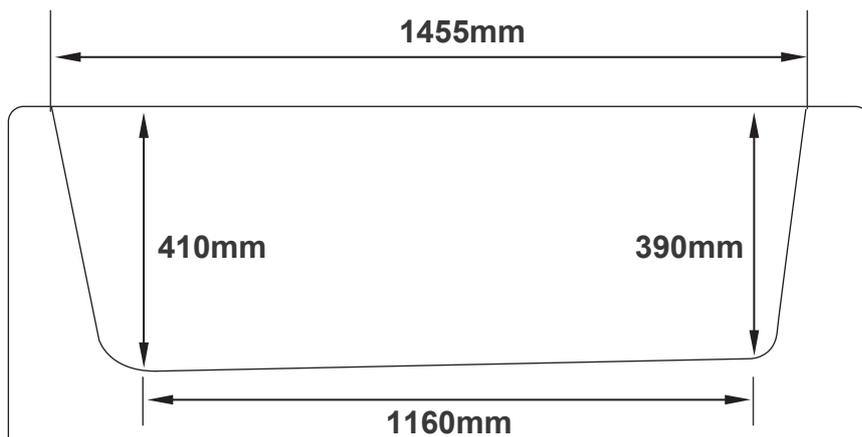


Model	A	B	C
SINGLE	1595mm	700mm	560-585mm


## Exploded View:

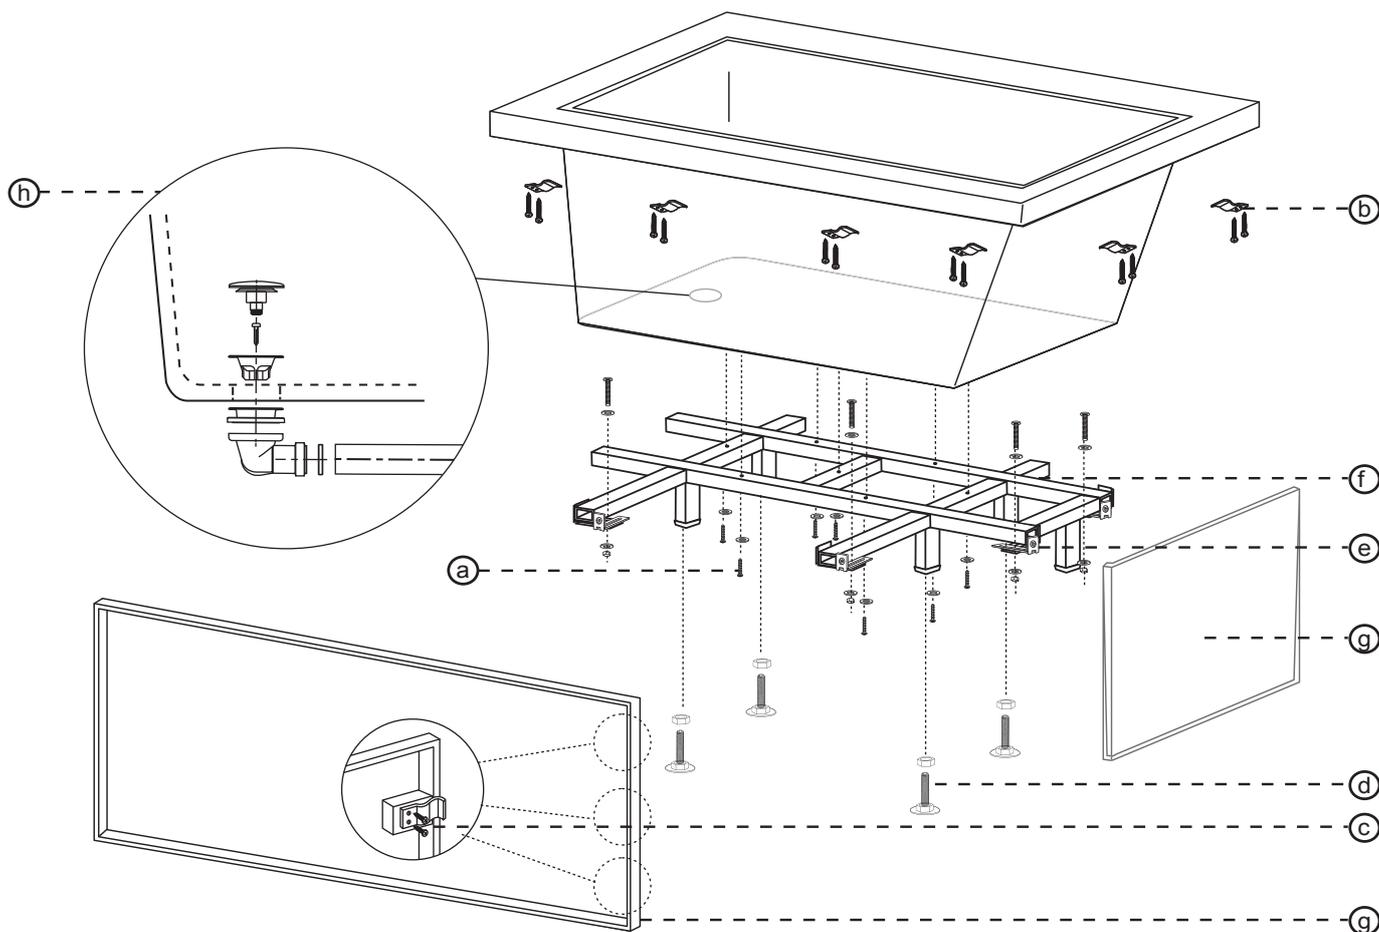


Drawing Nr.	Art Nr.	Description	Unit
a	9237	ST4x40mm screws and washer	Set
b		ST4x15mm screws with clips	
c		ST4x12mm screws with clips	
d		Bathtub legs	
e		L-connector for stand with screws	
f	9234	Stainless-steel stand with screws	Set
g	9230	Skirt panels - long and short	Set
h	0173-50	Drainage complete kit	Set

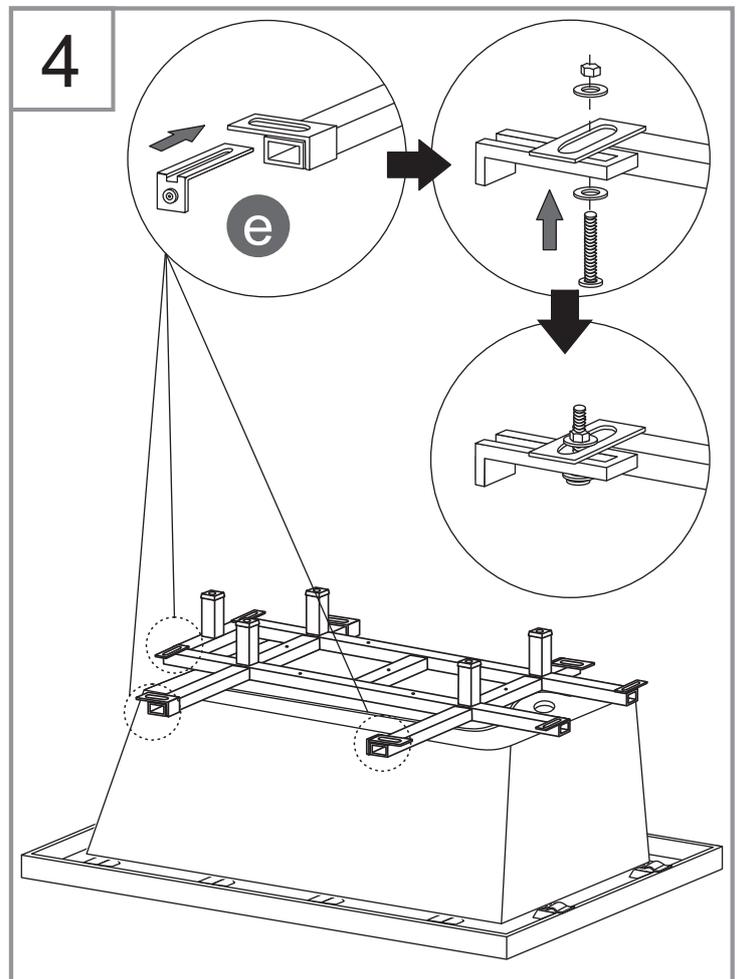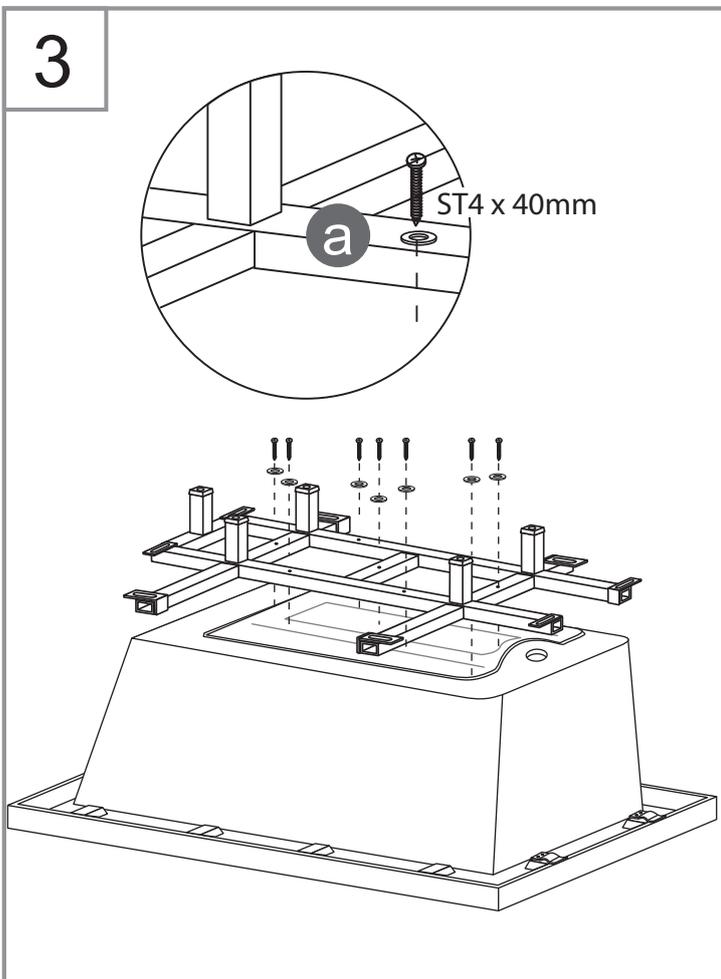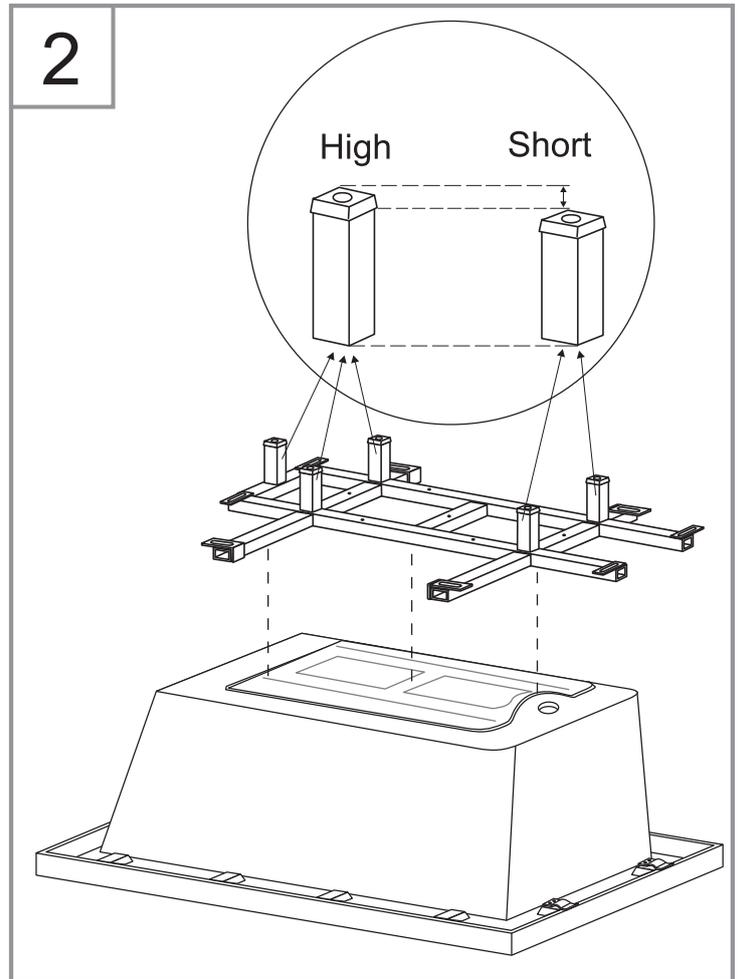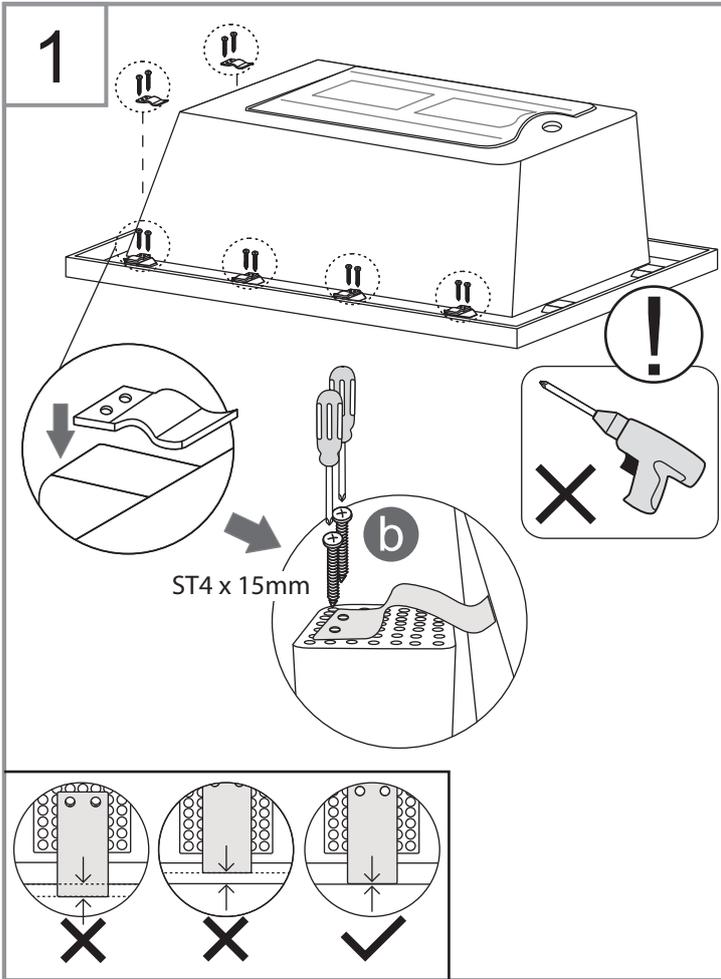


5

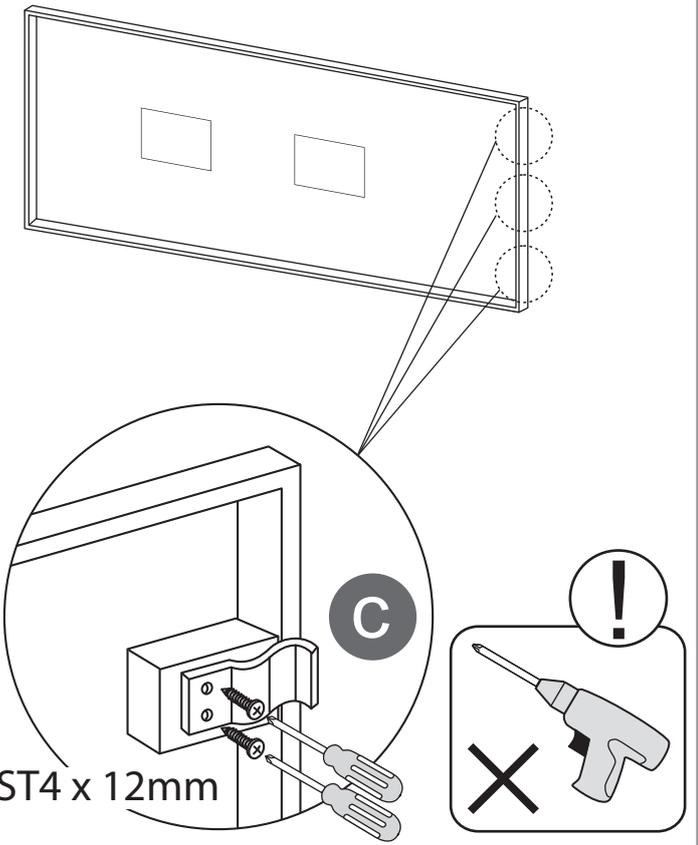


6

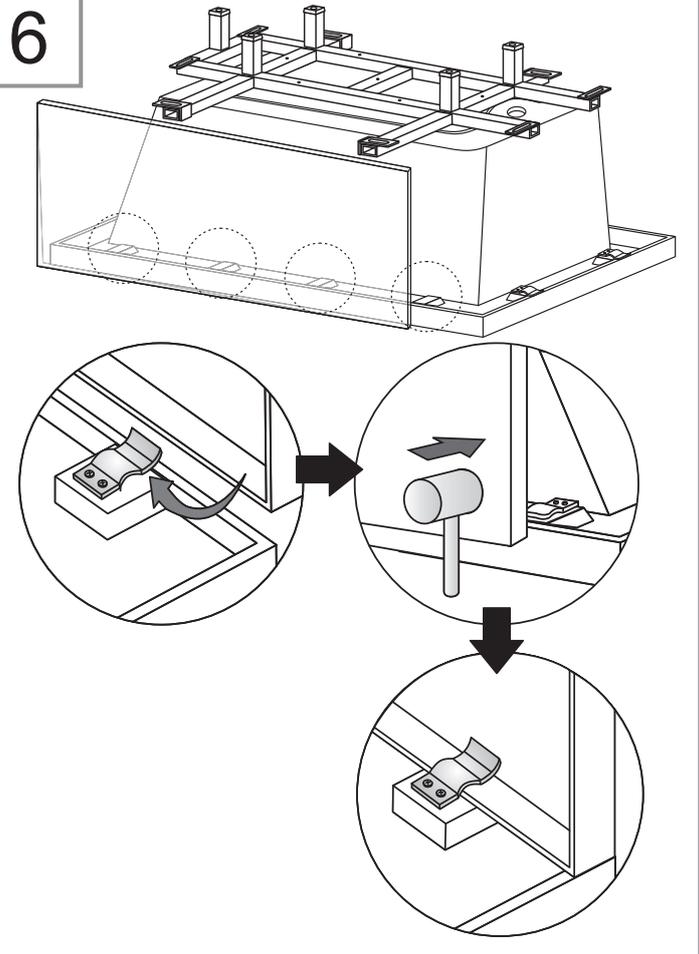



7

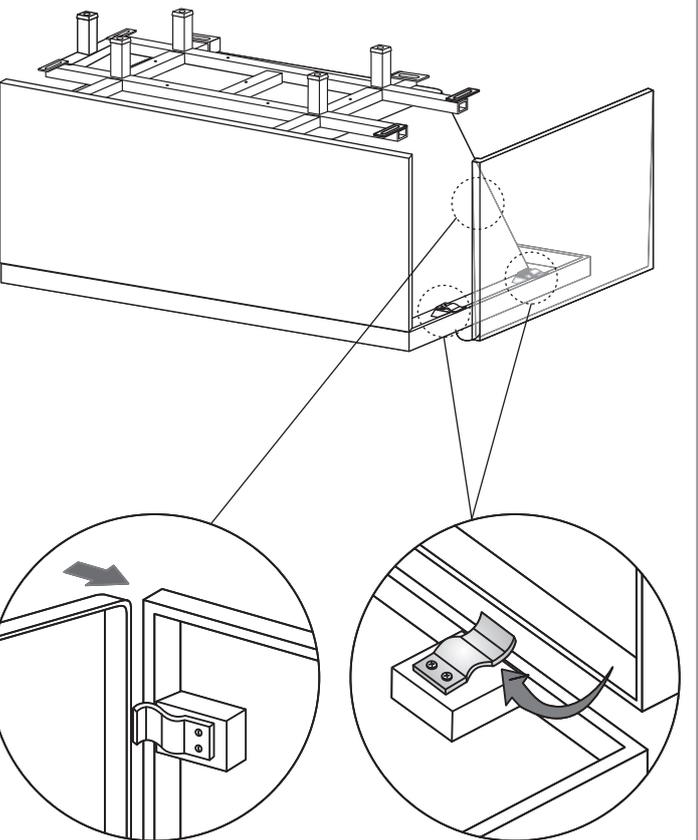


8

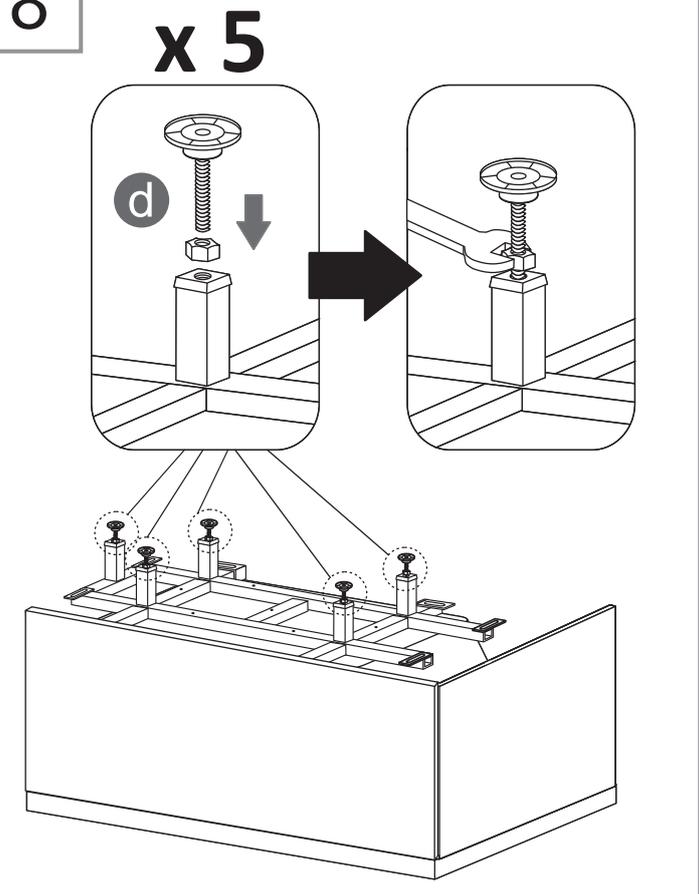



9

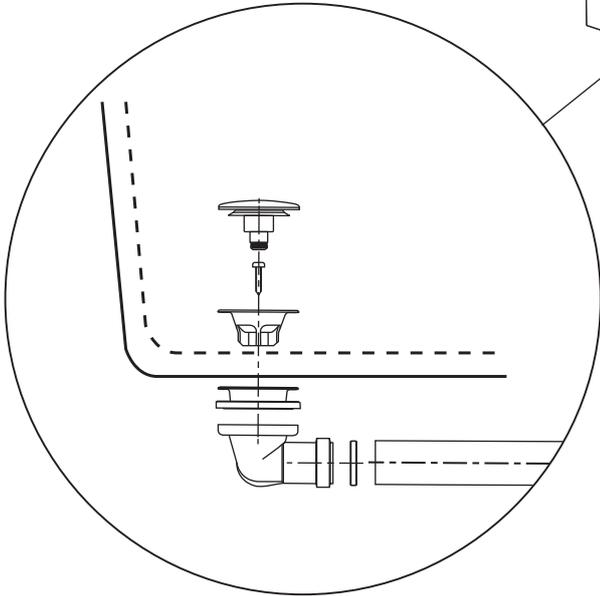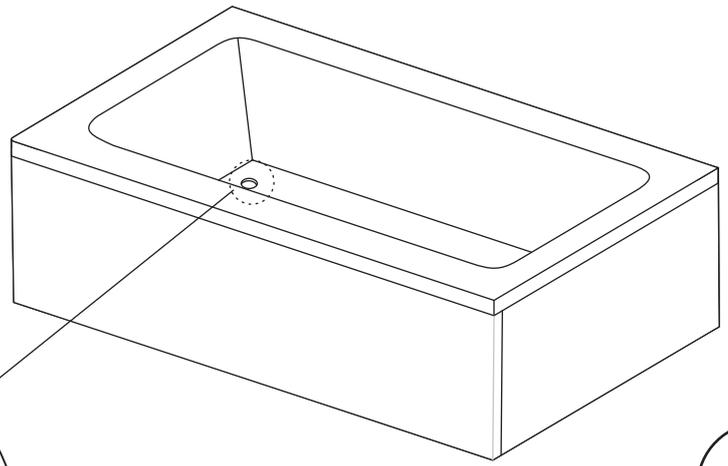


- Remove protective foil
- Ta bort skyddsfolien

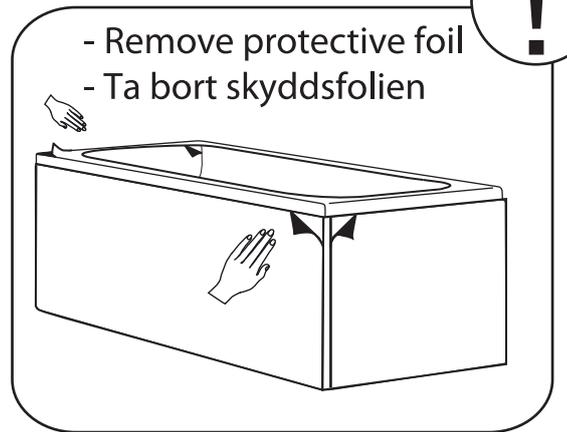

10

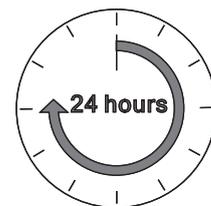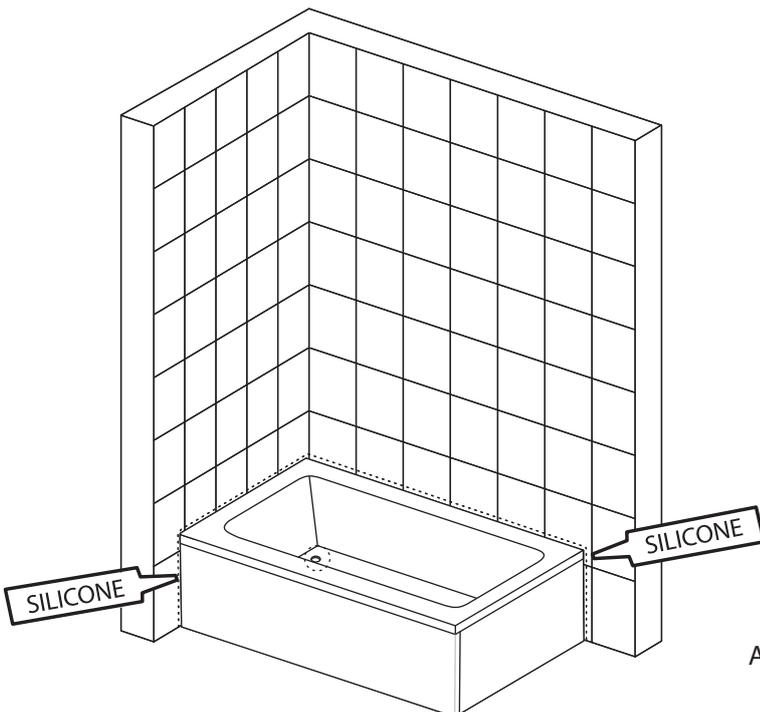

Allow 24 hours for silicone to dry before use.

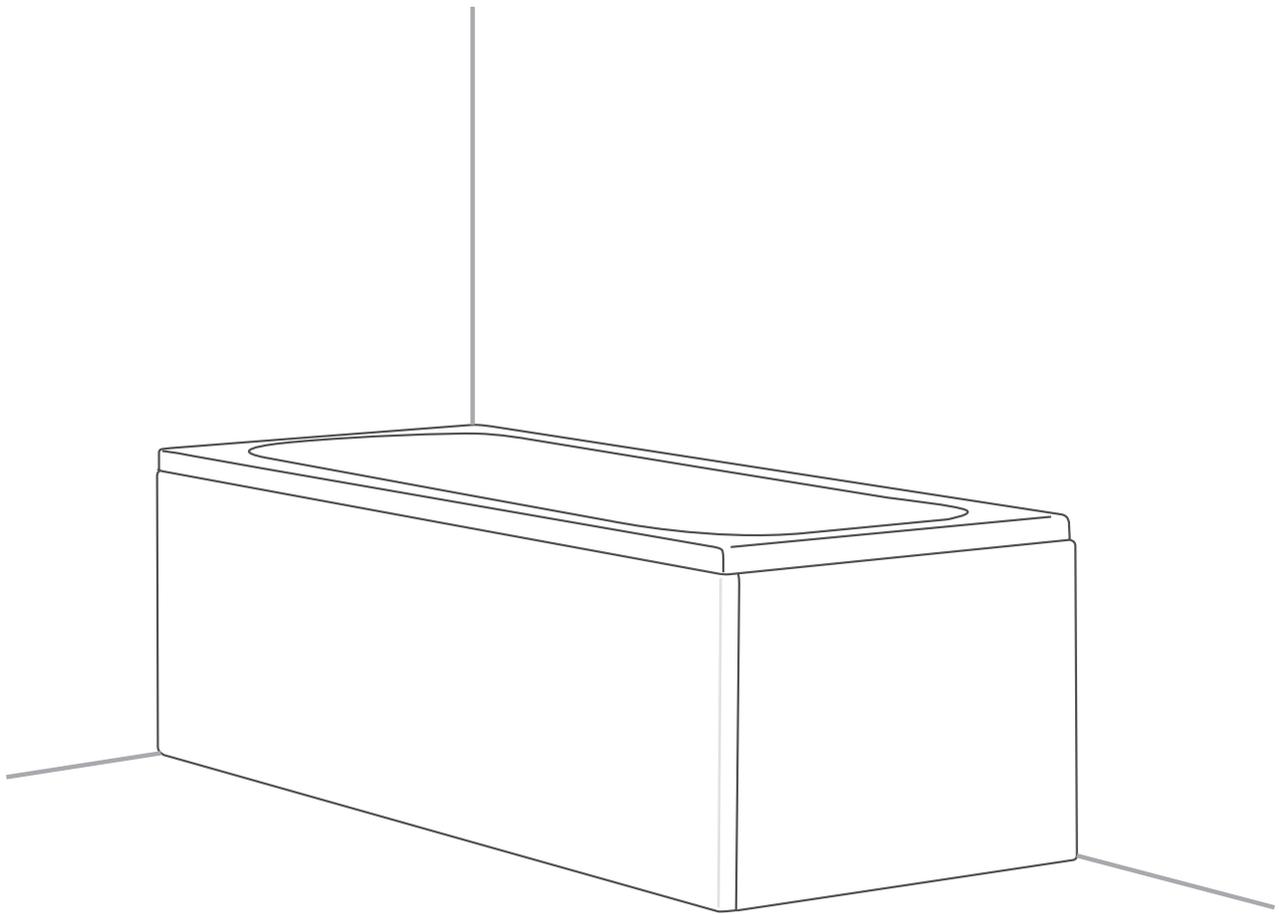

# SINGLE

035 166430 **SE**  
info@noro.se

020 7435740 **FI**  
info@norokylpyhuone.fi

216 28860 **NO**  
info@noro.se

702 52822 **DK**  
www.noro.dk