

# Quick Guide



LK Pressback Standard (RSK 188 13 19, 188 13 18)

## 1. Öppna backen | Open the jaw



## 2. För på backen på kopplingen, skjut den mot den fasta delen.

Place the jaws on the fitting, slide the fitting to the fixed groove of the jaws.

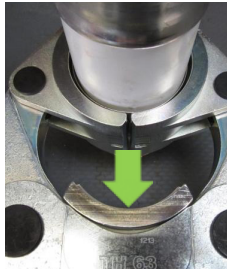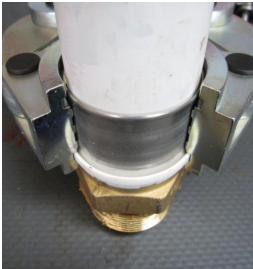

## 3. Kontrollera backens position mot kopplingen.

Check the position of the jaw against fitting.



**OK** ✓



**OK** ✓



**NO** ✗