

Monteringsanvisning
Instruction manual
Asennusohje
Инструкция по монтажу

info@thermotech.se
 www.thermotech.se
 Spårvägen 8, Umeå
 S-90131 Sweden
 0620-68 33 30



info@thermotech.fi
 www.thermotech.fi
 Mestarintie 12,
 10600 Tammisaari
 040 - 151 4330


Thermotech

62541. 390mm
RSK: 205 49 81

62542. 540mm
RSK: 205 49 93


62543. 690mm
RSK: 205 49 94

62544. 840mm
RSK: 205 49 95

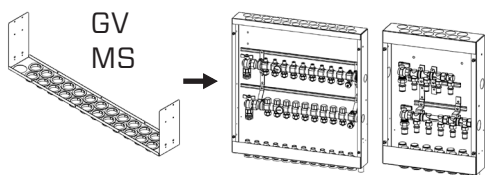


62552. VM 540mm
RSK: 205 49 96

62553. VM 690mm
RSK: 205 49 97

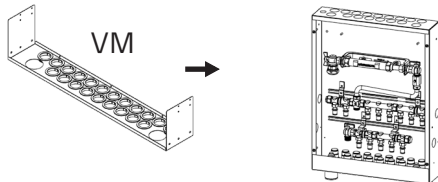


62555. ISO 540mm
RSK: 205 50 75

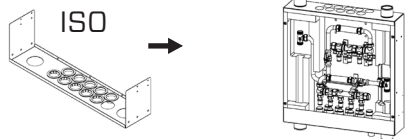


62561. 390mm Våtzon
RSK: 205 50 76


62562. 510mm Våtzon
RSK: 205 50 77

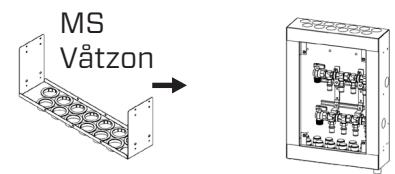



62563. 595mm Våtzon
RSK: 205 50 78

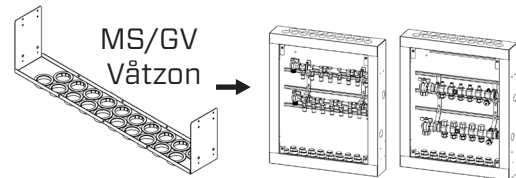

62565 ISO Våtzon
RSK: 205 50 79

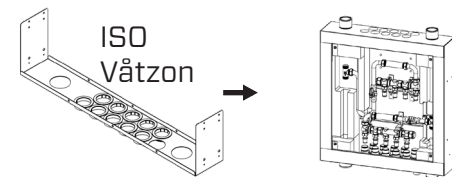

62568 VM Våtzon
RSK: 205 50 80

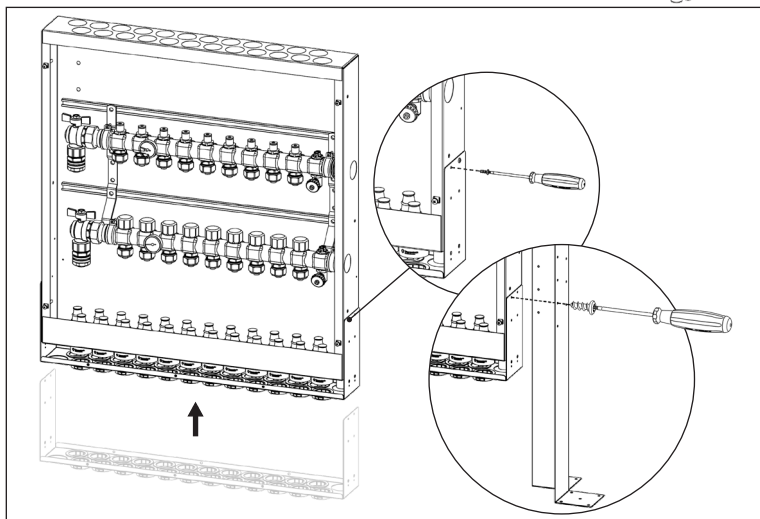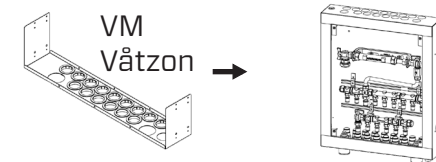

1 (2)

MA2004 2022-02-14

Monteringsanvisning
Instruction manual
Asennusohje
Инструкция по монтажу

info@thermotech.se
 www.thermotech.se
 Spårvägen 8, Umeå
 S-90131 Sweden
 0620-68 33 30



info@thermotech.fi
 www.thermotech.fi
 Mestarintie 12,
 10600 Tammisaari
 040 - 151 4330


Thermotech

62541. 390mm
RSK: 205 49 81

62542. 540mm
RSK: 205 49 93


62543. 690mm
RSK: 205 49 94

62544. 840mm
RSK: 205 49 95

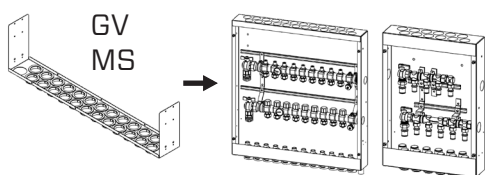


62552. VM 540mm
RSK: 205 49 96

62553. VM 690mm
RSK: 205 49 97

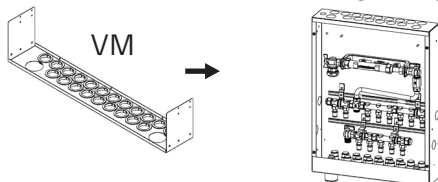


62555. ISO 540mm
RSK: 205 50 75

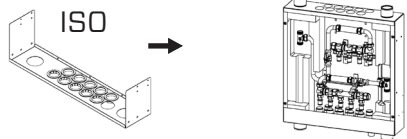


62561. 390mm Våtzon
RSK: 205 50 76


62562. 510mm Våtzon
RSK: 205 50 77

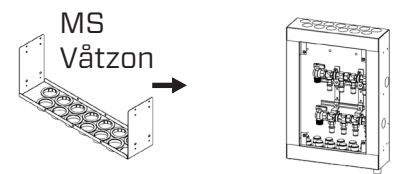



62563. 595mm Våtzon
RSK: 205 50 78

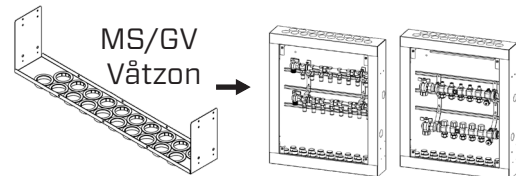

62565 ISO Våtzon
RSK: 205 50 79




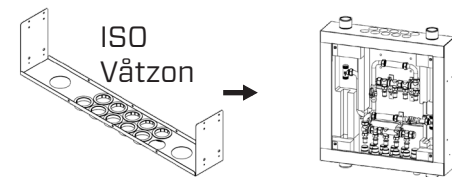


62568 VM Våtzon
RSK: 205 50 80

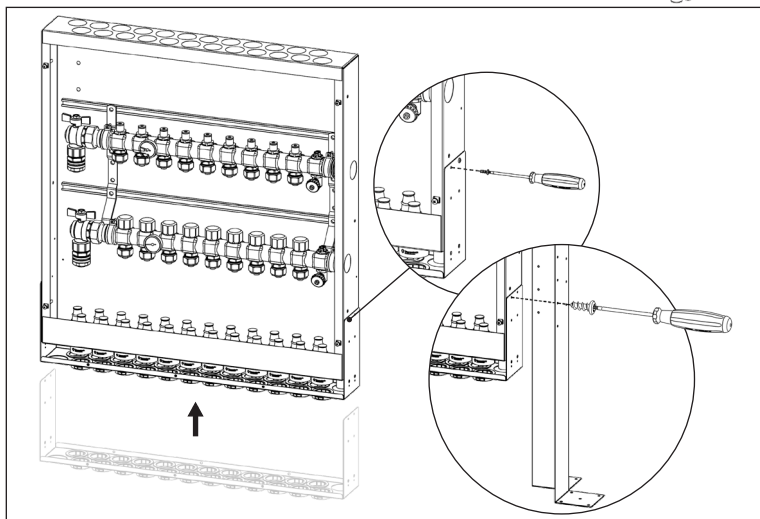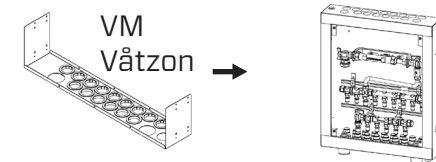

1 (2)





MA2004 2022-02-14

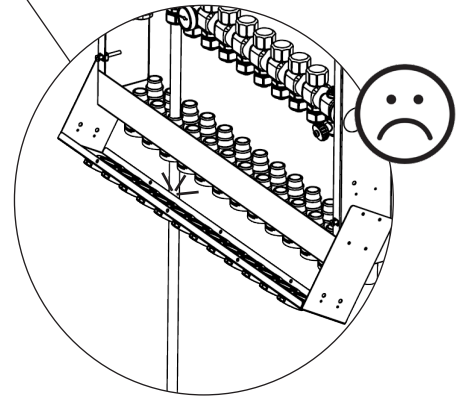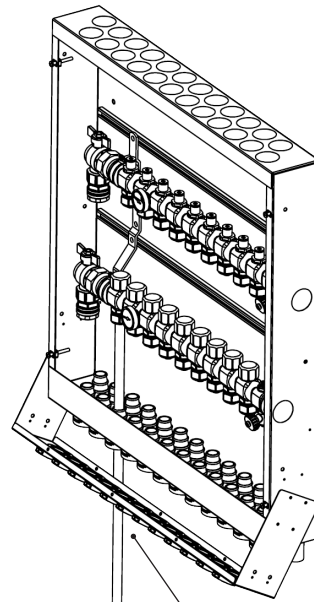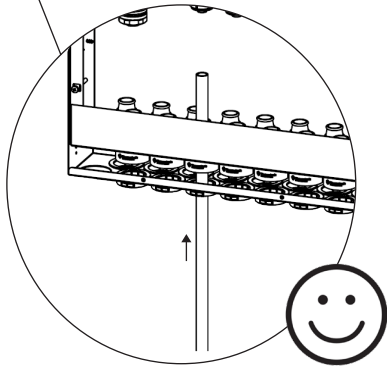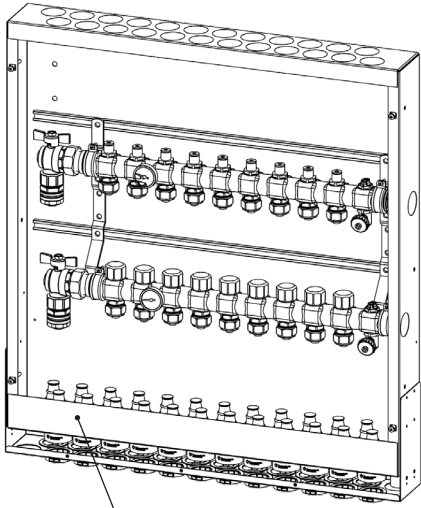

Accepterad
monteringsanvisning
2021.1

2(2)

MA2004 2022-02-14

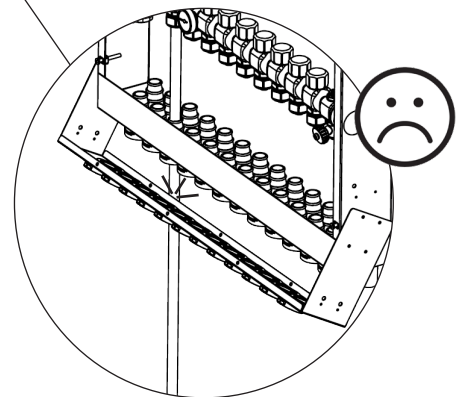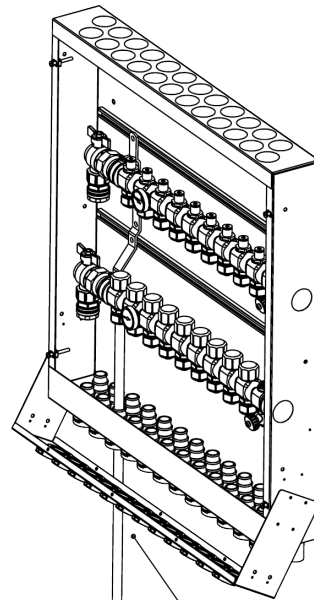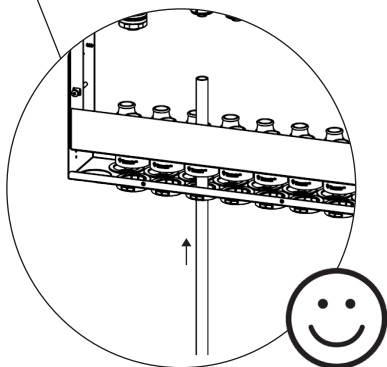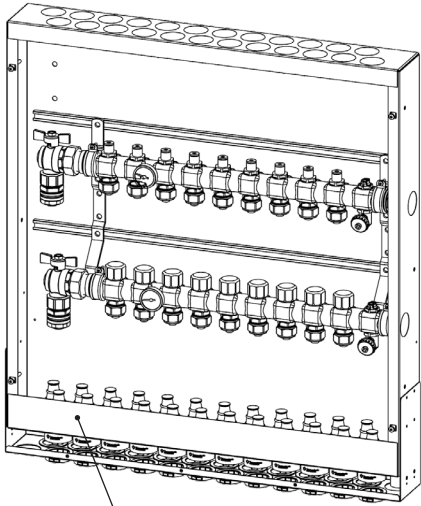

Accepterad
monteringsanvisning
2021.1

2(2)

MA2004 2022-02-14