

20190101 Art nr. 20051020 Westerbergs Badrum part of Häfa Bathroom Group AB.

westerbergs sund

SE

monteringsanvisning

DK

monteringsanvisning

NO



monteringsanvisning

FI


asennusohje

GB

instructions

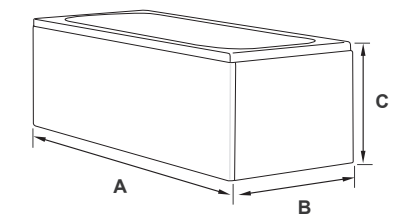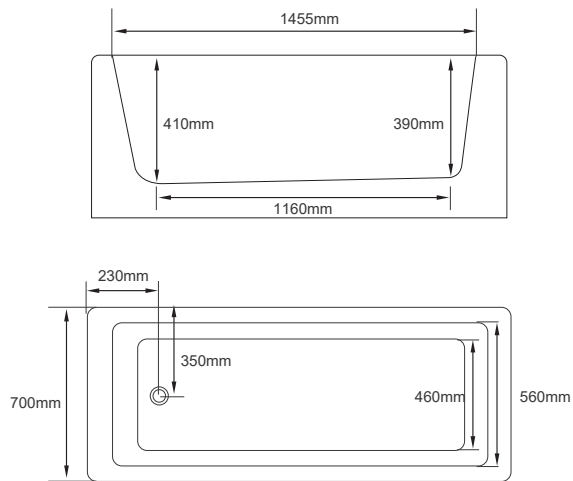

	A	B	C
	1595mm	700mm	560-585mm

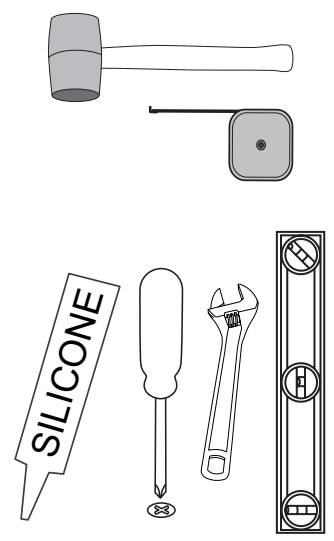

a x 7

M4 ST4x40mm

b x 6


ST4x15mm

c x 3





ST4x12mm





d x 6

e x 4

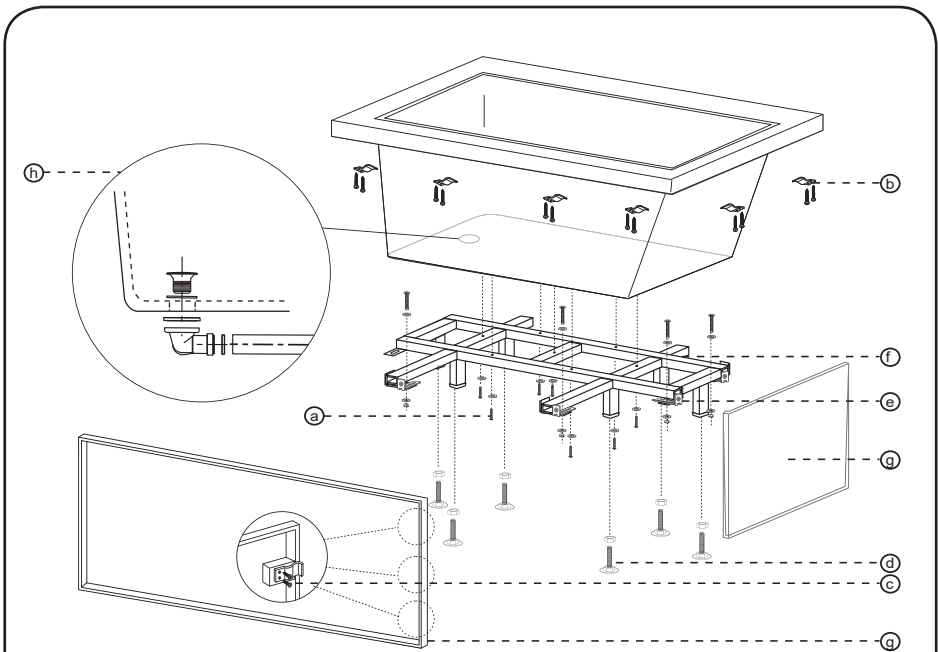


	Description Beskrivning	Unit Enhet
a	ST4x40mm screws and washer ST4x40mm skruv och mutter	Set
b	ST4x15mm screws with clips ST4x15mm skruv med klips	
c	ST4x12mm screws with clips ST4x12mm skruv med klips	
d	Bathtub legs Badkarsfötter	Set
e	L connector for stand with screws L-stag för stativ med skruv	
f	Stainless steel stand with screws Stativ av rostfritt stål med skruv	Set
g	Skirt panels - long and short Front och gavel	Set
	Drainage complete kit	Set

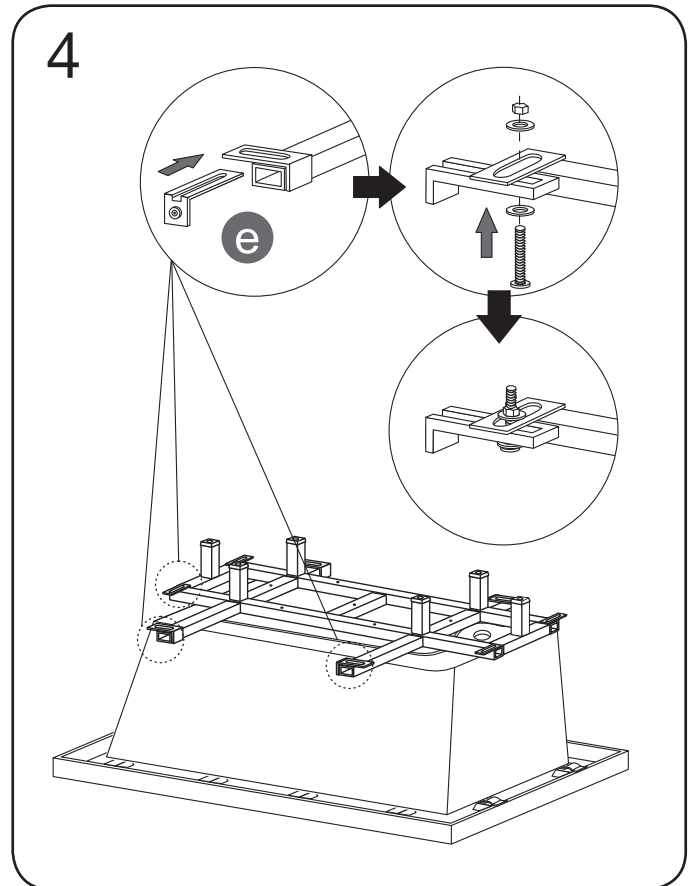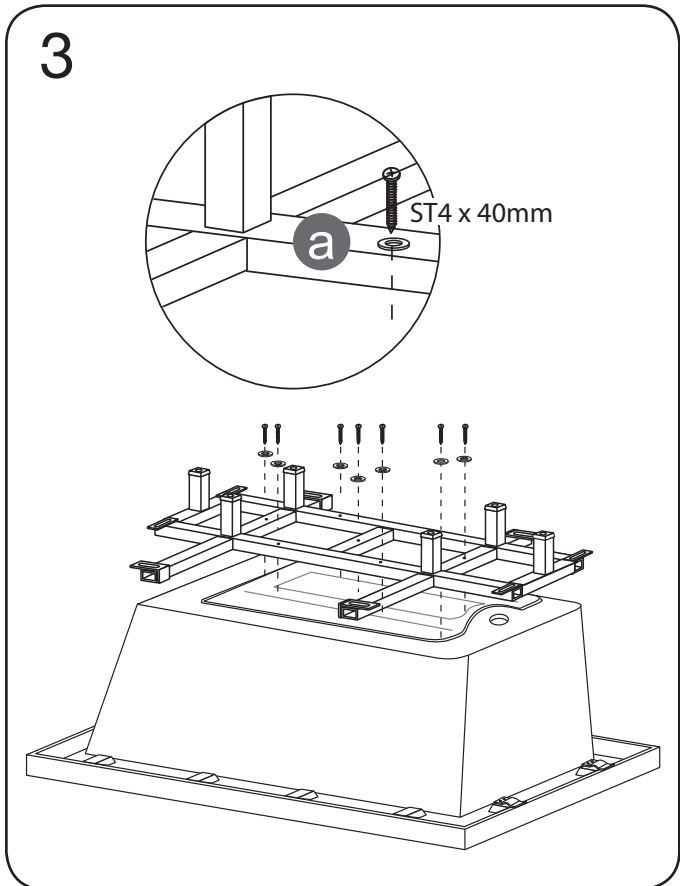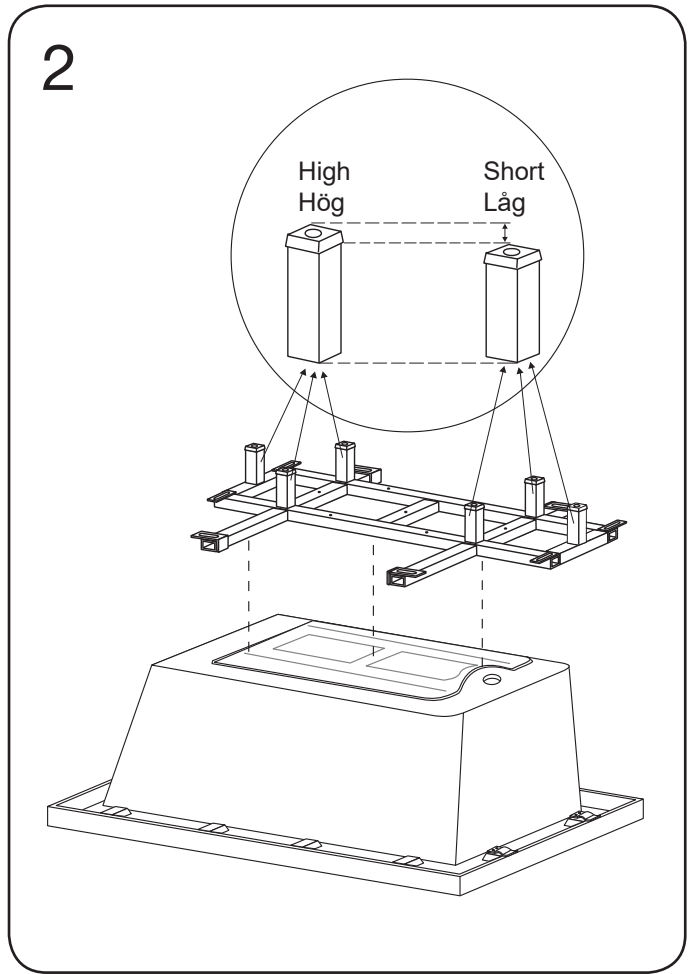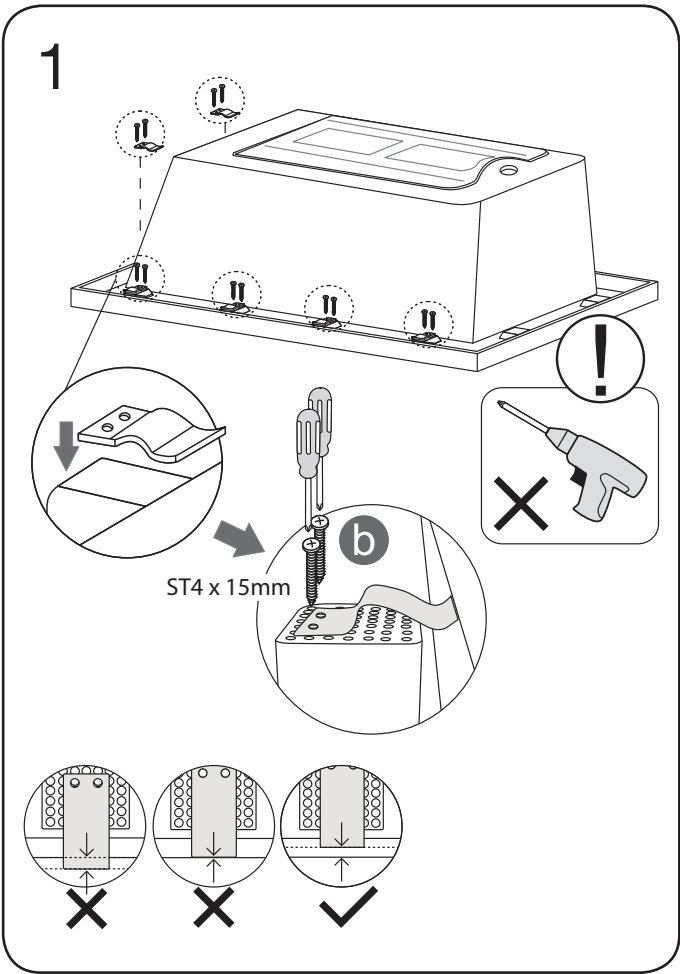


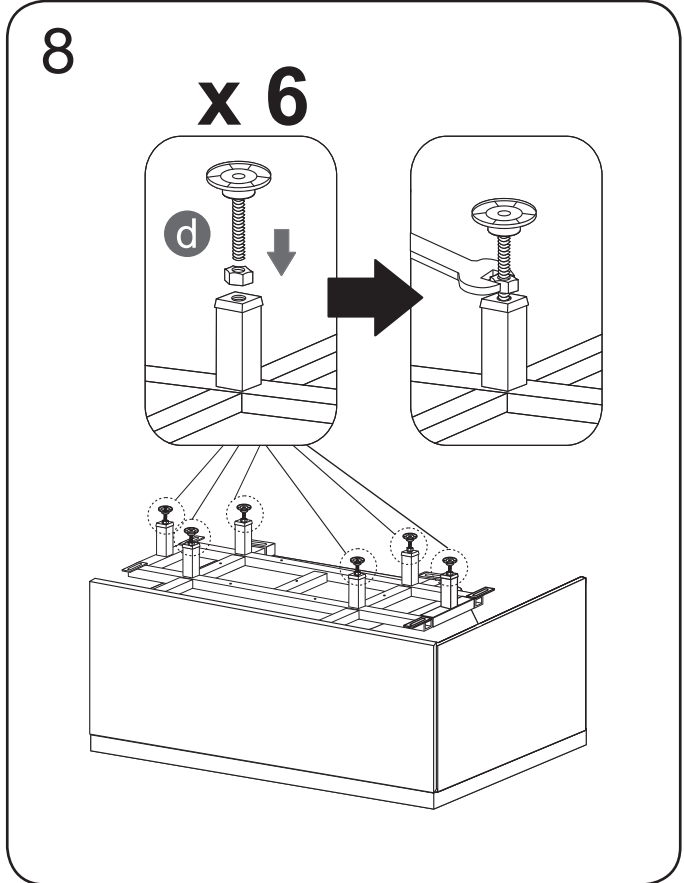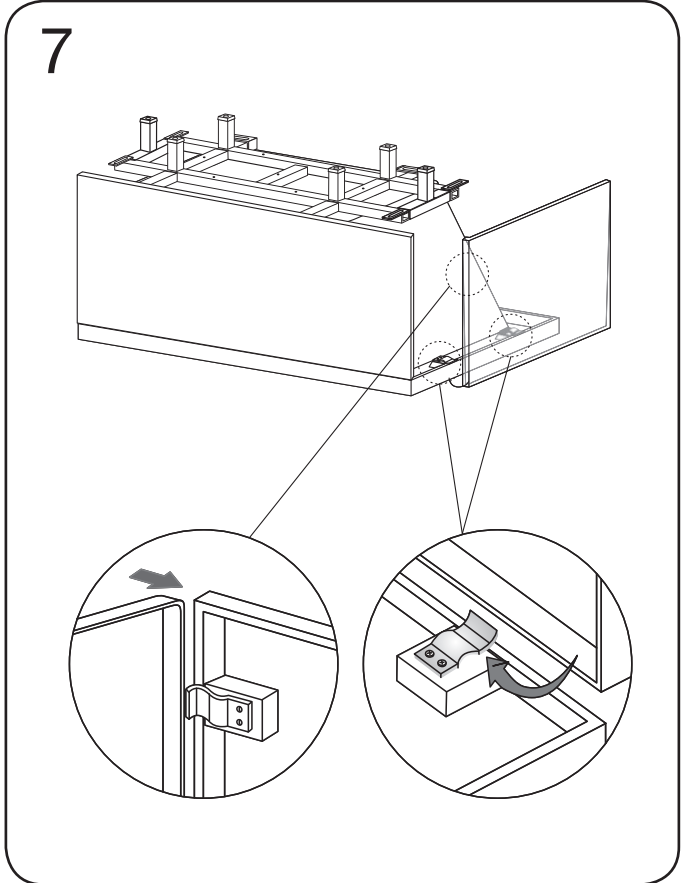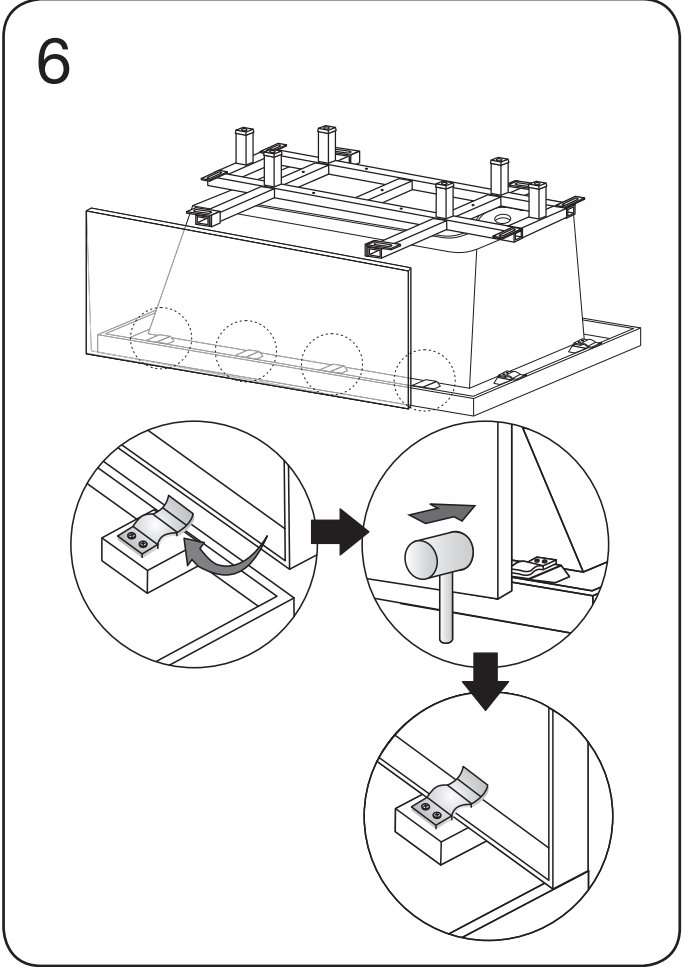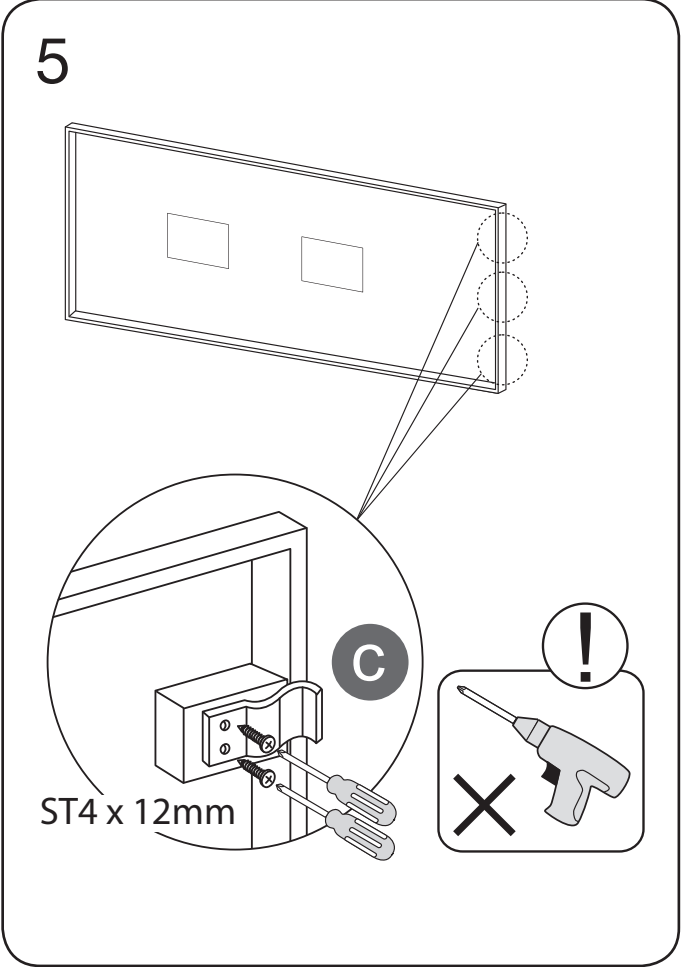

9

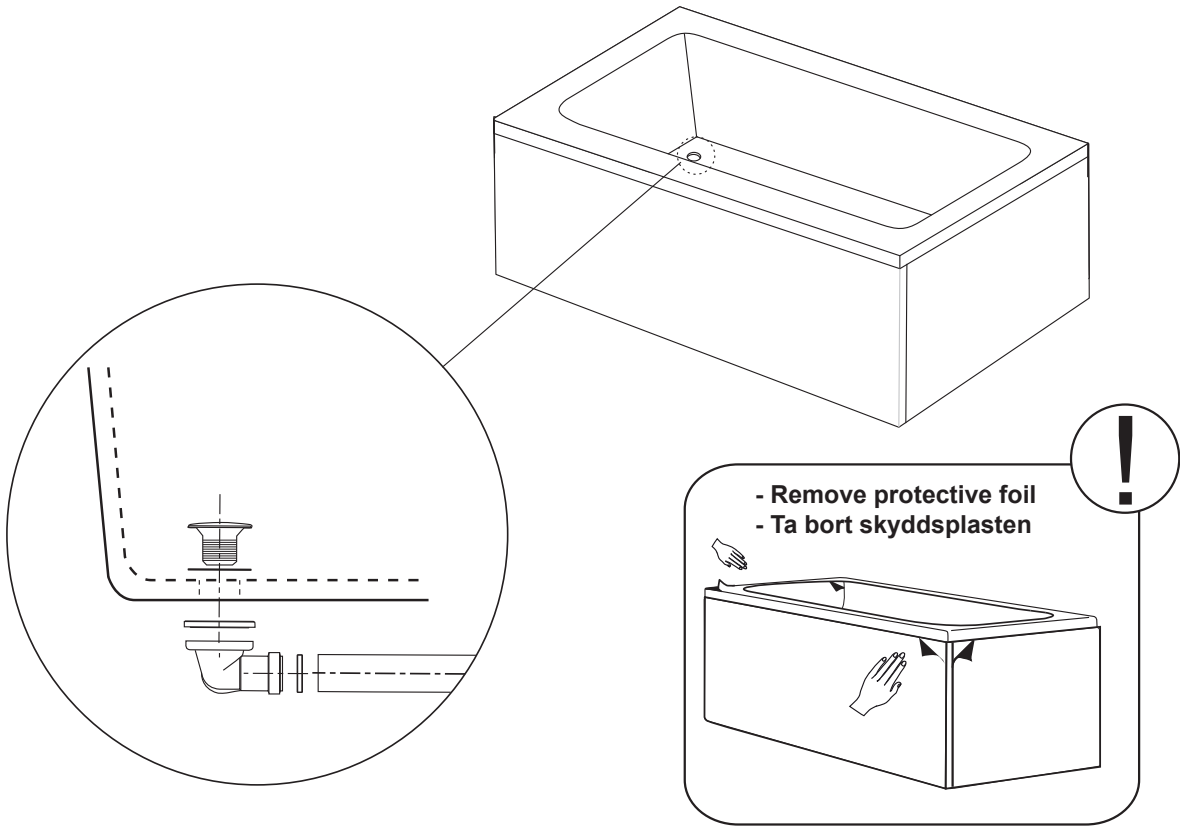

10

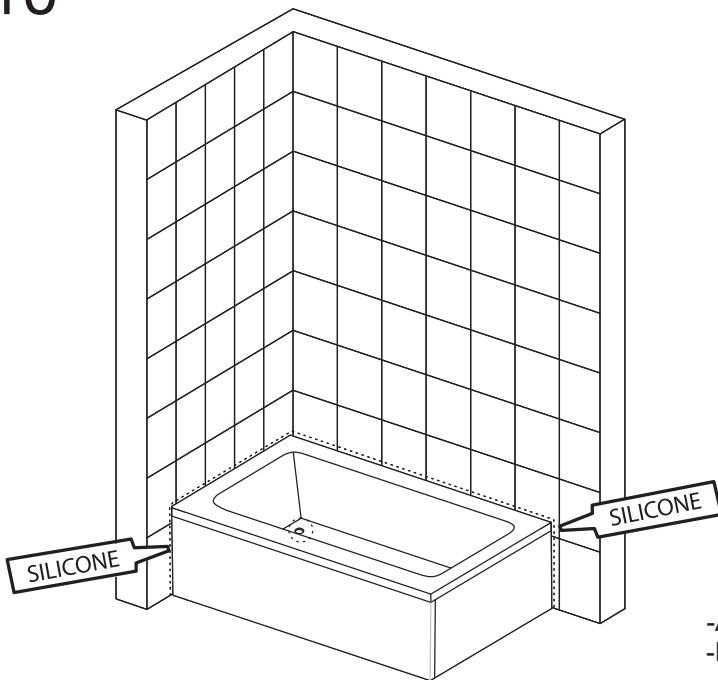

-Allow 24 hours for silicone to dry before use.
-Låt silikonen torka i 24h innan badkaret används.