


POLY16 Plus Clamp Saddles

Assembly Instructions




1 Check all components. Clean the pipe.

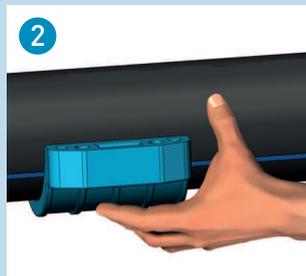


2 Place the bolts in the lower part of the saddle and put it under the pipe.




3 The gasket properly into its seat

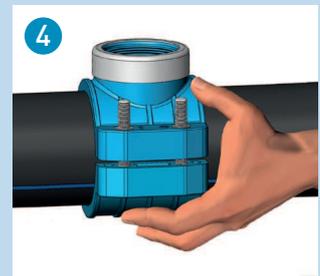

4 Line up the threaded part with the lower part.

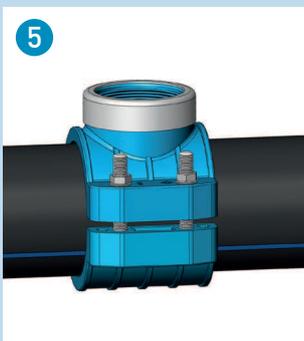


5 Insert washers and nuts without tightening in depth until the first saddle blocking [*].

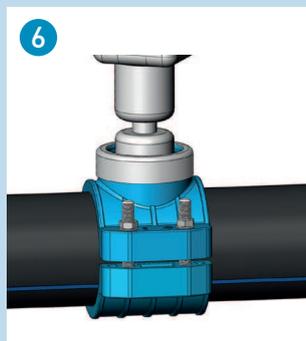

6 Drill the pipe in correspondence with the offtake (**).



7 Assemble a male adaptor on the offtake (use teflon tape).

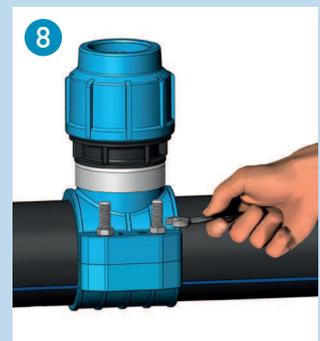

8 Complete the screwing of the bolts until the two parts of the saddle touch each other.

Please note:

[*] In order to make the assembling of male adaptor threaded part easier, avoid too much overscrewing the bolts of the clamp saddle.

[**] Caution, do not tighten the nuts before the installation of the fitting.