



Solenoid coil

BB / BE / BF / BG / BN

The clip-on coils are available for the entire range of Danfoss solenoid valves

Description

The coils are specially designed to operate in the aggressive environment of high humidity and temperature fluctuations that you find in most refrigeration systems.

The clip-on fastening system ensures a faultless installation and makes the coils easy to mount and dismount. A Danfoss clip-on coil can be mounted without any tools at all, and it is simple to dismount the coil by means of a screwdriver.

The clip-on coils are available for the entire range of Danfoss solenoid valves for refrigeration, freezing and air conditioning purposes.

Features & benefits

- Encapsulated coils with long operating life, even under extreme conditions
- Standard coils for AC or DC
- Standard coils available with 3-core cable, terminal box or DIN plugs
- Standard coils from 12 V to 420 V, 50, 60 or 50/60 Hz
- Standard coils dimensioned for max. opening differential pressure (MOPD) of up to 38 bar
- Coils can be fitted without the use of tools

Ordering

Product code numbers

Figure: BF solenoid coil with 1 m 3-core cable IP67

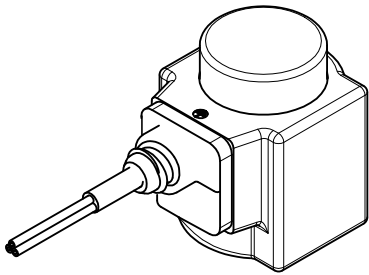


Table: Ordering for BF solenoid coil with 1 m 3-core cable IP67

Type	Valve type	T _{ambient} [°C]	Supply voltage [V]	Voltage variation	Frequency [Hz]	Power consumption		Code no.
						[W]	[VA]	
BF024AS	EVR 2 – EVR 40 (NC)	-40T80	24	-15%, +10%	50	12	20	018F6257
BF230AS		-40T80	230	-15%, +10%	50	12	22	018F6251
BF240AS	EVR 6 – EVR 22 (NO)	-40T80	220	-15%, +10%	50	11	20	018F6252
BF400AS		-40T80	380 / 400	±10%	50	10	21	018F6253
BF024BS	EVRH 10 – EVR 40	-40T80	24	-15%, +10%	60	14	25	018F6265
BF115CS		-40T80	115	-15%, +10%	60	13	22	018F6260
BF220BS	EVRC	-40T80	100	-15%, +10%	50	11	19	018F6264
BF110CS		EVRA	-40T80	220	-15%, +10%	60	14	23
BF110CS	EVRAT		-40T50	110	±10%	50	15	29
		110		±10%	60	13	23	
BF230CS	EVRST	-40T50	220 – 230	±10%	50	16	31	018F6282
			220 – 230	±10%	60	14	24	
	EVM (NC)	-40T50	220 – 230	±10%	50	16	31	018F6282
			220 – 230	±10%	60	14	24	

Figure: BE solenoid coil with terminal box IP67

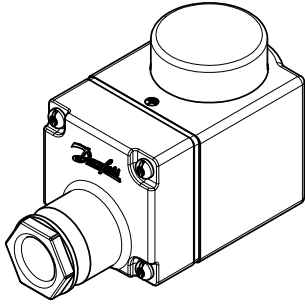
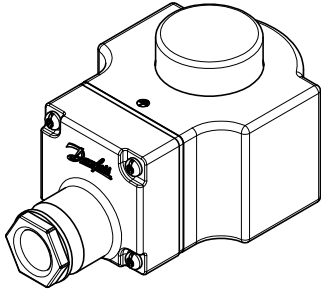


Table: Ordering for BE solenoid coil with terminal box IP67

Type	Valve type	T _{ambient} [°C]	Supply voltage [V]	Voltage variation	Frequency [Hz]	Power consumption		Code no.
						[W]	[VA]	
BE012AS	EVR 2 – EVR 40 (NC) EVR 6 – EVR 22 (NO) EVRH 10 – EVRH 40 EVRC EVRA EVRAT EVRS / EVRST EVM (NC)	-40T80	12	-15%, +10%	50	10	18	018F6706
BE024AS		-40T80	24	-15%, +10%	50	12	21	018F6707
BE042AS		-40T80	42	-15%, +10%	50	10	21	018F6708
BE048AS		-40T80	48	-15%, +10%	50	10	21	018F6709
BE115AS		-40T80	115	-15%, +10%	50	11	19	018F6711
BE230AS		-40T80	230	-15%, +10%	50	12	22	018F6701
		-40T80	220	-15%, +10%	50	11	19	
BE240AS		-40T80	240	-15%, +10%	50	11	19	018F6702
BE440CS		-40T80	380 – 400	-15%, +10%	50	13	23	018F6703
			440	-15%, +10%	60	14	24	
BE440AS		-40T80	420	-15%, +10%	50	11	21	018F6704
BE024BS		-40T80	24	-15%, +10%	60	14	25	018F6715
BE115CS		-40T80	100	-15%, +10%	50	11	19	018F6710
			115	-15%, +10%	60	13	22	
BE220BS		-40T80	220	-15%, +10%	60	13	23	018F6714
BE240CS		-40T80	200	-15%, +10%	50	11	20	018F6713
	-40T80	240	-15%, +10%	60	15	25		
	-40T50	110	±10%	50	15	28		
BE110CS	-40T50	110	±10%	60	13	22	018F6730	
	-40T50	220 – 230	±10%	50	17	31		018F6732
		220 – 230	±10%	60	14	24		

NOTE:

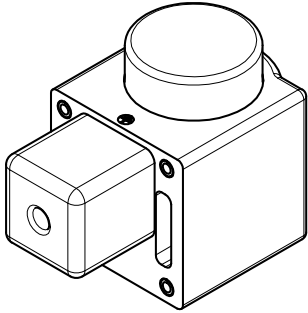
See "opening differential pressure" under "Technical data" for the valve concerned. When replacing a coil with terminal box, it is sufficient to change the coil unit itself. Therefore, order coil with DIN plugs and protective cap.

Figure: BG solenoid coil with terminal box IP67**Table: Ordering for BG solenoid coil with terminal box IP67**


Type	Valve type	T _{ambient} [°C]	Supply voltage [V]	Voltage variation	Frequency [Hz]	Power consumption		Code no.
						[W]	[VA]	
BG024AS	EVR 3 – EVR 40 EVRC EVRA EVRAT EVRS/EVRST EVM (NC/NO)	-40T80	24	-15%, +10%	50	11	21	018F6807
BG048AS		-40T80	48	-15%, +10%	50	12	26	018F6809
BG110AS		-40T80	110	-15%, +10%	50	13	25	018F6811
BG230AS		-40T80	230	-15%, +10%	50	15	28	018F6801
BG240AS		-40T80	240	-15%, +10%	50	13	25	
BG400AS		-40T80	380 / 400	-15%, +10%	50	12	26	018F6803
BG024BS		-40T80	24	-15%, +10%	60	12	26	018F6815
BG110BS		-40T80	110	-15%, +10%	60	16	29	018F6813
BG220BS		-40T80	220	-15%, +10%	60	16	29	018F6814
BG012DS		EVR 2 – 8	-40T50	12	±10%	DC	20	–
BG024DS	EVR 25 – 40 EVRA 3 – EVRA 15 (NC)	-40T50	24	±10%	DC	20	–	018F6857
BG048DS	EVRA 25 – EVRA 40 (NC)	-40T50	48	±10%	DC	20	–	018F6859
BG110DS	EVRAT 10 – EVRAT 15 (NC)	-40T50	110	±10%	DC	16	–	018F6860
BG115DS	EVRS/EVRST 3 – EVRS/EVRST 15	-40T50	115	±10%	DC	19	–	018F6861
BG220DS	EVM (NC/NO)	-40T50	220	±10%	DC	20	–	018F6851
BG012DS	EVR 10 – 22	-40T50	12	±10%	DC	20	–	018F6886
BG024DS	EVRC 15 – 20	-40T50	24	±10%	DC	20	–	018F6887
BG048DS	EVRC 20 EVRA 20	-40T50	48	±10%	DC	20	–	018F6889
BG110DS	EVRAT 20	-40T50	110	±10%	DC	20	–	018F6890
BG220DS	EVRST 20	-40T50	220	±10%	DC	20	–	018F6881

NOTE:

See "Opening differential pressure" under "Technical data" for the valve concerned. When replacing a coil with terminal box, it is sufficient to change the coil unit itself. Therefore, order coil with DIN plugs and protective cap.

Figure: BE solenoid coil with DIN spade and protection cap IP20**Table: Ordering for BE solenoid coil with DIN spade and protection cap IP20**

Type	Valve type	T _{ambient} [°C]	Supply voltage [V]	Voltage variation	Frequency [Hz]	Power consumption		Code no.
						[W]	[VA]	
BE024AS	EVR 2 – EVR 40 (NC)	-40T80	24	-15%, +10%	50	12	21	018F6182
BE230AS		-40T80	230	-15%, +10%	50	12	22	018F6176
BE240AS	EVR 6 – EVR 22 (NO)	-40T80	220	-15%, +10%	50	11	19	
BE420AS		-40T80	240	-15%, +10%	50	11	19	018F6177
BE115CS	EVRH 10 – EVRH 40	-40T80	420	-15%, +10%	50	10	21	018F6179
BE220BS		-40T80	100	-15%, +10%	50	11	19	018F6185
BE110CS	EVRAT	-40T80	115	-15%, +10%	60	13	22	
BE230CS		-40T80	220	-15%, +10%	50	13	23	018F6189
BE110CS	EVRAT	-40T50	110	±10%	50	15	28	018F6192
		-40T50	110	±10%	60	13	22	
BE230CS	EVM (NC)	-40T50	220 – 230	±10%	50	17	31	018F6193
		-40T50	220 – 230	±10%	60	14	24	

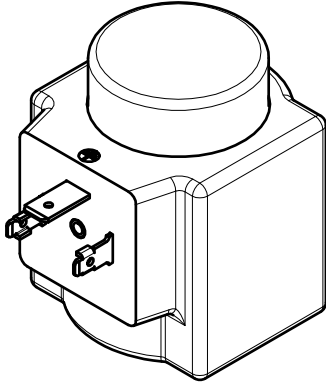
Figure: BB solenoid coil with DIN spade^{*)}**Table: Ordering for BB solenoid coil with DIN spade^{*)}**

Type	Valve type	T _{ambient} [°C]	Supply voltage [V]	Voltage variation	Frequency [Hz]	Power consumption		Code no.
						[W]	[VA]	
BB024AS	EVR 2 – EVR 40	-40T80	24	-15%, +10%	50	11	19	018F7358
BB115AS	(NC)	-40T80	115	-15%, +10%	50	11	19	018F7361
BB230AS	EVR 6 – EVR 22	-40T80	220 – 230	-15%, +10%	50	11	19	018F7351
BB240AS	(NO)	-40T80	240	-15%, +10%	50	11	19	018F7352
BB024BS	EVRH 10 – EVRH	-40T80	24	-15%, +10%	60	14	23	018F7365
BB110CS	40	-40T50	110	±10%	50	15	28	018F7360
	EVRC		110	±10%	60	13	22	
	EVRA							
BB230CS	EVRAT	-40T50	220 – 230	±10%	50	16	31	018F7363
	EVRS/EVRST EVM (NC)		220 – 230	±10%	60	13	24	

^{*)} Can only be used with DIN plug


NOTE:

See "Opening differential pressure" under "Technical data" for the valve concerned. When replacing a coil with terminal box, it is sufficient to change the coil unit itself. Therefore, order coil with DIN plugs and protective cap.

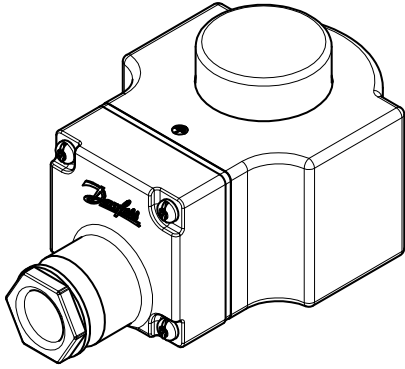Figure: BN special solenoid coil with terminal box IP67**Table: Ordering for BN special solenoid coil with terminal box IP67**

Type	Valve type	T _{ambient} [°C]	Supply voltage [V]	Voltage variation	Frequency [Hz]	Power consumption		Code no. ⁽¹⁾
						[W]	[VA]	
BN024AS	EVR 2 – EVR 40 (NC) EVR 6 – EVR 22 (NO) EVRH 4 – EVRH 40 EVRC/EVRA/ EVRAT/ EVR5/ EVRST/EVM (NC)	-40T50	24	-15%, +10%	50	24	49	018F6904
BN024BS	–	-40T50	24	-15%, +10%	60	22	42	018F6906
BN230AS	–	-40T50	230	-15%, +10%	50	19	43	018F6905

⁽¹⁾ Recommended use for EVRH with high MOPD (38 bar).

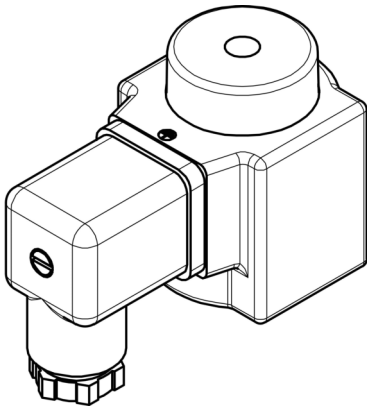










Figure: Coil with DIN plug**Table: Ordering for coil with DIN plug**

Type	Description	Code no.
Terminal box	With built-in light emitting indicator diode for solenoid valves	018Z0089
DIN plug	Enclosure IP65, EN 175301-803A	042N1256

Product details

General data

Table: Solenoid coil type

Data	Solenoid coil type										
	1 m 3-core cable	Terminal box			DIN spade and protection cap	DIN spade	1 m 3-core cable	Terminal box	DIN spade and protection cap	DIN spade	Terminal box IP67
	BF	BE	BG	BG	BE	BB	BF	BE	BE	BB	BN
											
Enclosure	IP67	IP67	IP67	IP67	IP20	IP00	IP67	IP67	IP20	IP00	IP67
Pollution degree	4	4	4	4	3	3	4	4	3	3	3
Conductor area [mm ²]	0.75	0.75 – 1.5	0.75 – 1.5	0.75 – 1.5	0.75 – 1.5	0.75 – 1.5	0.75	0.75 – 1.5	0.75 – 1.5	0.75 – 1.5	0.75 – 1.5
Cable size [mm]	Ø6.6	Ø6.0 – Ø11	Ø6.0 – Ø11	Ø6.0 – Ø11	Ø6.0 – Ø11	Ø6.0 – Ø11	Ø6.6	Ø6.0 – Ø11	Ø6.0 – Ø11	Ø6.0 – Ø11	Ø6.0 – Ø11
Rated impulse voltage [kV], if altitude < 4000 m	4	4	4	4	4	4	4	4	4	4	4
Humidity [R.H.]	0 – 100%	0 – 100%	0 – 100%	0 – 100%	0 – 97% non-condensation condition	0 – 97% non-condensation condition	0 – 100%	0 – 100%	0 – 97% non-condensation condition	0 – 97% non-condensation condition	0 – 100%
Type of control	1	1	1	1	1	1	1	1	1	1	1
Safety classification	Class I	Class I	Class I	Class I	Class I	Class I	Class I	Class I	Class I	Class I	Class I
Max. altitude above sea level [m]	4000	4000	4000	4000	4000	4000	4000	4000	4000	4000	4000

NOTE: For DIN plug, impulse withstand voltage is 3.1 kV for 2000 m < Altitude < 4000 m

Dimensions

Figure: Terminal box 10 W, Weight 0.29 Kg

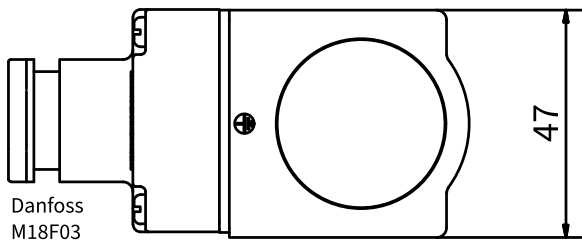
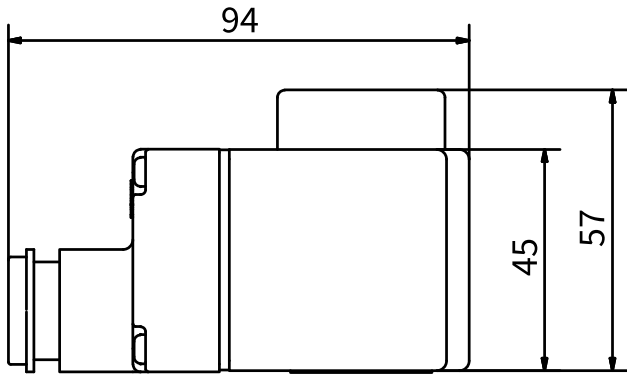


Figure: Cable 10 W, Weight 0.29 Kg

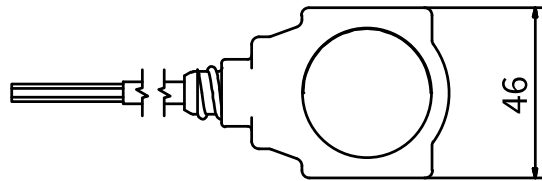
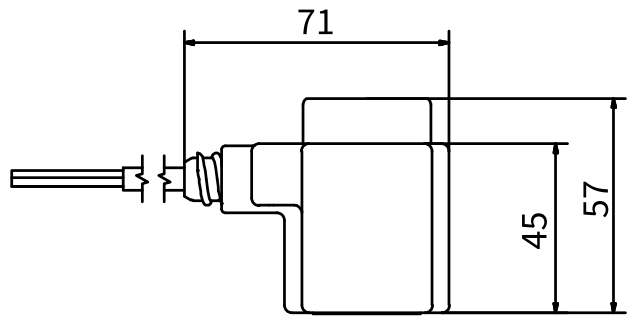


Figure: DIN socket 10 W, Weight 0.24 Kg




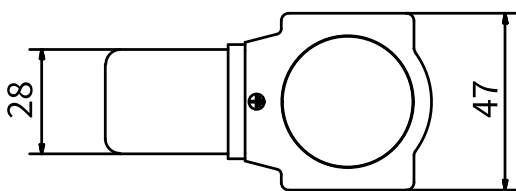


Figure: Terminal box 12 - 20 W, Weight 0.55 Kg

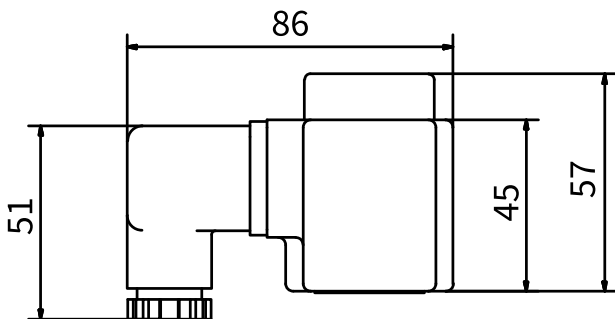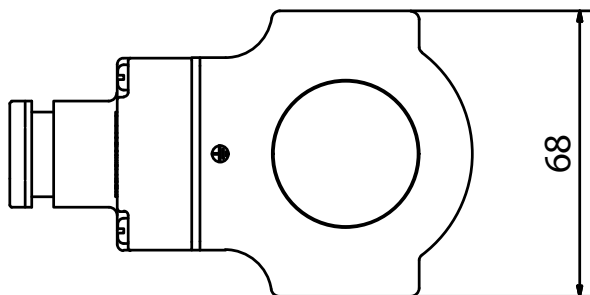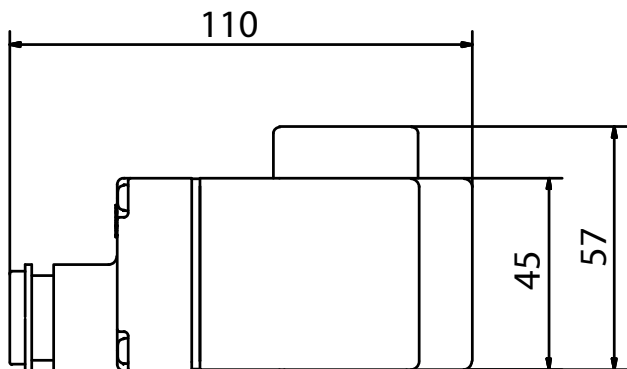

Connections

3-core cable

The external thread in the screwed cable entry suits flexible steel hose or corresponding cable protection (3 x 0.75 mm²).

Terminal box

Leads are connected to terminal screws in the terminal box. The box is fitted with a Pg 13.5 screwed entry for 6 – 14 mm cable. Max. lead cross section: 2.5 mm².

DIN plugs

The three pins on the coil can be fitted with spade tabs, 6.3 mm wide (to EN175301-803A). The two current carrying pins can also be fitted with spade tabs, 4.8 mm wide. Max. lead cross section: 1.5 mm². Use of the protective cap supplied will prevent inadvertent contact with live parts.

DIN socket

(To EN175301-803A) Leads are connected in the socket. The socket is fitted with a Pg 11 screwed entry for 6 – 12 mm.

Certificates, declarations and approvals

The list contains all certificates, declarations, and approvals for this product type. Individual code number may have some or all of these approvals, and certain local approvals may not appear on the list.

When you click on the link you will be directed to the latest version of the 'Declaration of Conformity'. Products developed and sold before this date of issue conform to the directives/standards in force at the time of their sale.

Approval type	Title	Certification body	Approval topic
Export Control Declaration	Solenoid Coils	Danfoss	
EU Declaration	Danfoss EU 033F0688.AK	Danfoss	EMC, LVD
UA Declaration	Danfoss UA 8505	Danfoss	UA RoHS
Mechanical Safety Certificate	UL MH29671	UL - Underwriters Laboratories inc.	
Electrical Safety Certificate	UL E348648	UL - Underwriters Laboratories inc.	

Contact details

Online support

Danfoss offers a wide range of support along with our products, including digital information, software, mobile apps and expert guidance. See the possibilities below.



The Danfoss Design center

Discover the Design Center, our advanced digital platform that streamlines product selection. With integrated tools and enhanced type pages, it's simpler than ever to access product information and documentation, and to select the right products. Check the availability of Danfoss products at partner locations and enjoy seamless transitions from selection to purchase with our basket-to-basket functionality. Whether you're buying from our distributors or directly from the Product Store, the Design Center simplifies your experience. Learn more at: designcenter.danfoss.com.



The Danfoss product store

The Danfoss Product Store is a one-stop shop available 24/7 for our customers, no matter where you are in the world or what area of industry you work in. Browse our catalog, check product details and documentation, view your prices and product availability, and quickly finalize your purchase. Start browsing at: store.danfoss.com.



Danfoss Partner Portal/Product Data tool

Designed to support you with easy access to product data extracts, essential resources, tools, and information. The Partner Portal provides a centralized hub for product documentation, training materials, marketing assets, and technical support, ensuring you have everything you need to succeed and grow your business with Danfoss. The Partner Portal is available 24/7 at: partner.danfoss.com and is ready to support your business.



Find technical documentation

Find technical documentation you need to get your project up running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more. Start searching now at: documentation.danfoss.com.



Danfoss Learning

Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications industry topics, and trends that will help you do your job better. Find your local Danfoss website here: learning.danfoss.com.



Get local information and support

Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert - all in your own language. Find your local Danfoss website here: danfoss.com.

Danfoss A/S

Climate Solutions . danfoss.com . +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues description, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the products. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.
